



THERMO KING


Parts Manual

PRECEDENT S-600

TK 55522-2-PM (Rev. 3.0)

PRECEDENT S-600

TK 55522-3.0

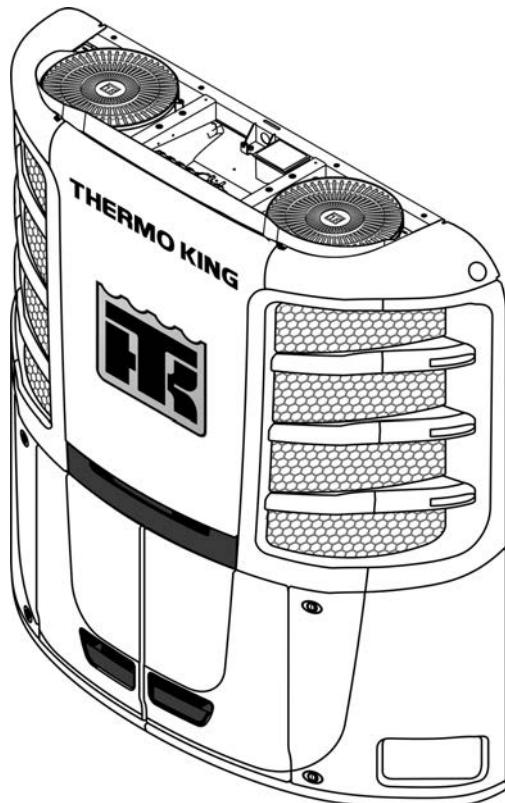

Printed: February 27, 2014

Copyright © 2012 - Thermo King Corp. - Minneapolis, MN U.S.A.

Printed in U.S.A.

General Information

Tables of Contents

This Parts Manual contains a numerical table of contents listing each assembly name, its associated Grid number and page number. The numerical table of contents is arranged numerically by Grid number. There are references in a parts list referring to other Grid numbers; the numerical table of contents is arranged to facilitate finding the referenced illustrations.

Assemblies and Subassemblies

When parts are indented in the description list, they are preceded with an asterisk (*). This indicates that the part(s) is available separately or included in an assembly.

GRID NO. 67D6 SWITCH PANEL ASSEMBLY

REF	PART#	DESCRIPTION	QTY
	45-1239	PANEL - assy, switch	1
1	99-1960	*PANEL	1
	99-6280	**NAMEPLATE - panel	1
2	33-743	*GASKET	1

For example: The Switch Panel Nameplate (99-6280) is available separately, available as part of the Switch Panel (99-1960) and with the Panel Assembly (45-1239).

ABBREVIATIONS: *The following abbreviations appear in Parts Manuals.*

A	AC alternating current	E	exp expansion	P	pcb printed circuit board
	A/R as required		ext external		pkg package
	accum accumulator	F	F Fahrenheit		ph phase
	adj adjusting		fill fillister		pos positive
	al aluminum		fi fuel injection		psi pounds per square
	alt alternator		fl flare		inch
	A or amp ampere		fpt female pipe thread	R	rad radiator
	assy assembly		ft feet		rcvr receiver
B	bd board		ftg fitting		ref reference
	brg bearing	G	gal gallon		reg regulator
	brkr breaker	H	hex hexagon		req required
	brkt bracket		hh hexagon head		rpm revolutions per
C	C Celsius		hd head		minute
	cw clockwise		hp horsepower	S	sec second
	ccw counter-clockwise		hsg housing		sld solder
	cam camshaft	I	id inside diameter		soc hd socket head
	cm centimeters		in inch (2.54 cm)		sol solenoid
	compr compressor		incl includes		spl special
	cond condenser		inj injection		sq square
	conn connecting,		int internal		ss stainless steel
	connector		int th internal tooth		std standard
	cyl cylinder	K	kW kiloWatt		stl steel
D	def defrost	L	L Liter (Litre)		suct suction
	deg degree		liq liquid		sw switch
	dehyd dehydrator		lg long	T	term terminal
	dia diameter	M	M Meter		temp temperature
	DC direct current		mm millimeter		thk thick
	disch discharge		mpt male pipe thread		TSA Transport Solutions
	diff differential		mod modulating		Americas
E	EMI Extended	N	neg negative	U	us undersize
	Maintenance Interval		No number	V	vib vibrasorber
	EMEIA Europe, Middle East,		NS not supplied		V Volt
	India and Africa		NSS not sold separately	W	W watt
	eng engine		os oversized		w/ with
	exch exchanger		od outside diameter		w/o without

Contents

Title	Grid	Page
PRECEDENT S-600 REFERENCE SHEET.....	18U34	6
COMPRESSOR GASKET SET (30-243, X426 & X430).....	131F1	80
Cargo Watch HARNESSES AND SENSORS.....	189C0	146
COMPRESSOR OIL FILTER KIT (20-184).....	212B7	92
COMPRESSOR - X430 LS C5.....	223C5	74
STATUS/TEMPERATURE/FUEL LEVEL DISPLAYS.....	226E6	142
COMPRESSOR OIL BOTTLE.....	242D0	94
FLUSH MOUNT CONTROLLER.....	256H4	148
AIR CLEANER GROUP S-600/700.....	260E1	38
FUEL FILTER & HOSES S-600/700.....	260E2	32
MUFFLER GROUP.....	260E3	40
ENGINE GASKETS (TK488CR).....	260E5	28
CONDENSER FANS GROUP.....	261A0	60
COMPRESSOR GROUP - X430 (LS C5).....	261A9	72
CONTROL BOX - ECU S-600/S-700.....	261B0	110
EVAPORATOR AND PANELS.....	261B1	170
REFRIGERATION EVAPORATOR.....	261B2	70
CONDENSER COIL MOUNTING.....	261B3	96
CONDENSER FRAME & EVAPORATOR HOUSING.....	261B6	158
EVAPORATOR BLOWER GROUP.....	261B7	64
CONTROL BOX - BLOWER & FANS.....	261B8	106
COOLING SYSTEM.....	261B9	36
CONTROL BOX S-600.....	261C1	102
DRIVE GROUP.....	261C3	46
ENGINE MOUNT.....	261C4	44
BELT GROUP.....	261C5	48
GENERATOR GROUP.....	261C6	56
BATTERY GROUP, S-600.....	261C8	130
FUEL TANK (22 IN DIAMETER, 50 GALLON ALUMINUM).....	261C9	174
BELT GROUP (Smart Power, compressor end).....	261D0	52
GRILLE GROUP.....	261D1	164
PANEL GROUP.....	261D5	168
NAMEPLATES, S-600/S-700.....	261D6	186
BATTERY CHARGER, S-600/S-700 (OPTIONAL).....	261D7	134
EVAPORATOR HEATERS.....	261D8	132
STANDBY MOTOR (Smart Power).....	261D9	58
HARNESS - FANS & BLOWER.....	261E0	122
BELT GROUP (Smart Power / battery charger, coolant pump end).....	261E1	54
POWER RECEPTACLE BOX.....	261E2	114
HIGH VOLTAGE BOX.....	261E3	108
HARNESS - CONTROL 30.....	261F1	124
HARNESS - GENERATOR.....	261F4	128
RECEIVER TANK.....	261G1	98
FUEL HEATER & BLOCK HEATER (OPTIONAL).....	261G2	138
MAIN HARNESS S-600/S-700 (control box).....	261G4	116
MAIN HARNESS S-600/S-700 (outside control box).....	261G5	118
HARNESS - CONTROL 50.....	261G6	126

Contents

Title	Grid	Page
REB ANTENNA & BATTERY.....	261G7	144
3-WAY VALVE ASSEMBLY.....	261H1	100
TRANSFORMER BOX.....	261H3	112
EVAPORATOR BULKHEAD (OPTIONAL).....	261H4	156
AIR CHUTE (OPTIONAL).....	264H3	154
AIR EXCHANGER (OPTIONAL).....	267F0	152
FUEL TANK (22 IN DIAMETER, 75, 110 & 120 GALLON ALUMINUM).....	267F7	178
FUEL TANK (18 IN DIAMETER, 30 GALLON ALUMINUM).....	267F8	182
HARNESS - BATTERY CHARGER (OPTIONAL).....	267F9	136
DOOR SWITCH TRAILER (CargoLink).....	267G9	140
FUEL TANK (120/156 GALLON ALUMINUM).....	268D3	180
HARNESS - HMI.....	270B7	120
ALTERNATOR - 120A , S-600 (OPTIONAL).....	270B8	150
FILTER KIT, TRAILER (Precedent S-600/C-600/S-700).....	272D5	30
TOP DOOR.....	272D7	162
COMPRESSOR GASKET SET (30-326, X430P).....	272E0	90
COMPRESSOR - X430P.....	272E5	84
DOORS, GRILLES & PANELS.....	272E8	160
FRONT DOORS.....	272E9	166
ENGINE ASSEMBLY (TK488CR).....	272F1	10
CYLINDER HEAD & VALVE COVER (TK488CR).....	272F2	12
FLYWHEEL HOUSING & OIL SUMP (TK488CR).....	272F3	14
OIL FILTER & GEAR CASE (TK488CR).....	272F4	16
INTAKE SYSTEM (TK488CR).....	272F5	18
EXHAUST SYSTEM (TK488CR).....	272F6	20
COOLING SYSTEM (TK488CR).....	272F7	22
FUEL INJECTION SYSTEM (TK488CR).....	272F8	24
STARTER & ELECTRICAL COMPONENTS (TK488CR).....	272F9	26
MUFFLER GROUP.....	272G6	42
REFRIGERATION CONDENSER.....	272H6	66
COMPRESSOR GROUP - X430P.....	272H7	82
SOLENOID AND TUBING.....	275B8	68


Contents

Title	Grid	Page
-------	------	------

18U34 

PRECEDENT S-600 REFERENCE SHEET

Revised
11/21/13

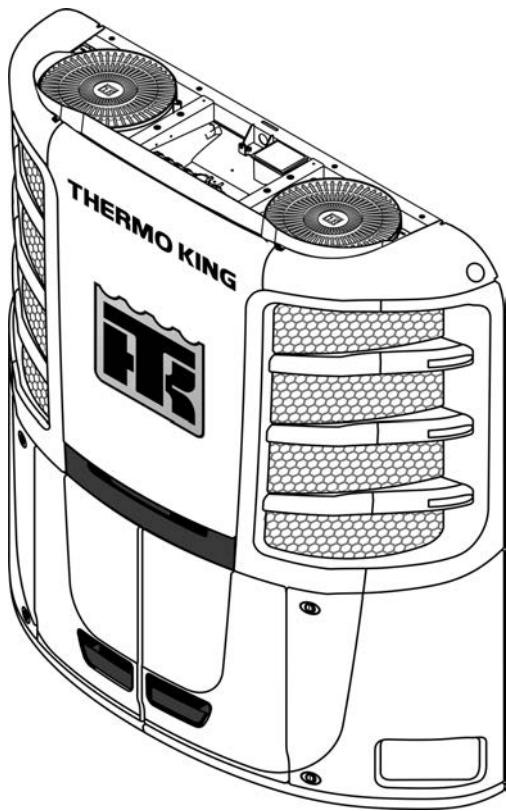

PRECEDENT S-600 REFERENCE SHEET

Revised
11/21/13




18U34

B/M	DESCRIPTION	DATE
902246	System PRECEDENT S-600	11/13
070114	PRECEDENT S-600	5/13
070019	LED Package	9/12
070031	Fuel Tank 50 gallon (w/ anti siphon w/ USFLS)	11/12
070033	Fuel Tank 50 gallon (heat chamber w/ USFLS)	11/12
070034	Fuel Tank 50 gallon (polished w/ USFLS)	11/12
070050	Evaporator Heaters	9/12
070075	Smart Power Package 12HP-230V & Battery Charger	11/13
070076	Smart Power Package 12HP-460V & Battery Charger	3/13
070077	Smart Power Package 19HP-460V & Battery Charger	3/13
070113	Alternator 65 amp	11/12
070117	Smart Power Package	11/12
070118	Smart Power Package	11/12
070119	Smart Power Package	11/12
070123	Chrome Doors & Grilles	3/13
070142	Fuel Heater	11/12
070143	Block Heater	10/12
070145	Smart Power Package	10/12
070160	Rear Controller Kit	11/12
070162	Smart Power Package	9/12
070166	Remote Rear Receptacle	5/13
070168	Remote Rear Receptacle Pin & Sleeve 12HP 460V	11/12
070169	Pin and Sleeve Smart Power 12HP-460V	11/12
070177	Arctic Package	11/12
070179	Battery Cable Smooth Post	11/12
070199	REB iBox + 3rd Party 2-Way	11/12
070201	REB iBox + T-Mobile	11/12
070202	REB iBox + cellular + WIFI	11/12
070203	REB GPS + WIFI + T-Mobile	11/12
070204	REB GPS + WIFI + cellular	11/12
070205	Fuel Tank 30 gallon (w/ USFLS)	3/13
070206	Fuel Tank 75 gallon (w/ USFLS)	3/13
070207	Fuel Tank 110 gallon (w/ USFLS)	3/13

18U34 

PRECEDENT S-600 REFERENCE SHEET

Revised
11/21/13

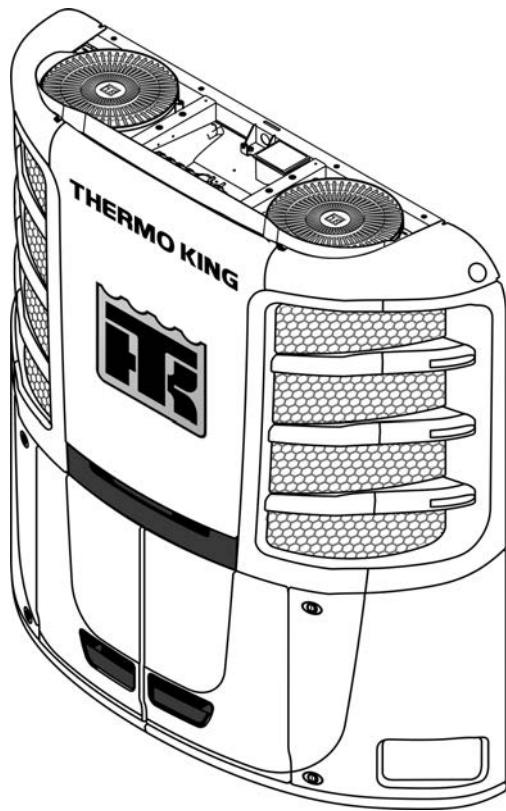

PRECEDENT S-600 REFERENCE SHEET

Revised
11/21/13




18U34

B/M	DESCRIPTION	DATE
070208	Fuel Tank 120 gallon (w/ USFLS)	3/13
070246	REB iBox + GPS + cellular	11/12
070243	Remote Light Status	10/12
070258	Smart Power Prep Kit 65 amp alt	10/12
070279	Fuel Tank 30 gallon (w/ USFLS)	3/13
070282	Fuel Gauge (twin site, optional)	3/13
070287	HMI Cover (optional)	3/13
070313	Fuel Tank 50 gallon (w/ USFLS & four ports)	3/13
070314	Evaporator Bulkhead	3/13
069069	Oil Drain, Quick Connect - ESOC	10/12
069117	CAN Harness	10/12
069170	CargoLink Wireless door switch 1 sw	10/12
069172	CargoLink Wireless door switch 3 sw	10/12
700248	Switch Single Door	10/12
700250	Switch Dual Doors Single Zone	10/12
702131	Remote Light Status - Fuel Combo	10/12
702390	Remote Light Status - Triple Combo	10/12
720491	HMI CargoWatch Sensor 10 ft	10/12
720492	HMI CargoWatch Sensor 20 ft	11/12
720493	HMI CargoWatch Sensor 40 ft	11/12
720494	HMI CargoWatch Sensor 60 ft	11/12
720495	HMI CargoWatch Sensor 80 ft	11/12
702575	HMI CargoWatch Sensor 100 ft	3/13

272F1 

ENGINE ASSEMBLY (TK488CR)

Revised
12/24/13

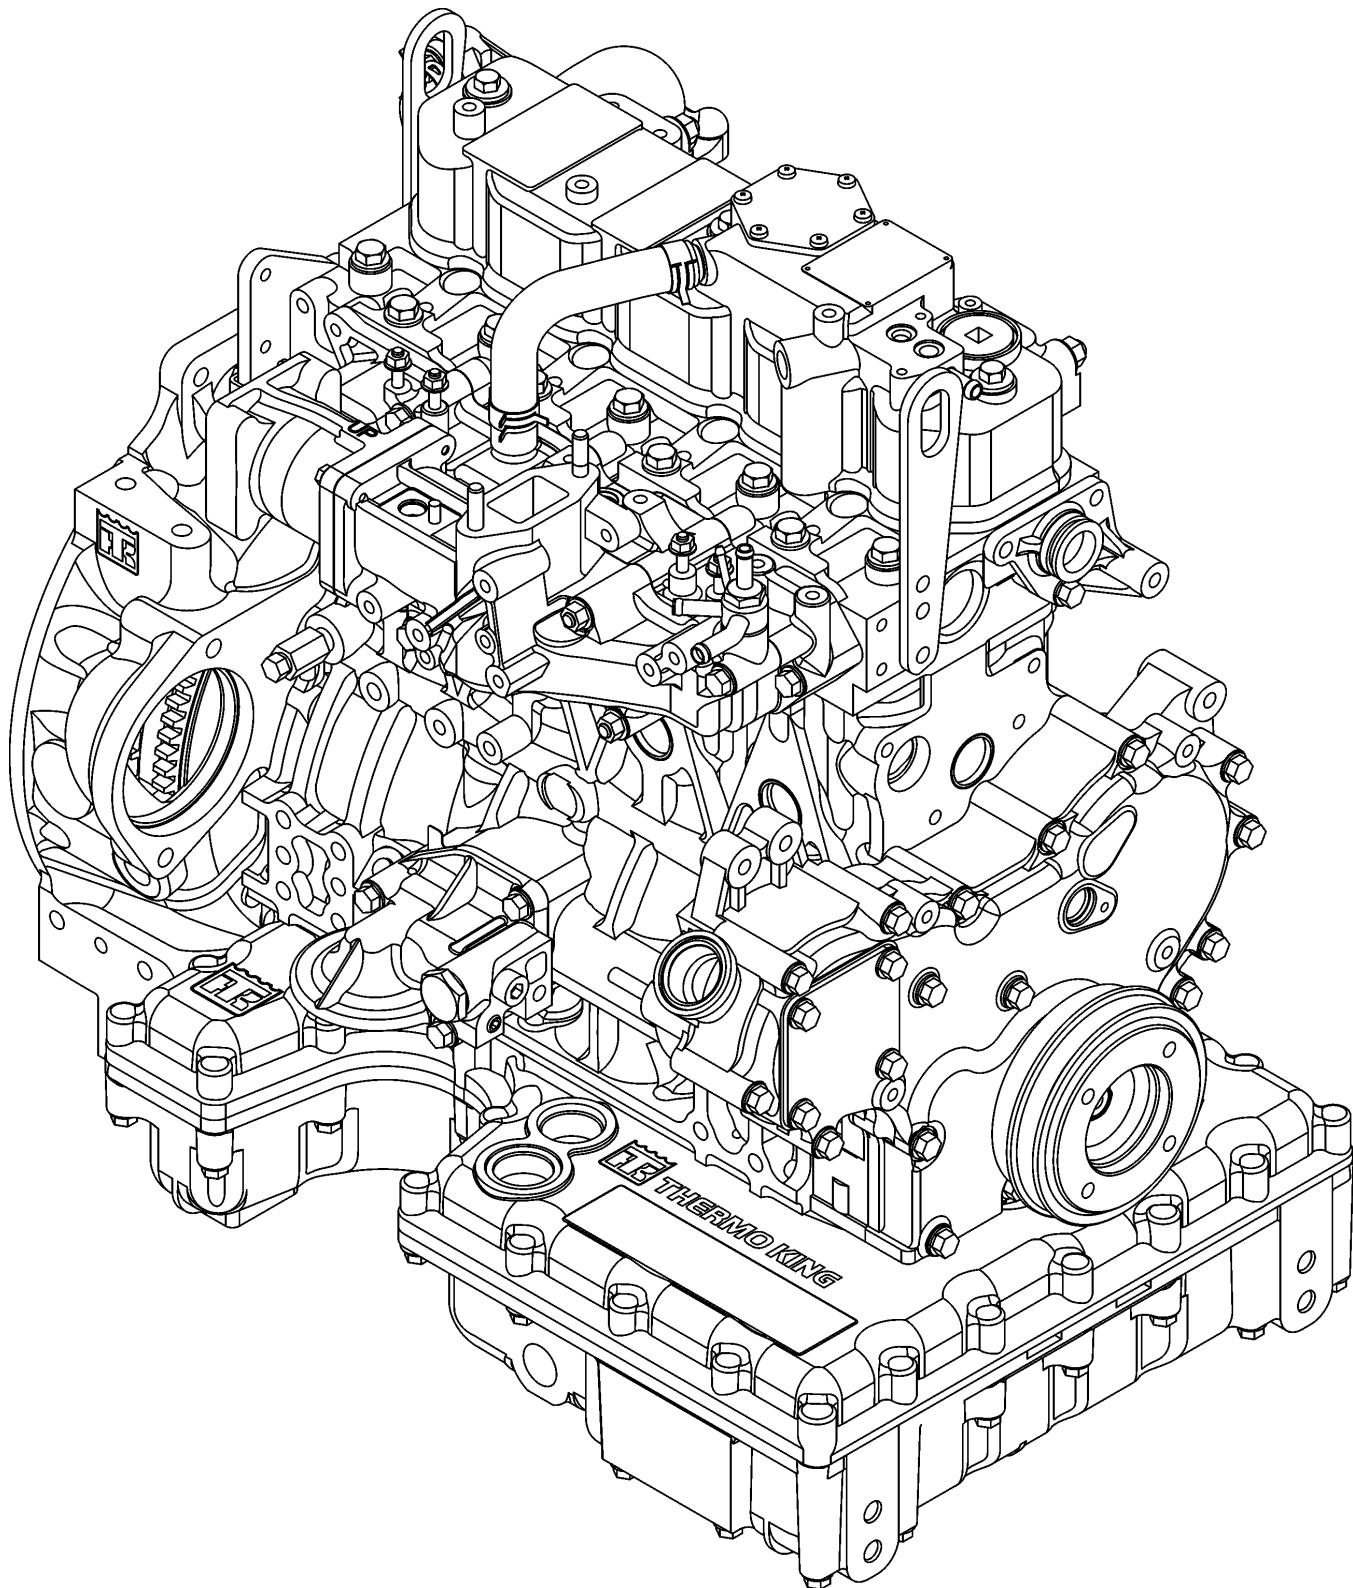


Revised
12/24/13

ENGINE ASSEMBLY (TK488CR)



272F1

REF	PART NO.	DESCRIPTION	QTY
101-382	ENGINE - TK488CR S-600		1
101-407	ENGINE - TK488CR S-700		1

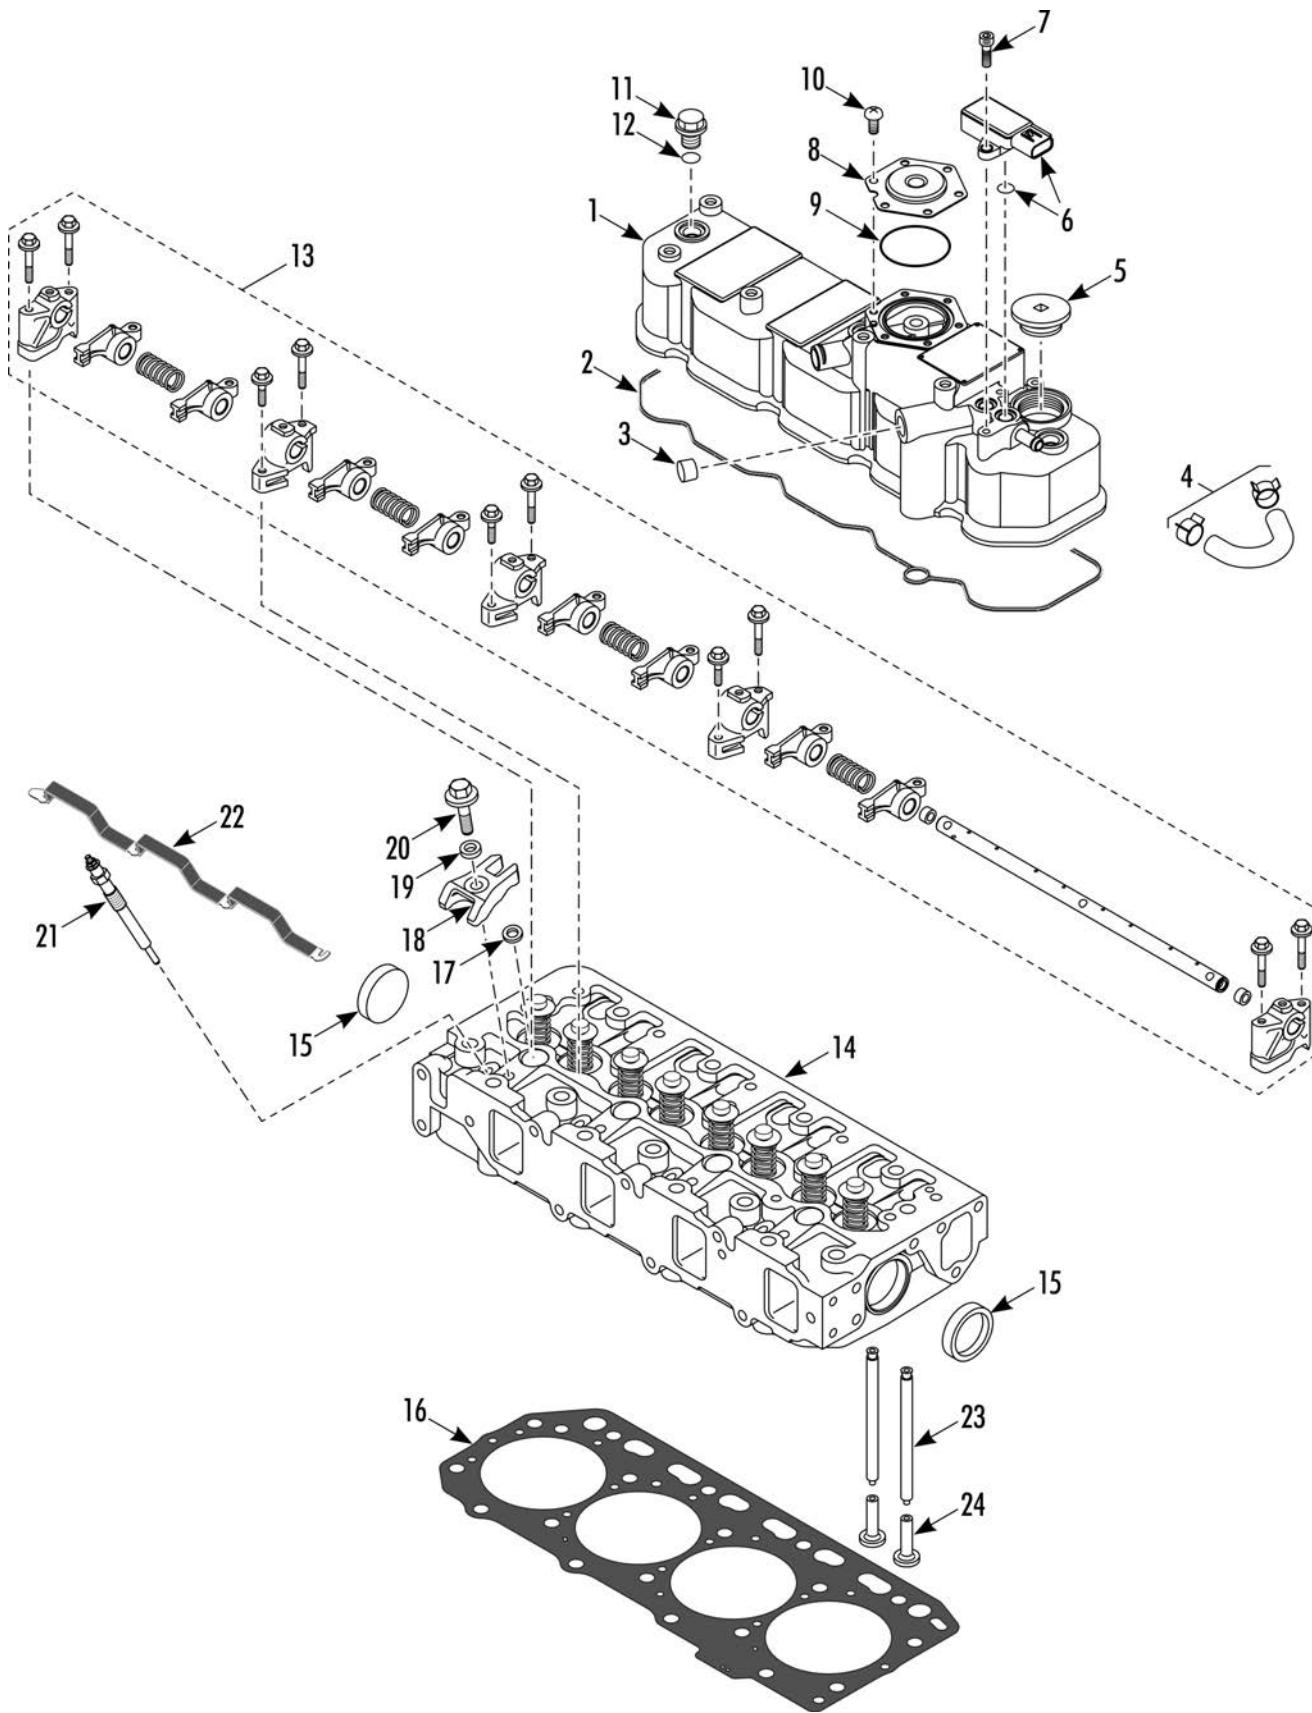272F2**CYLINDER HEAD & VALVE COVER (TK488CR)**Revised
01/09/14

CYLINDER HEAD & VALVE COVER (TK488CR)

Revised
01/09/14




272F2

REF	PART NO.	DESCRIPTION	QTY
1	13-1990	COVER - valve	1
2	33-4958	*GASKET - valve cover	1
3	11-6624	*PLUG	1
4	13-1261	*HOSE - exhaust (manifold to catalytic converter)	1
5	11-8923	*PLUG	1
6	42-533	*SENSOR - pressure (inc o-ring)	1
7	55-9223	*SCREW - sensor	2
8	NSS	*PLATE - breather	1
9	33-2762	*O-RING	1
10	51-598	*SCREW - plate	6
11	11-5103	KNOB - valve cover	3
12	33-3512	O-RING	3
13	13-332	SHAFT ASSEMBLY (rocker arm)	1
14	12-1043	HEAD - cylinder (inc valves & springs)	1
15	11-6567	*PLUG - frost (40 mm)	2
16	33-5056	GASKET - head	1
17	33-4966	GASKET - injector	4
18	13-1266	RETAINER - injector	4
19	51-1151	WASHER	4
20	55-6191	SCREW - injector	4
21	42-543	GLOW PLUG	4
22	42-532	CONNECTOR - glow plug	1
23	13-2023	ROD - push	8
24	NSS	TAPPET	8

272F3  THERMO KING

FLYWHEEL HOUSING & OIL SUMP (TK488CR)

Revised
02/05/14

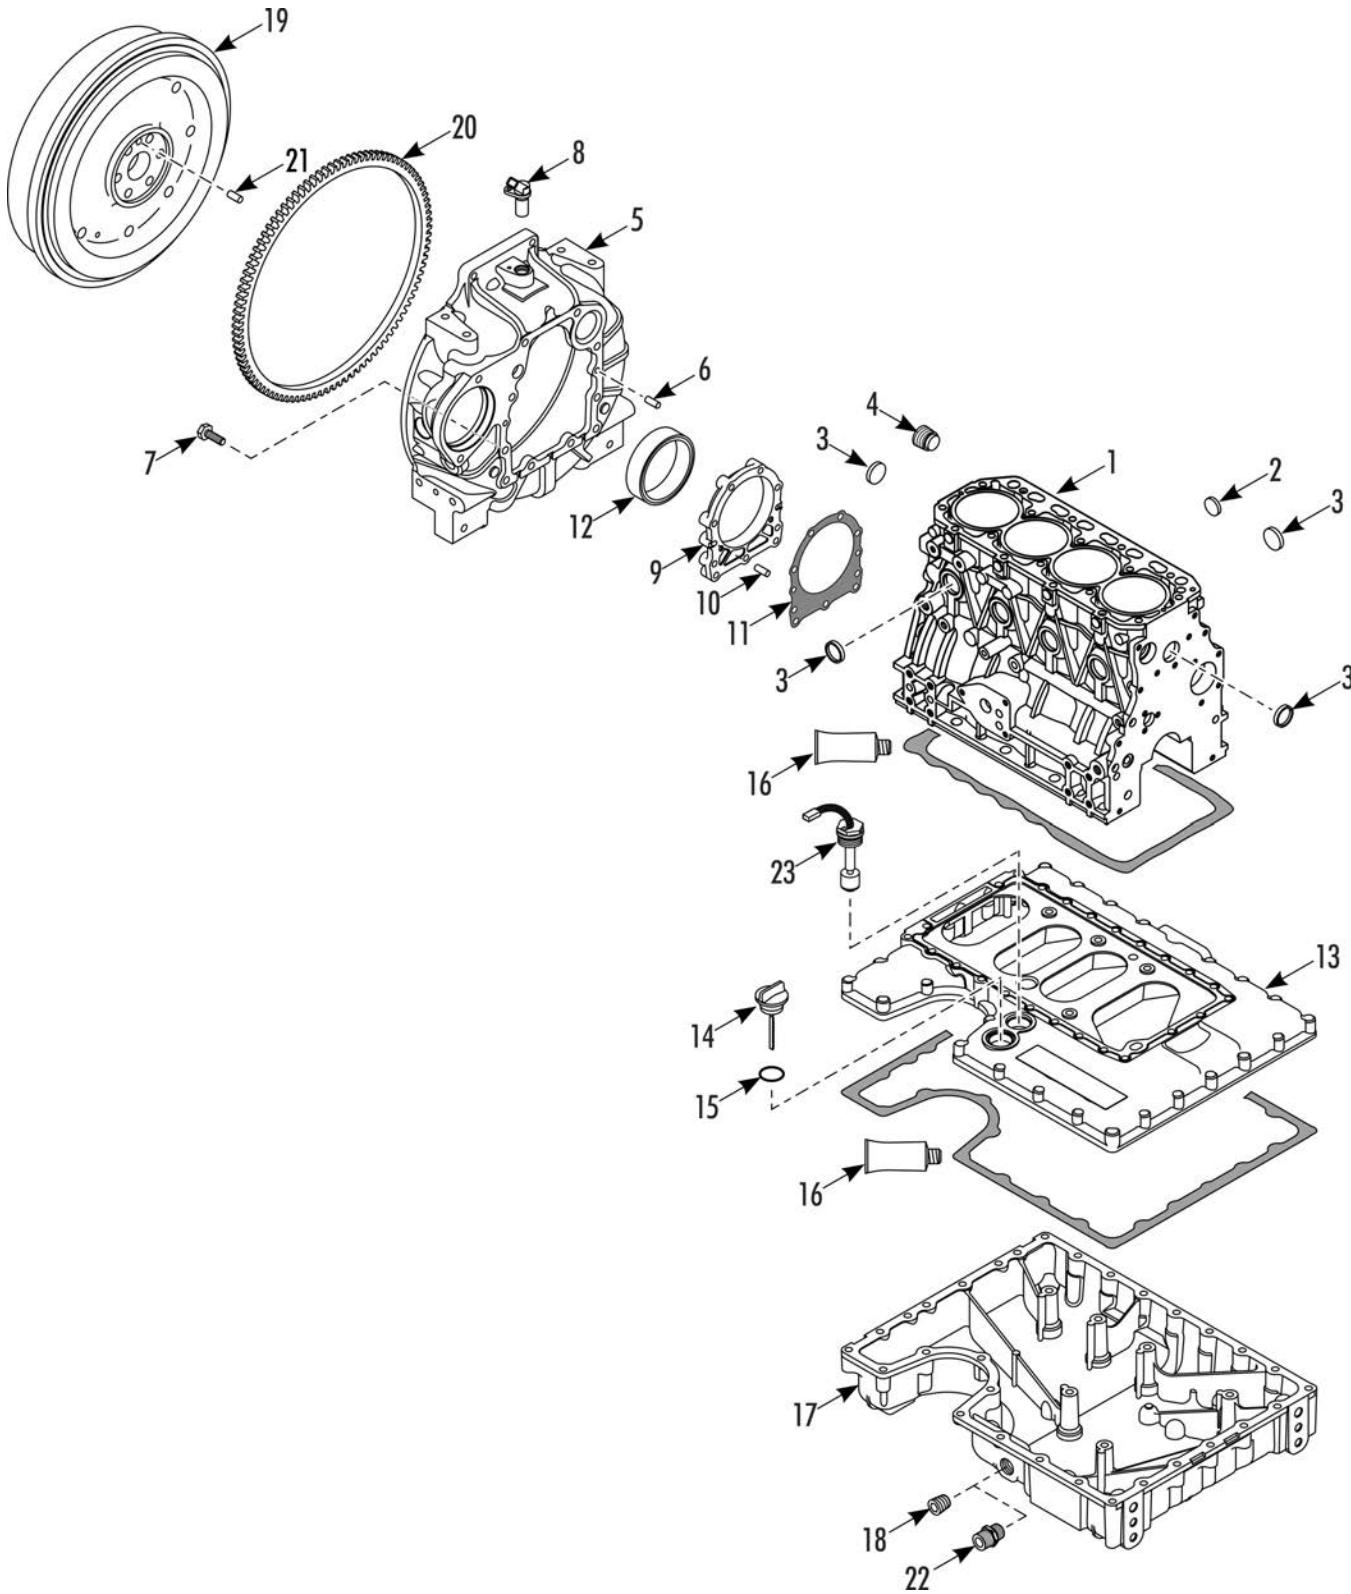


FLYWHEEL HOUSING & OIL SUMP (TK488CR)

Revised
02/05/14



272F3

REF	PART NO.	DESCRIPTION	QTY
1	NSS	BLOCK ASSY, CYLINDER	1
2	11-5499	PLUG - frost (30 mm)	8
3	51-1188	PLUG - frost (50 mm)	4
4	55-6229	PLUG	1
5	12-1040	HOUSING - flywheel	1
6	55-5816	PIN - housing	2
7	55-6537	SCREW - housing (25mm)	6
	55-8856	SCREW - housing (30 mm)	4
8	42-530	SENSOR - flywheel, rpm	1
	55-9223	SCREW - sensor	1
9	11-8924	CASE - oil seal	1
	51-1149	SCREW - case (30 mm)	6
	55-6191	SCREW - case (35 mm)	3
10	55-5816	PIN - dowel	2
11	33-2969	GASKET - case	1
12	33-2974	SEAL - oil (rear)	1
13	12-1041	OIL PAN (top)	1
	55-5809	SCREW - oil base (45 mm)	19
14	13-1270	DIPSTICK - oil	1
15	33-4090	O-RING	1
16	203-348	GASKET - liquid	A/R
17	12-1042	OIL PAN (bottom)	1
18	55-8437	*PLUG - oil drain	1
	55-6246	SCREW - oil base (25mm)	2
	55-5809	SCREW - oil base (45 mm)	17
	55-6237	SCREW - oil base (85 mm)	13
	51-1150	SCREW - oil base (120 mm)	4
19	12-1034	FLYWHEEL ASSY	1
20	13-1138	*GEAR	1
	55-8864	SCREW - flywheel	6
21	55-5816	PIN	1
22	13-1063	FITTING - oil drain w/cap	1
23	41-4470	SWITCH - oil level	1

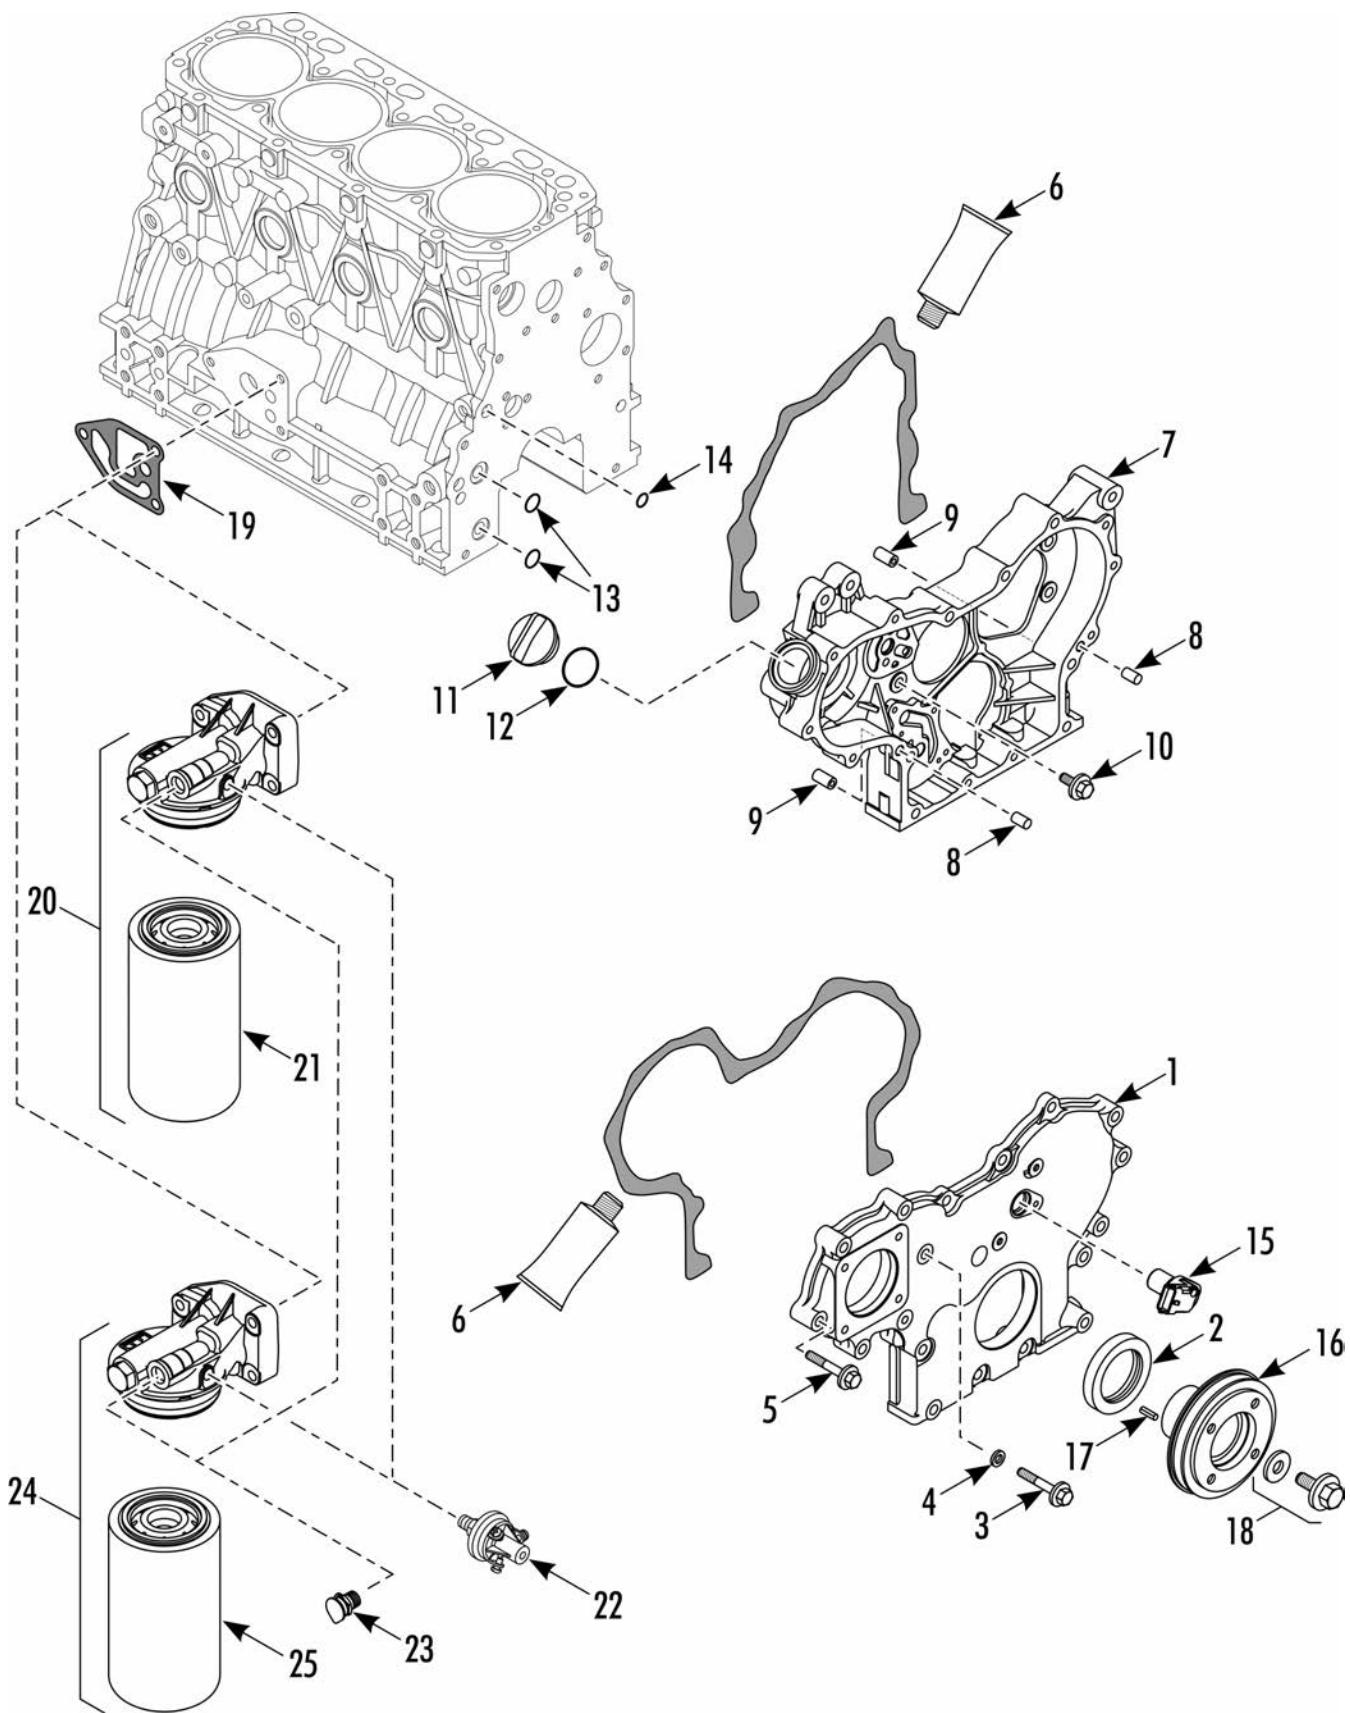272F4**OIL FILTER & GEAR CASE (TK488CR)**Revised
02/26/14

OIL FILTER & GEAR CASE (TK488CR)

Revised
02/26/14




272F4

REF	PART NO.	DESCRIPTION	QTY
1	13-1989	COVER - gear case (includes seal)	1
2	33-4088	*SEAL - oil	1
3	55-6191	SCREW - case (35 mm)	1
4	55-4622	WASHER - seal	1
5	55-6191	SCREW - case (35 mm)	1
	55-5772	SCREW - case (40 mm)	9
	55-6248	SCREW - case (60 mm)	3
	55-6237	SCREW - case (85 mm)	4
6	203-348	GASKET - liquid	A/R
7	NSS	CASE - gear	1
8	55-5816	PIN - dowel	2
9	55-6234	PIN - dowel	2
10	55-8441	SCREW - case (16 mm)	3
11	11-5091	CAP - oil fill	1
12	33-1954	O-RING - cap	1
13	33-3821	O-RING - gear case (16 mm)	2
14	33-3512	O-RING - gear case (20 mm)	1
15	42-535	SENSOR - camshaft	1
	55-9223	SCREW - sensor	1
16	13-353	PULLEY - crankshaft	1
17	11-6719	KEY	1
18	55-6250	SCREW - pulley	1
	55-6249	WASHER	1
19	33-2931	GASKET - oil filter head	1
20	13-2072	FILTER & HEAD ASSEMBLY (EMI 3000)	1
21	11-9959	*FILTER - oil (EMI 3000, see 272D5)	1
	55-8857	SCREW - filter head	3
22	41-7063	SWITCH - oil pressure	1
23	11-9447	FITTING - oil inlet (ESOC)	1
24	13-2074	FILTER & HEAD ASSEMBLY (severe duty)	1
25	11-9961	*FILTER - oil (severe duty, see 272D5)	1

272F5  THERMO KING

INTAKE SYSTEM (TK488CR)

Revised
01/23/14

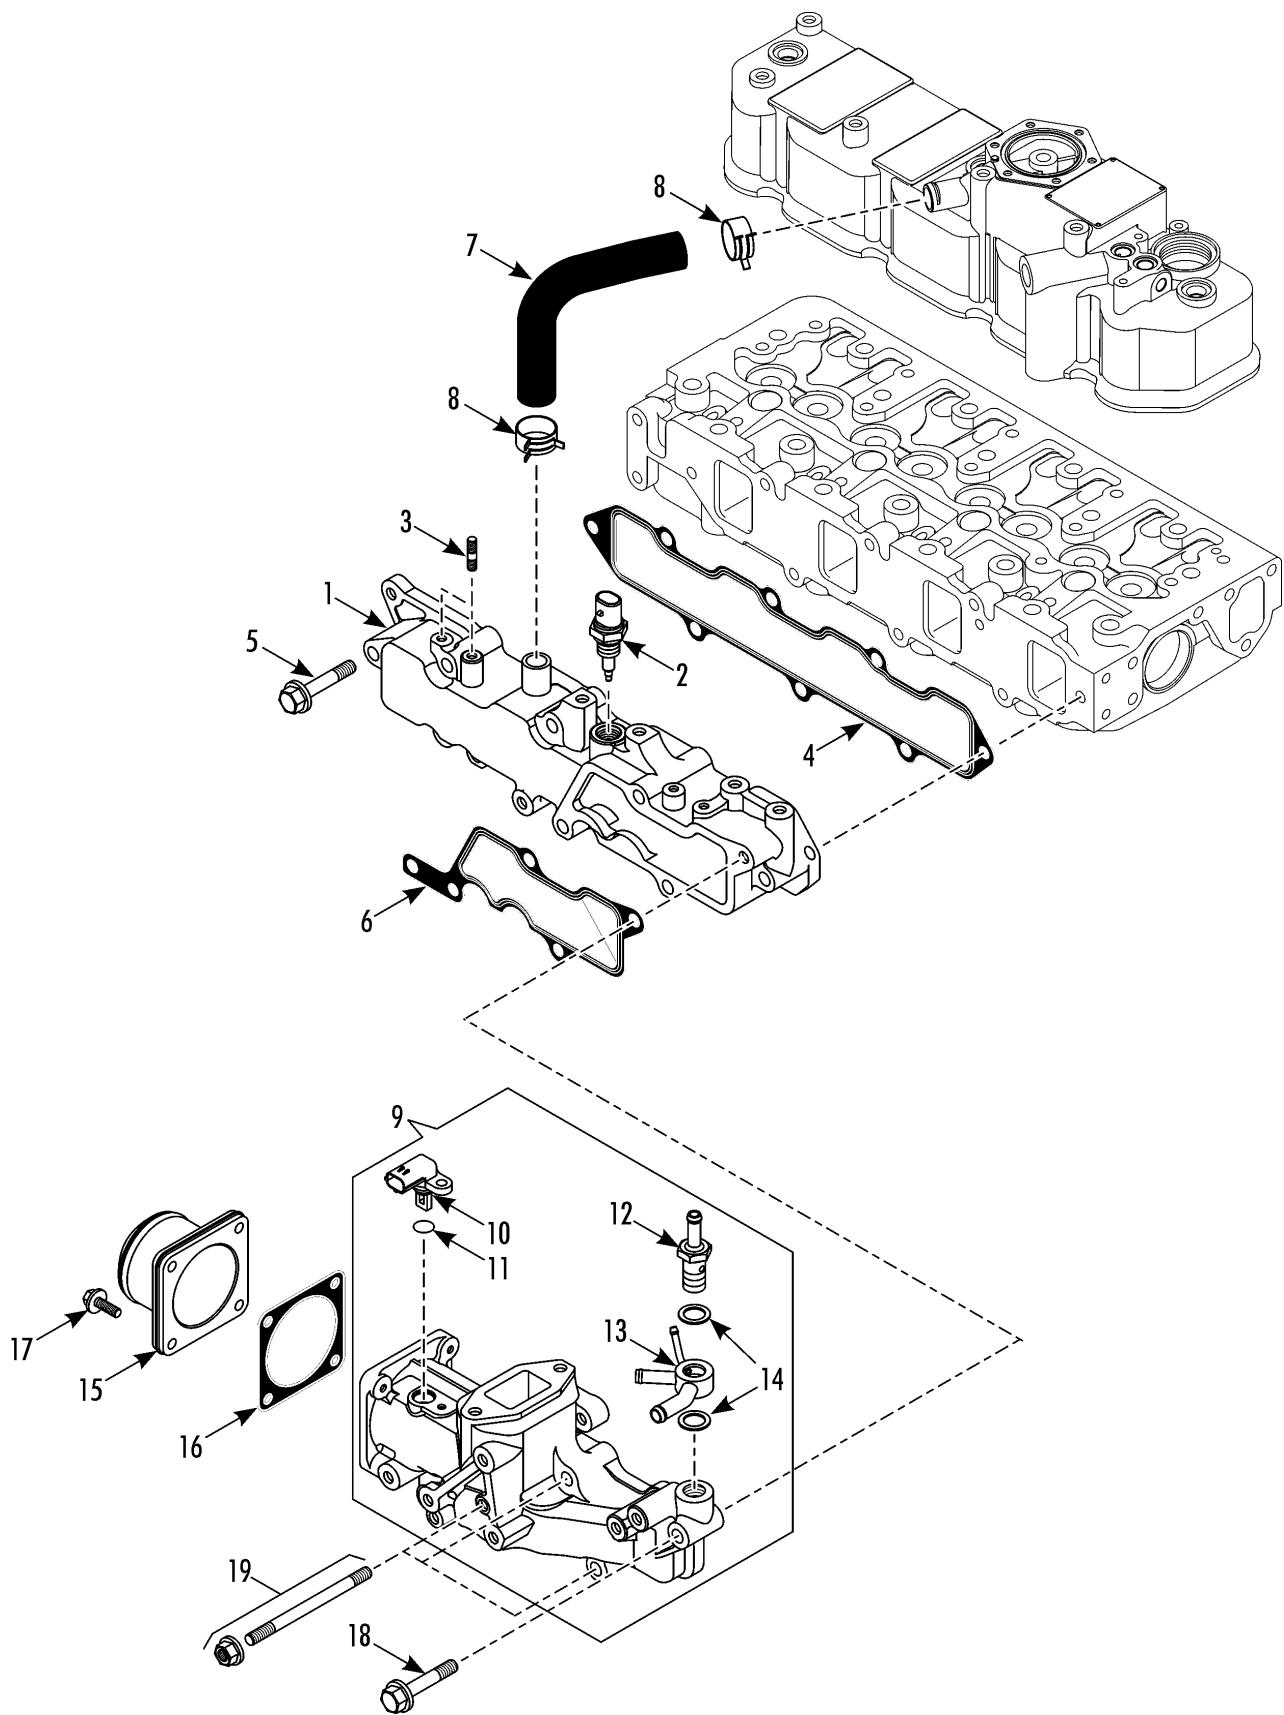

INTAKE SYSTEM (TK488CR)




272F5

REF	PART NO.	DESCRIPTION	QTY
1	13-1992	MANIFOLD - intake	1
2	42-539	*SENSOR - air temperature	1
3	55-5138	*STUD	4
4	33-4961	GASKET - manifold	1
5	55-6193	SCREW - manifold (50 mm)	5
6	33-4962	GASKET - collector	1
7	13-1991	HOSE - breather	1
8	55-8442	CLIP	2
9	13-2014	COLLECTOR - intake	1
10	42-537	*SENSOR - air temperature, ambient	1
11	33-5197	*O-RING - sensor	1
	55-5859	STUD	1
	55-4750	*NUT	1
12	13-2077	*JOINT - fuel	1
13	13-2078	*BANJO - fuel	1
14	33-2970	*WASHER - seal	2
15	13-2016	JOINT - intake	1
16	33-4969	GASKET - intake joint	1
17	55-5811	SCREW - joint	4
18	55-6193	SCREW - collector (50 mm)	1
	55-8869	SCREW - collector (75 mm)	1
19	51-2698	STUD - collector	3
	51-594	NUT	3

272F6  THERMO KING

EXHAUST SYSTEM (TK488CR)

Revised
01/19/14

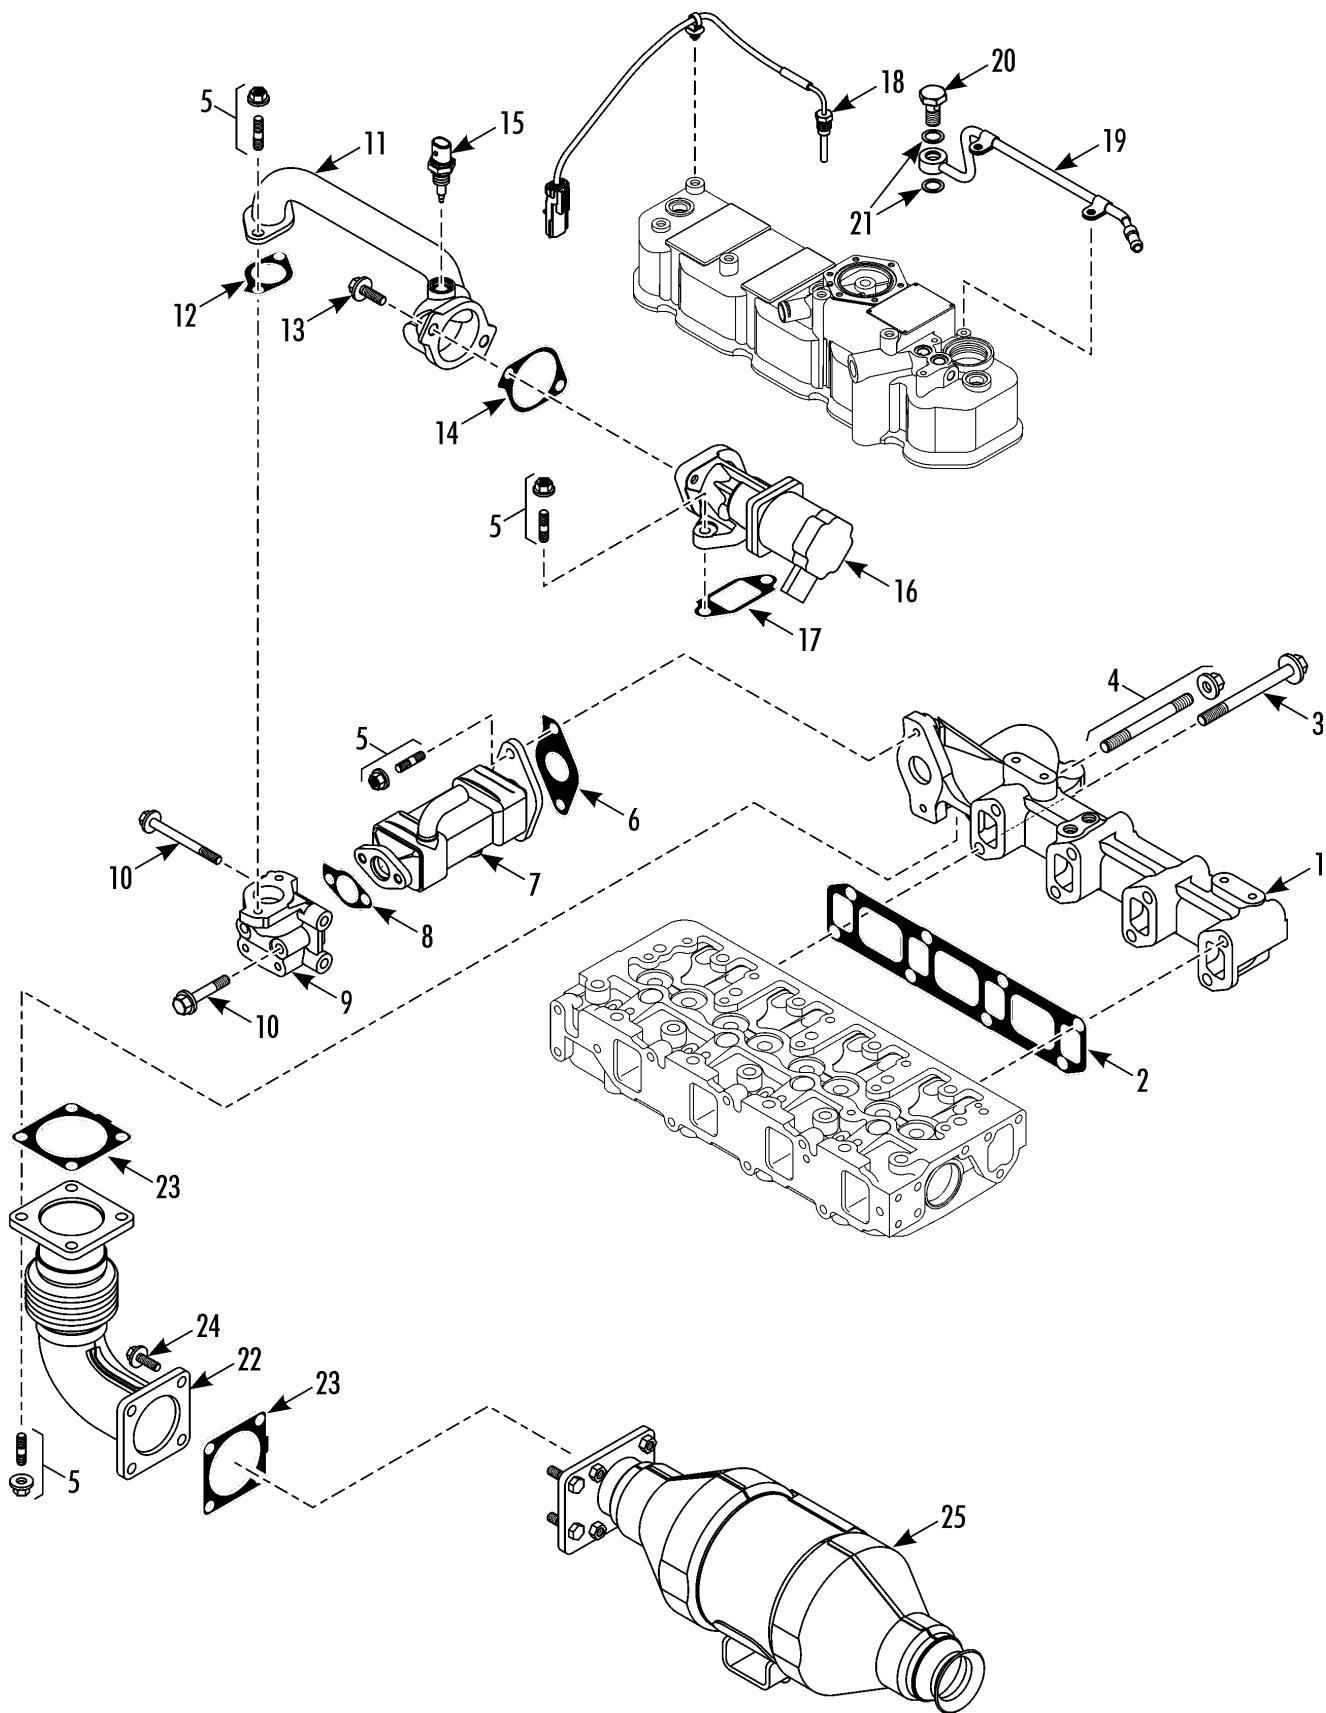

EXHAUST SYSTEM (TK488CR)


Revised
01/19/14



272F6

REF	PART NO.	DESCRIPTION	QTY
1	13-2017	MANIFOLD - exhaust	1
2	33-4960	GASKET - exhaust manifold	1
3	51-2699	SCREW - manifold (80 mm)	5
	51-2708	SCREW - manifold (100 mm)	1
4	51-2700	STUD - manifold (80 mm)	2
	51-2710	NUT	2
5	51-2709	STUD	10
	51-594	NUT	10
6	33-4964	GASKET - EGR cooler	1
7	13-1258	COOLER - EGR	1
	203-799	Soot Scrubber (see note)	1
	204-2379	TOOL - heated cleaning bath	1
8	33-4968	GASKET - EGR cooler	1
9	13-2020	ELBOW - EGR	1
10	55-6236	SCREW - elbow (55 mm)	2
	51-2718	SCREW - elbow (80 mm)	2
11	13-2079	TUBE - EGR	1
12	33-4965	GASKET - EGR tube	1
13	55-6246	SCREW - EGR tube (25 mm)	2
14	33-4963	GASKET - EGR-V in	1
15	42-536	SENSOR - EGR gas temperature	1
16	13-1253	VALVE - EGR	1
17	33-4967	GASKET - EGR-V out	1
18	42-534	SENSOR - exhaust temperature	1
19	13-2018	TUBE - exhaust P	1
20	51-2272	SCREW - pipe joint	1
21	33-1975	GASKET (12mm, round)	2
22	13-1674	TUBE - exhaust	1
23	33-5150	GASKET - exhaust	2
24	51-2719	SCREW - converter	4
25	13-1673	CATALYST - oxidation	1


Refer to Parts Bulletin 1503 for EGR Cooler Cleaning Process 203-799 - Soot Scrubber TM

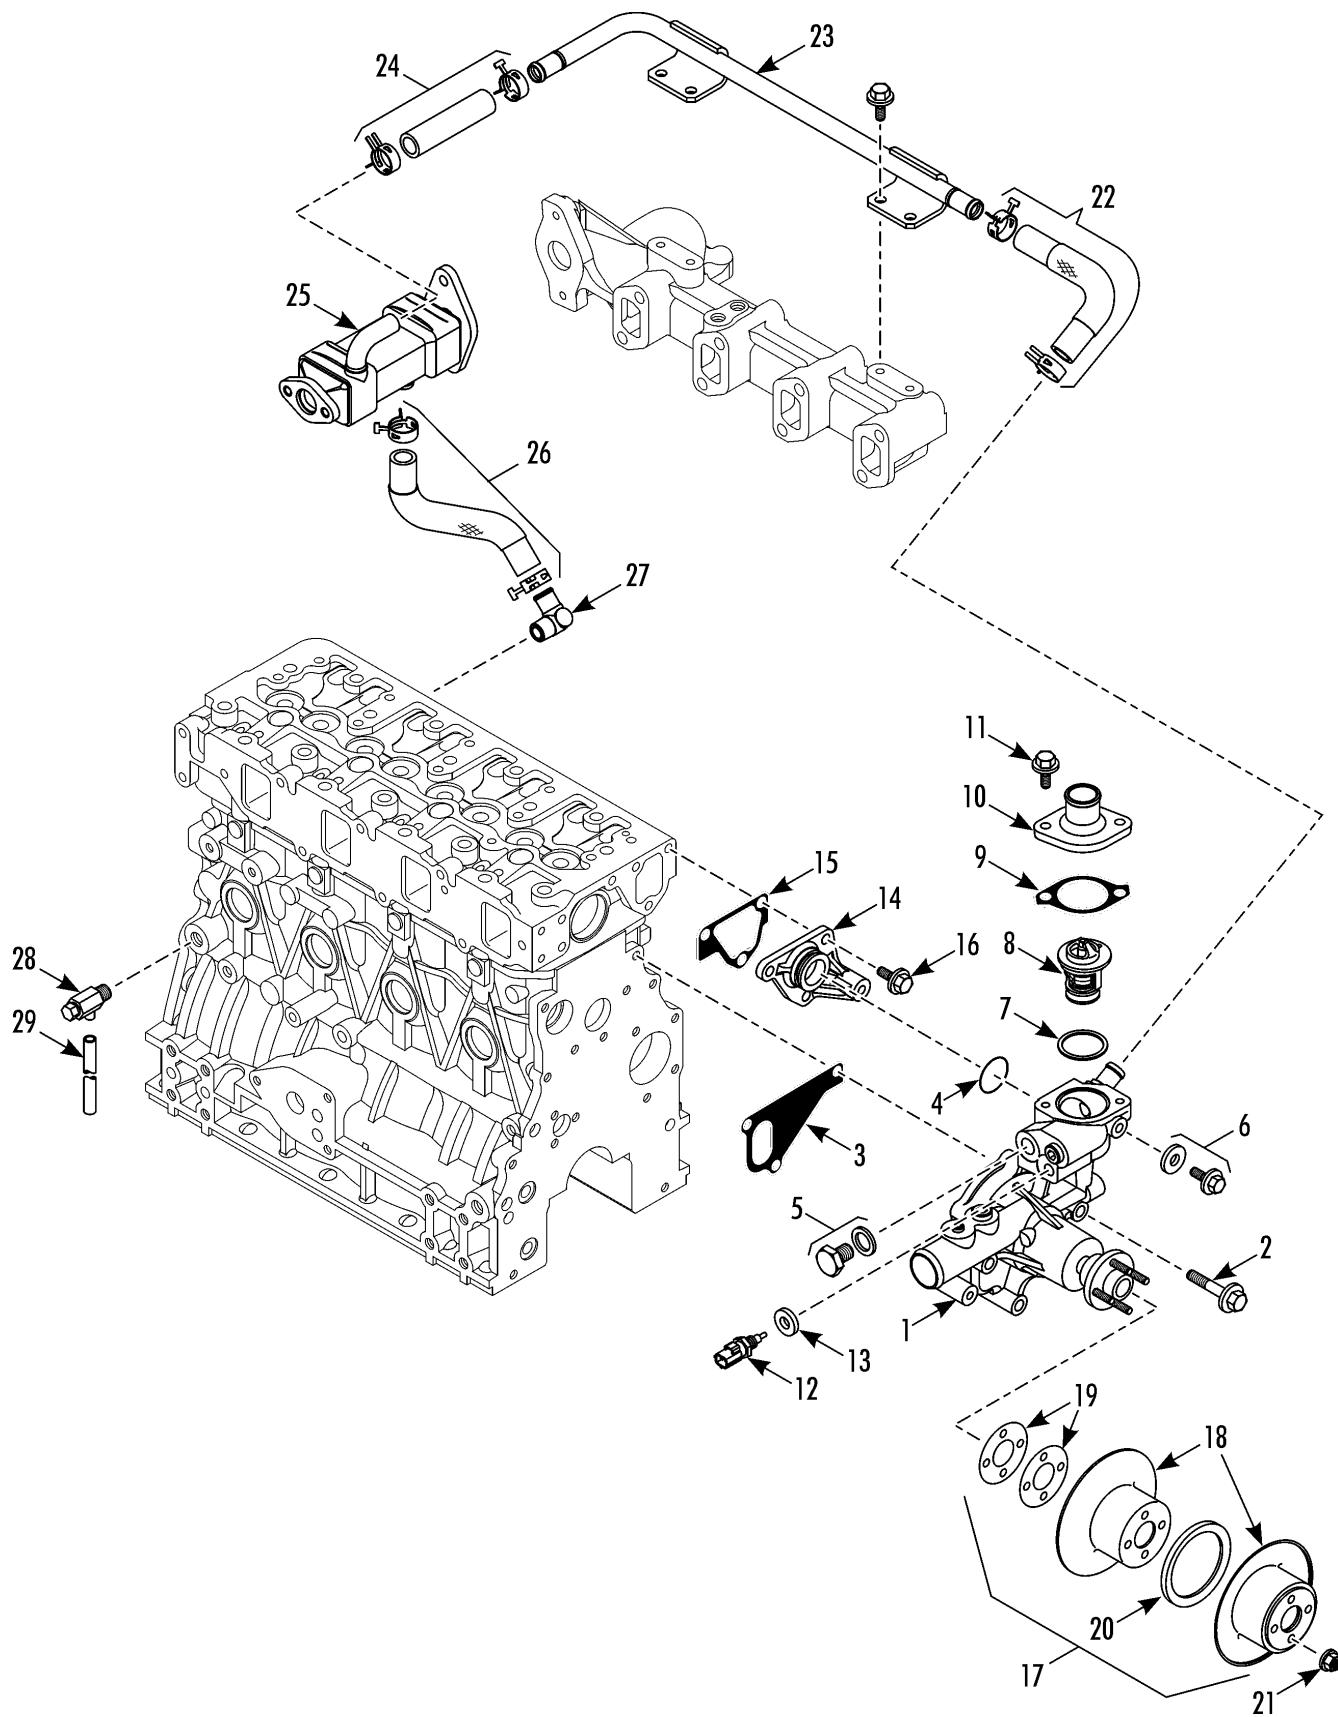



REF	PART NO.	DESCRIPTION	QTY
1	13-1259	PUMP - coolant	1
2	55-6248	SCREW - pump (60 mm)	3
3	33-3096	GASKET - pump	1
4	33-3098	O-RING - joint	1
5	11-9256	PLUG	1
	33-1745	GASKET	1
6	55-8854	PLUG	1
	33-1524	GASKET	1
7	33-2768	GASKET - thermostat	1
8	13-385	THERMOSTAT (160 F, 71 C)	1
9	33-2767	GASKET - cover	1
10	11-8675	COVER - thermostat	1
11	55-5817	SCREW - cover	2
12	42-541	SENSOR - coolant	1
13	55-8620	GASKET - sensor	1
14	13-2026	JOINT	1
15	33-3097	GASKET	1
16	55-8441	SCREW - joint / tube (16 mm)	A/R
17	13-358	PULLEY - pump (inc 18 - 20)	1
18	77-1426	*PULLEY SET	1
19	77-2752	*SHIM - pulley (0.5 mm)	A/R
	77-1427	*SHIM - pulley (1 mm)	A/R
20	77-1428	*SPACER	1
21	55-5792	NUT - pulley	4
22	13-2041	HOSE - pump to tube	1
23	13-2027	TUBE - EGR (hose to hose)	1
24	13-2040	HOSE - tube to EGR	1
25	13-1258	COOLER - EGR (see 272F6)	1
26	13-2032	HOSE - EGR to engine	1
27	51-2727	ELBOW - hose to engine	1
28	11-8677	COCK - drain	1
29	13-360	HOSE - drain	1

Refer to Parts Bulletin 1503 for EGR Cooler Cleaning Process 203-799 - Soot Scrubber TM

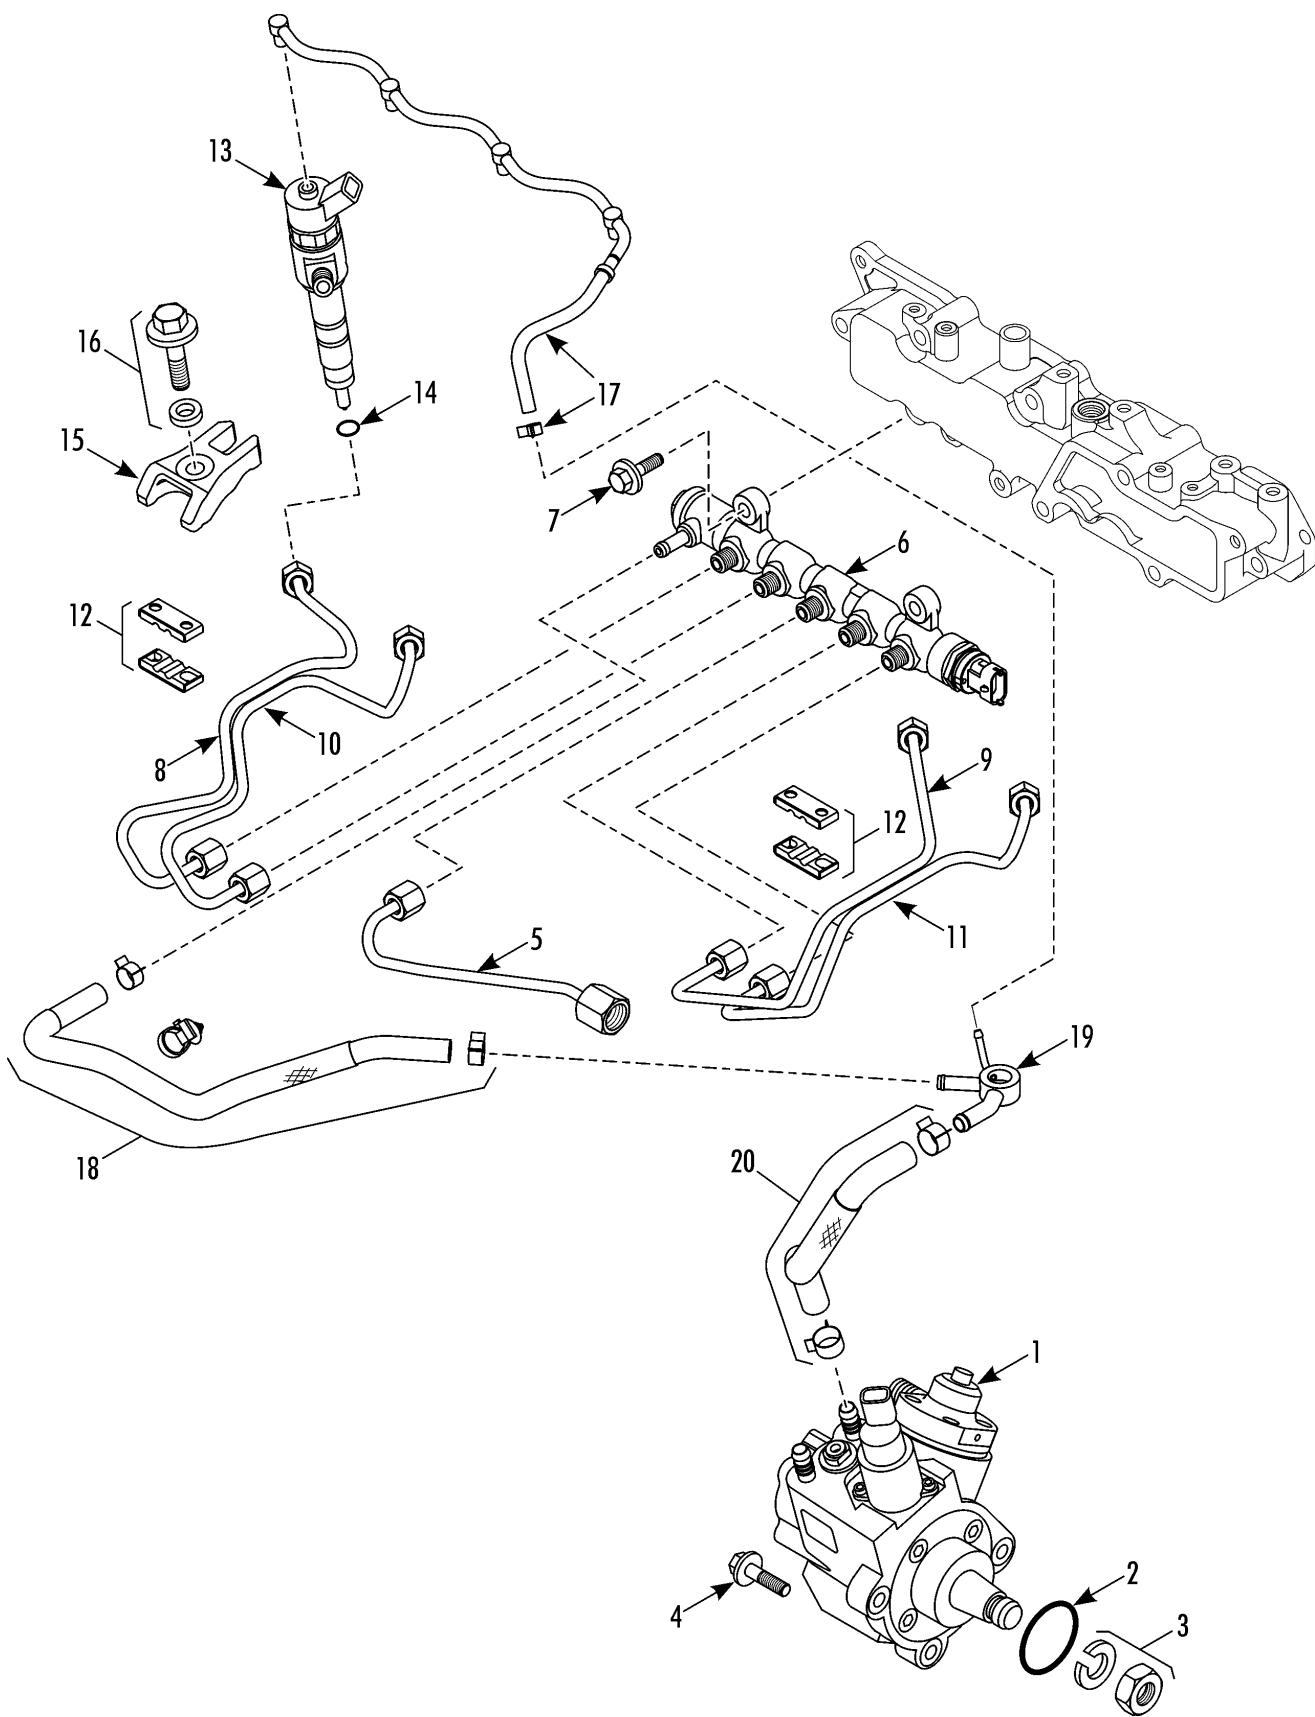

FUEL INJECTION SYSTEM (TK488CR)

Revised
01/23/14




272F8

REF	PART NO.	DESCRIPTION	QTY
1	13-1252	PUMP - fuel high pressure	1
2	33-5171	O-RING - pump	1
3	11-5035	NUT - pump	1
	51-2720	LOCKWASHER	1
4	55-8857	SCREW - pump (30mm)	3
5	13-1329	TUBE - pump to rail	1
6	13-1256	RAIL - fuel (common)	1
7	55-6246	SCREW - rail (25mm)	2
8	13-1310	TUBE - fuel injection	1
9	13-1315	TUBE - fuel injection	1
10	13-1316	TUBE - fuel injection	1
11	13-1317	TUBE - fuel injection	1
12	13-1318	RETAINER - injection tube	4
	55-5792	NUT - retainer	4
13	13-1255	INJECTOR & GASKET	4
14	33-4966	*GASKET - injector	4
15	13-1266	RETAINER - injector	4
16	55-6191	SCREW - retainer (35 mm)	4
	51-1151	WASHER	4
17	13-1260	HOSE - injectors to banjo	1
18	13-1262	HOSE - common rail to banjo (inc clip & clamps)	1
19	13-2077	JOINT - fuel	1
20	13-1263	HOSE - banjo to fi pump	1

272F9 

**STARTER & ELECTRICAL COMPONENTS
(TK488CR)**

Revised
02/05/14

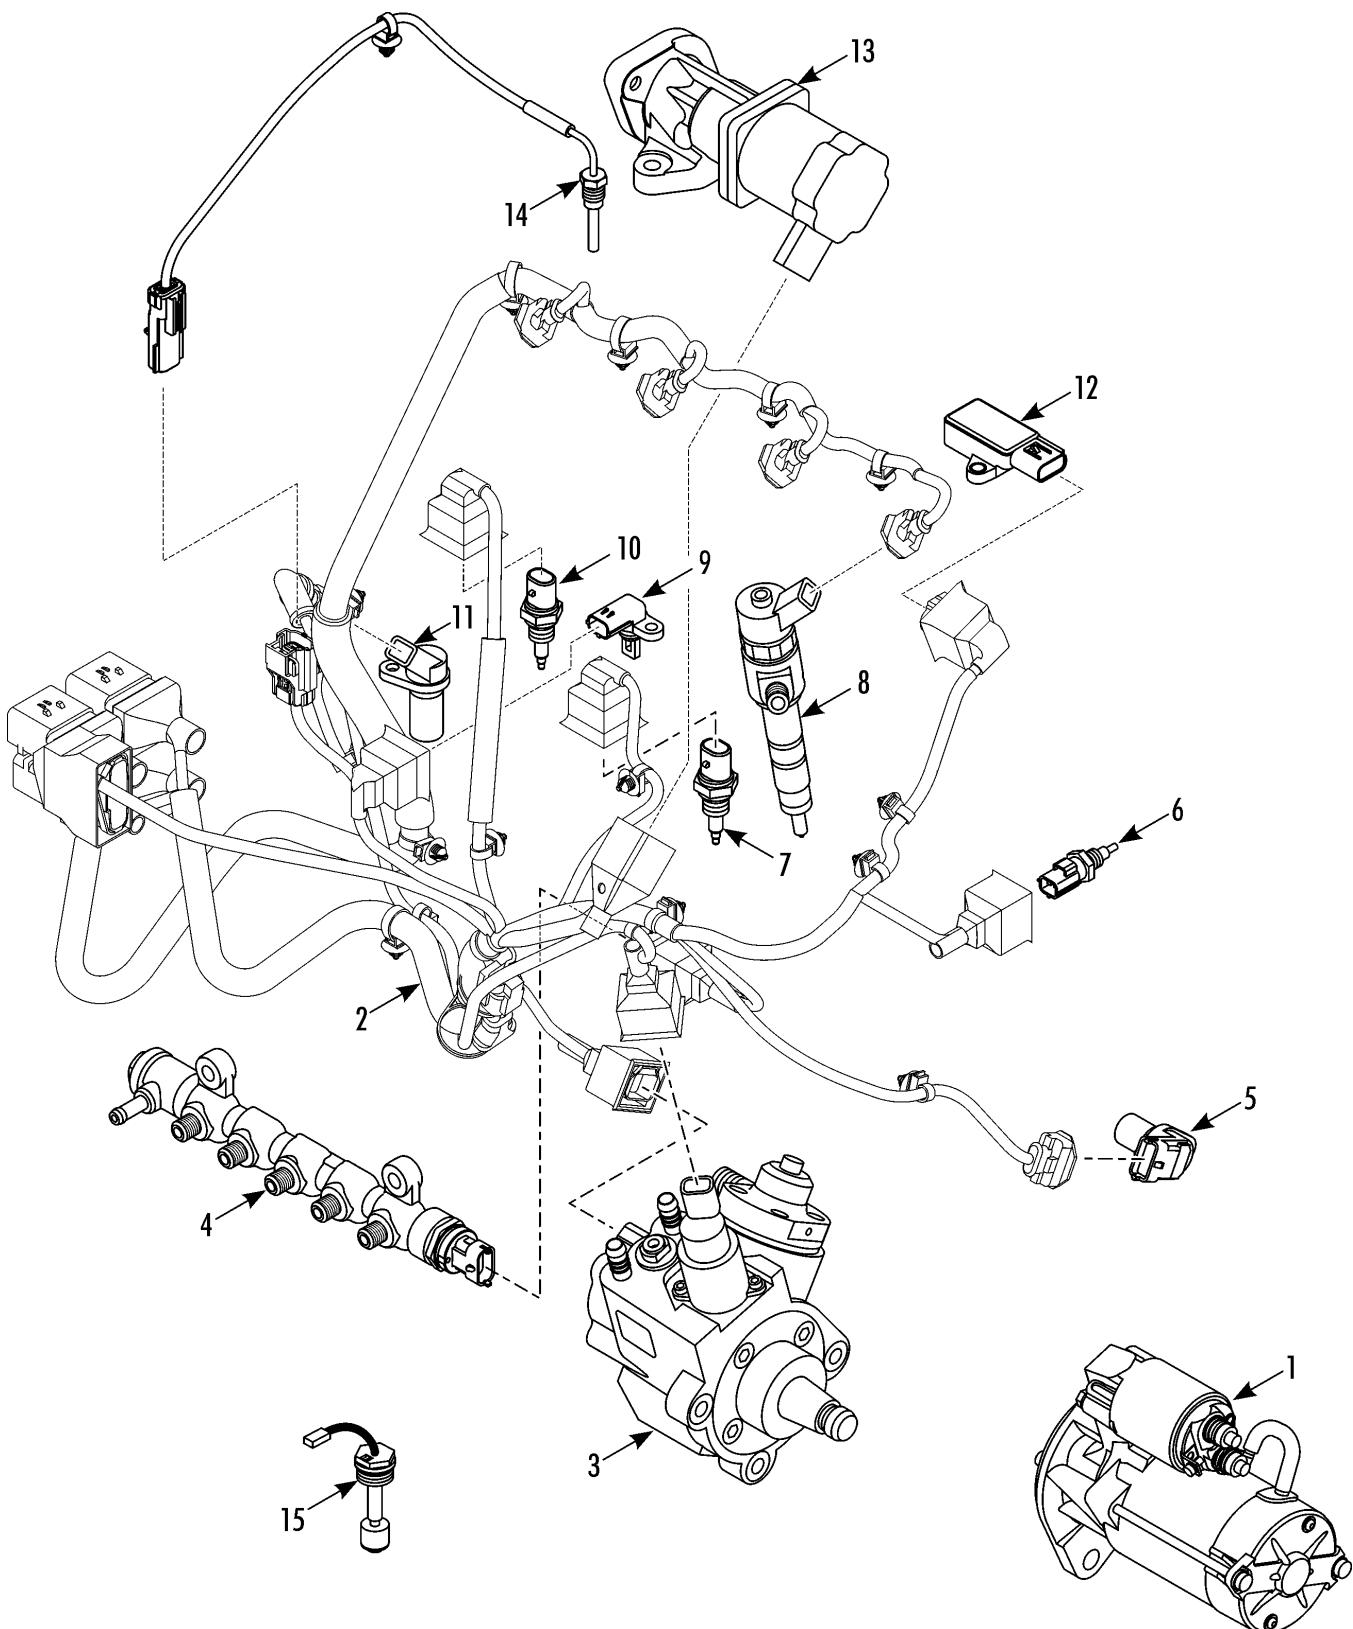

**STARTER & ELECTRICAL COMPONENTS
(TK488CR)**




272F9

REF	PART NO.	DESCRIPTION	QTY
1	45-2177	STARTER	1
	845-2324	STARTER - remanufactured	1
	45-2324	STARTER - standard life	1
2	42-860	HARNESS - engine	1
3	13-1252	PUMP - fuel high pressure (see 272F8)	1
4	13-1256	RAIL - fuel (common, see 272F8)	1
5	42-535	SENSOR - camshaft (see 272F4)	1
6	42-541	SENSOR - coolant (see 272F7)	1
7	42-539	SENSOR - air temperature (see 272F5)	1
8	13-1255	INJECTOR & GASKET (see 272F8)	4
9	42-537	SENSOR - air temperature, ambient (see 272F5)	1
10	42-536	SENSOR - EGR gas temperature (see 272F6)	1
11	42-530	SENSOR - flywheel, rpm (272F3)	1
12	42-533	SENSOR - pressure (inc o-ring, see 272F2)	1
13	13-1258	COOLER - EGR (see 272F6)	1
14	42-534	SENSOR - exhaust temperature (see 272F6)	1
15	41-4470	SWITCH - oil level	1

260E5 

ENGINE GASKETS (TK488CR)

Revised
10/20/13

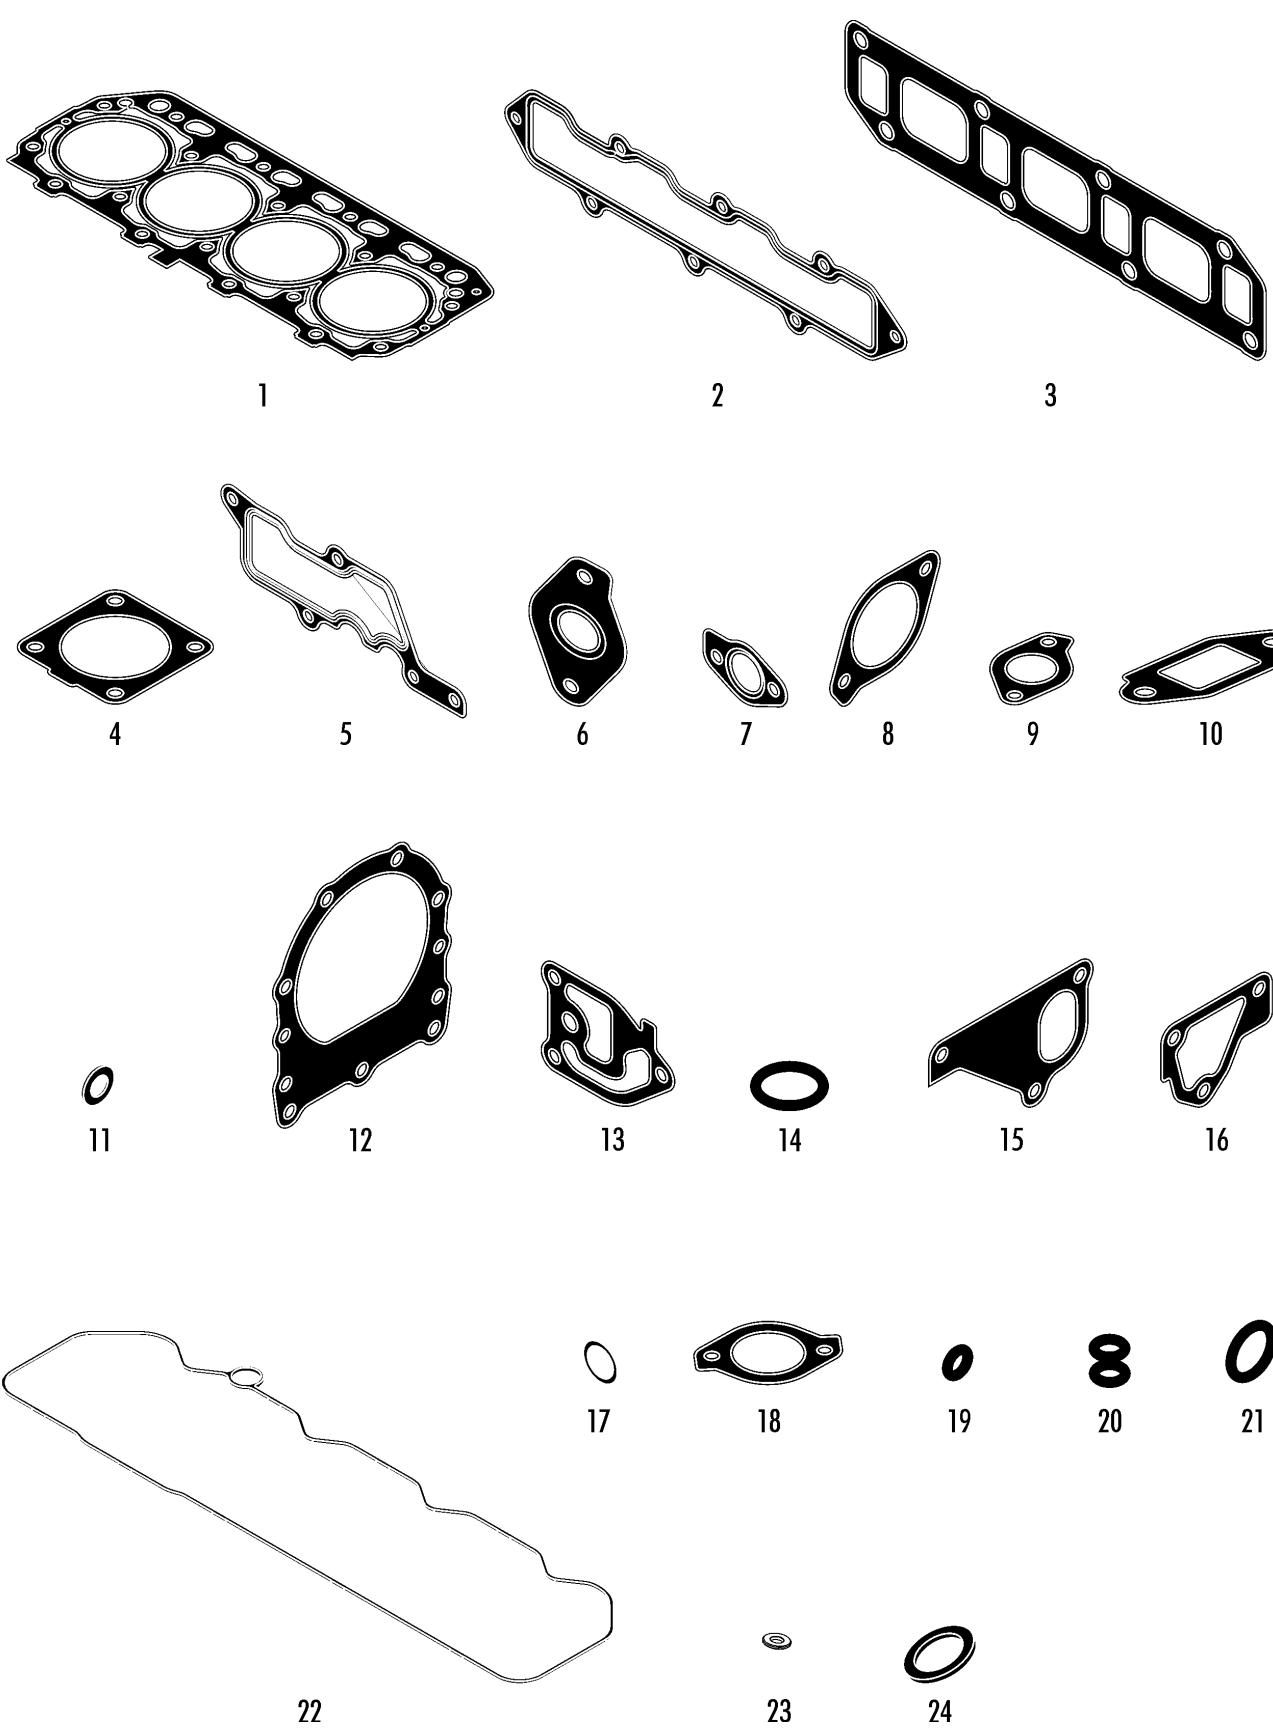

ENGINE GASKETS (TK488CR)






260E5

REF	PART NO.	DESCRIPTION	QTY
1	33-5056	GASKET - head	1
2	33-4961	GASKET - intake manifold	1
3	33-4960	GASKET - exhaust manifold	1
4	33-4959	GASKET - exhaust	2
5	33-4962	GASKET - collector	1
6	33-4964	GASKET - EGR cooler	1
7	33-4968	GASKET - EGR cooler	1
8	33-4963	GASKET - EGR-V in	1
9	33-4965	GASKET - EGR tube	1
10	33-4967	GASKET - EGR-V out	1
11	33-1524	GASKET - coolant pump	1
12	33-2969	GASKET - case	1
13	33-2931	GASKET - oil filter bracket	1
14	33-4090	O-RING - filler cap	1
15	33-3096	GASKET - coolant pump	1
16	33-3097	GASKET - thermostat housing	1
17	33-1745	WASHER - sealing	1
18	33-2767	GASKET - thermostat	1
19	33-3512	O-RING - gear housing	1
20	33-3821	O-RING - gear case (16 mm)	2
21	33-1954	O-RING - gear housing	1
	33-3098	O-RING - joint (coolant pump)	1
	33-2768	O-RING - thermostat	1
22	33-4958	GASKET - valve cover	1
23	33-4966	GASKET - injector	1
24	33-1975	GASKET - EXH P sensor	1

272D5 


FILTER KIT, TRAILER (Precedent S-600/C-600/S-700)

Revised
01/18/14

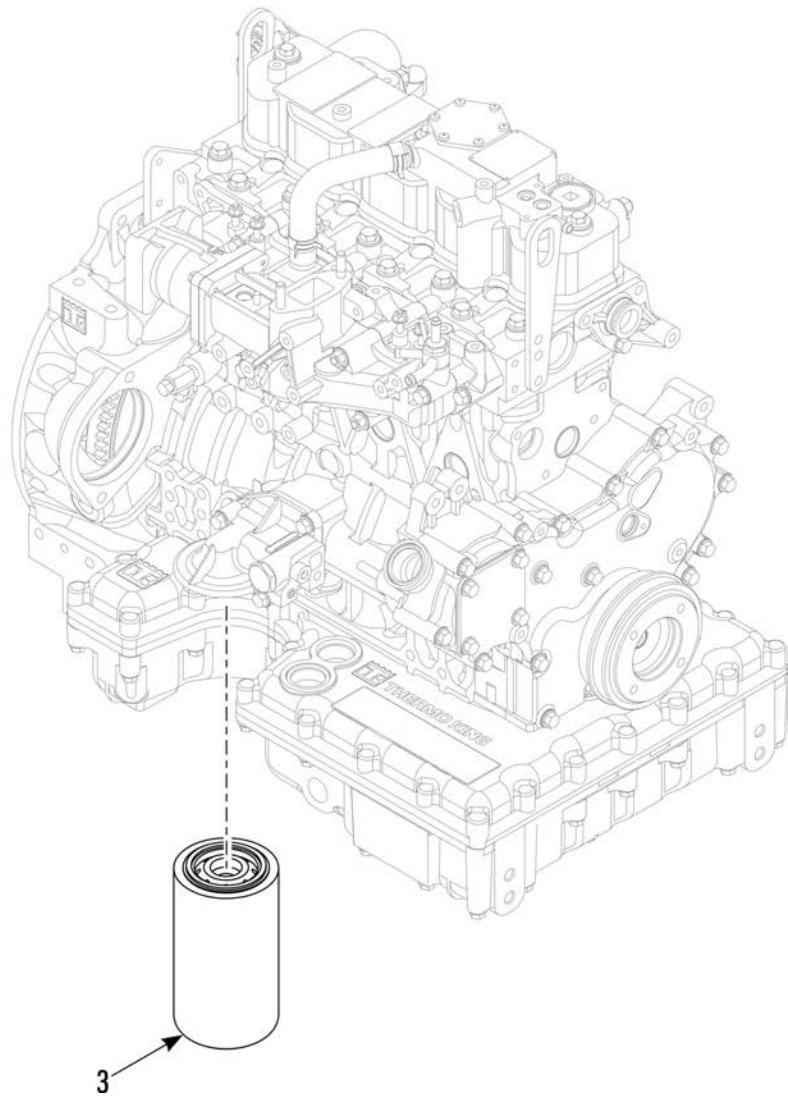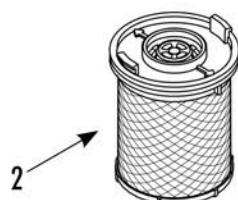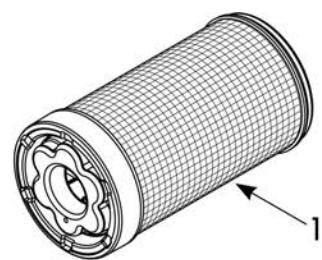

FILTER KIT, TRAILER (Precedent S-600/C-600/S-700)Revised
01/18/14**272D5**

REF	PART NO.	DESCRIPTION	QTY
	10-457	KIT - filter set (S-600/C-600 EMI 3000)	1
1	11-9955	*ELEMENT - air filter (EMI 3000)	1
2	11-9957	*ELEMENT - fuel filter (EMI 3000)	1
3	11-9959	*FILTER - oil (EMI 3000)	1
	10-469	KIT - filter set (S-600, severe duty)	1
1	11-9956	*ELEMENT - air filter (severe duty)	1
2	11-9958	*ELEMENT - fuel filter (severe duty)	1
3	11-9961	*FILTER - oil (severe duty)	1

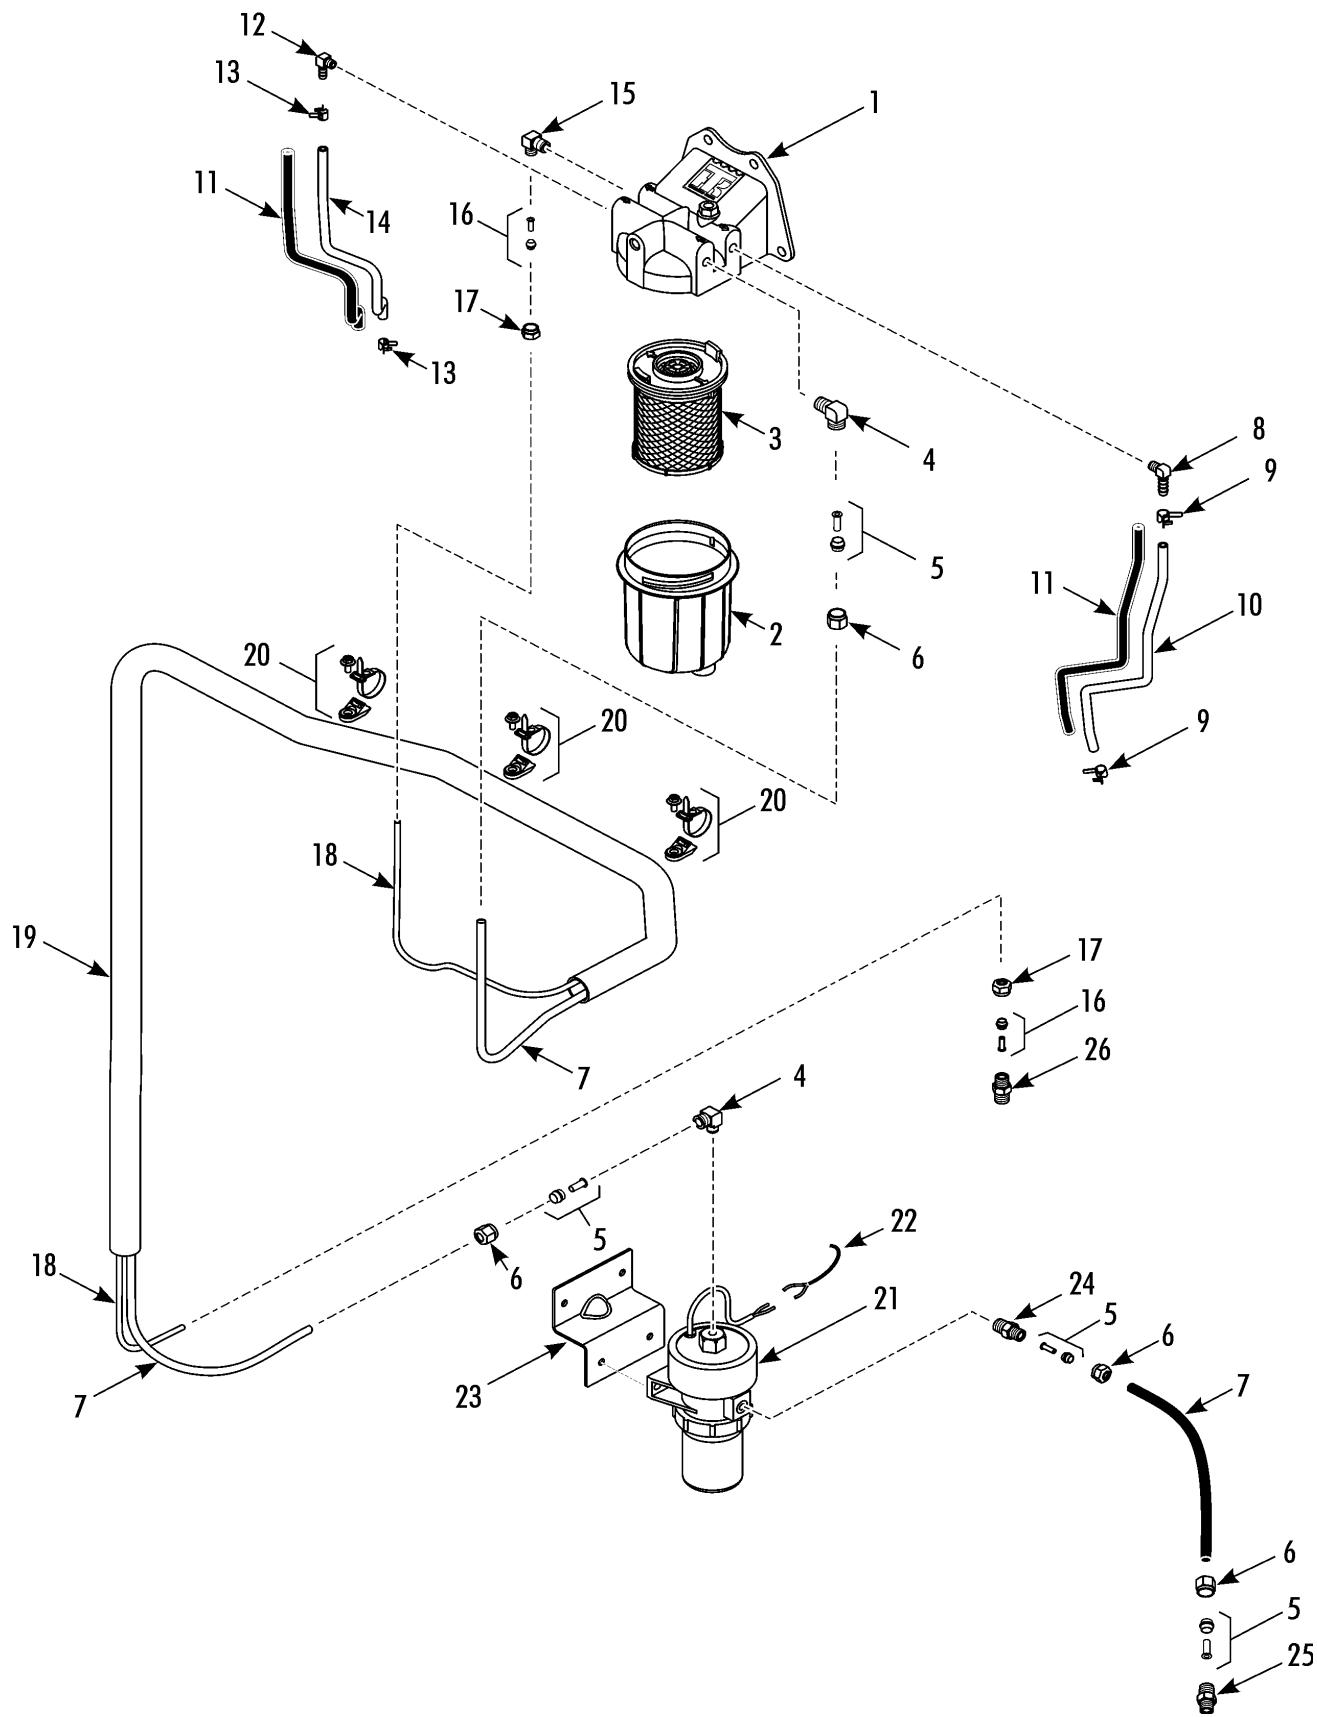260E2**FUEL FILTER & HOSES S-600/700**Revised
02/10/14


FUEL FILTER & HOSES S-600/700

Revised
02/10/14




260E2

REF	PART NO.	DESCRIPTION	QTY
1	13-1301	HEAD ASSEMBLY - fuel filter	1
2	13-1164	*BOWL	1
3	11-9957	*ELEMENT - fuel filter (EMI 3000)	1
	11-9958	ELEMENT - fuel filter (severe duty)	1
	51-2770	SCREW - head	4
4	13-1230	ELBOW - hose (3/8)	2
5	10-242	KIT - sleeve & eyelet (3/8)	4
6	11-4941	NUT - hose (3/8)	4
7	11-4372	HOSE (3/8 od x 35 ft lg)	A/R
8	13-1222	ELBOW - hose (9.8 od)	1
9	51-2302	CLAMP - hose (16 mm)	2
10	13-1249	HOSE (9.8 mm in x 25 ft lg)	A/R
11	13-1286	TUBE - cover (corrugated 25 ft)	A/R
12	13-1225	ELBOW - hose	1
13	51-2301	CLAMP - hose (14 mm)	2
14	13-1250	HOSE (7.9 mm id x 25 ft lg)	A/R
15	13-1251	ELBOW - hose (1/4)	1
16	10-243	KIT - sleeve & eyelet (1/4)	2
17	11-4841	NUT - hose (1/4)	2
18	11-4367	HOSE (1/4 od x 35 ft)	1
19	51-2281	TUBE - cover (corrugated)	1
	55-2330	BANDWRAP	9
20	51-2300	MOUNT - bandwarp	3
	51-2220	BANDWRAP - mounting	3
	51-2758	SCREW - bandwrap	3
	55-4607	FLATWASHER	3
	55-7007	NUT	3
21	42-351	PUMP - fuel w/ strainer	1
	10-378	*KIT - bowl & gasket	1
	10-458	**KIT - strainer & o-ring	1
	51-2201	SCREW - pump	2
	55-7075	FLATWASHER	4
	55-7008	NUT	2

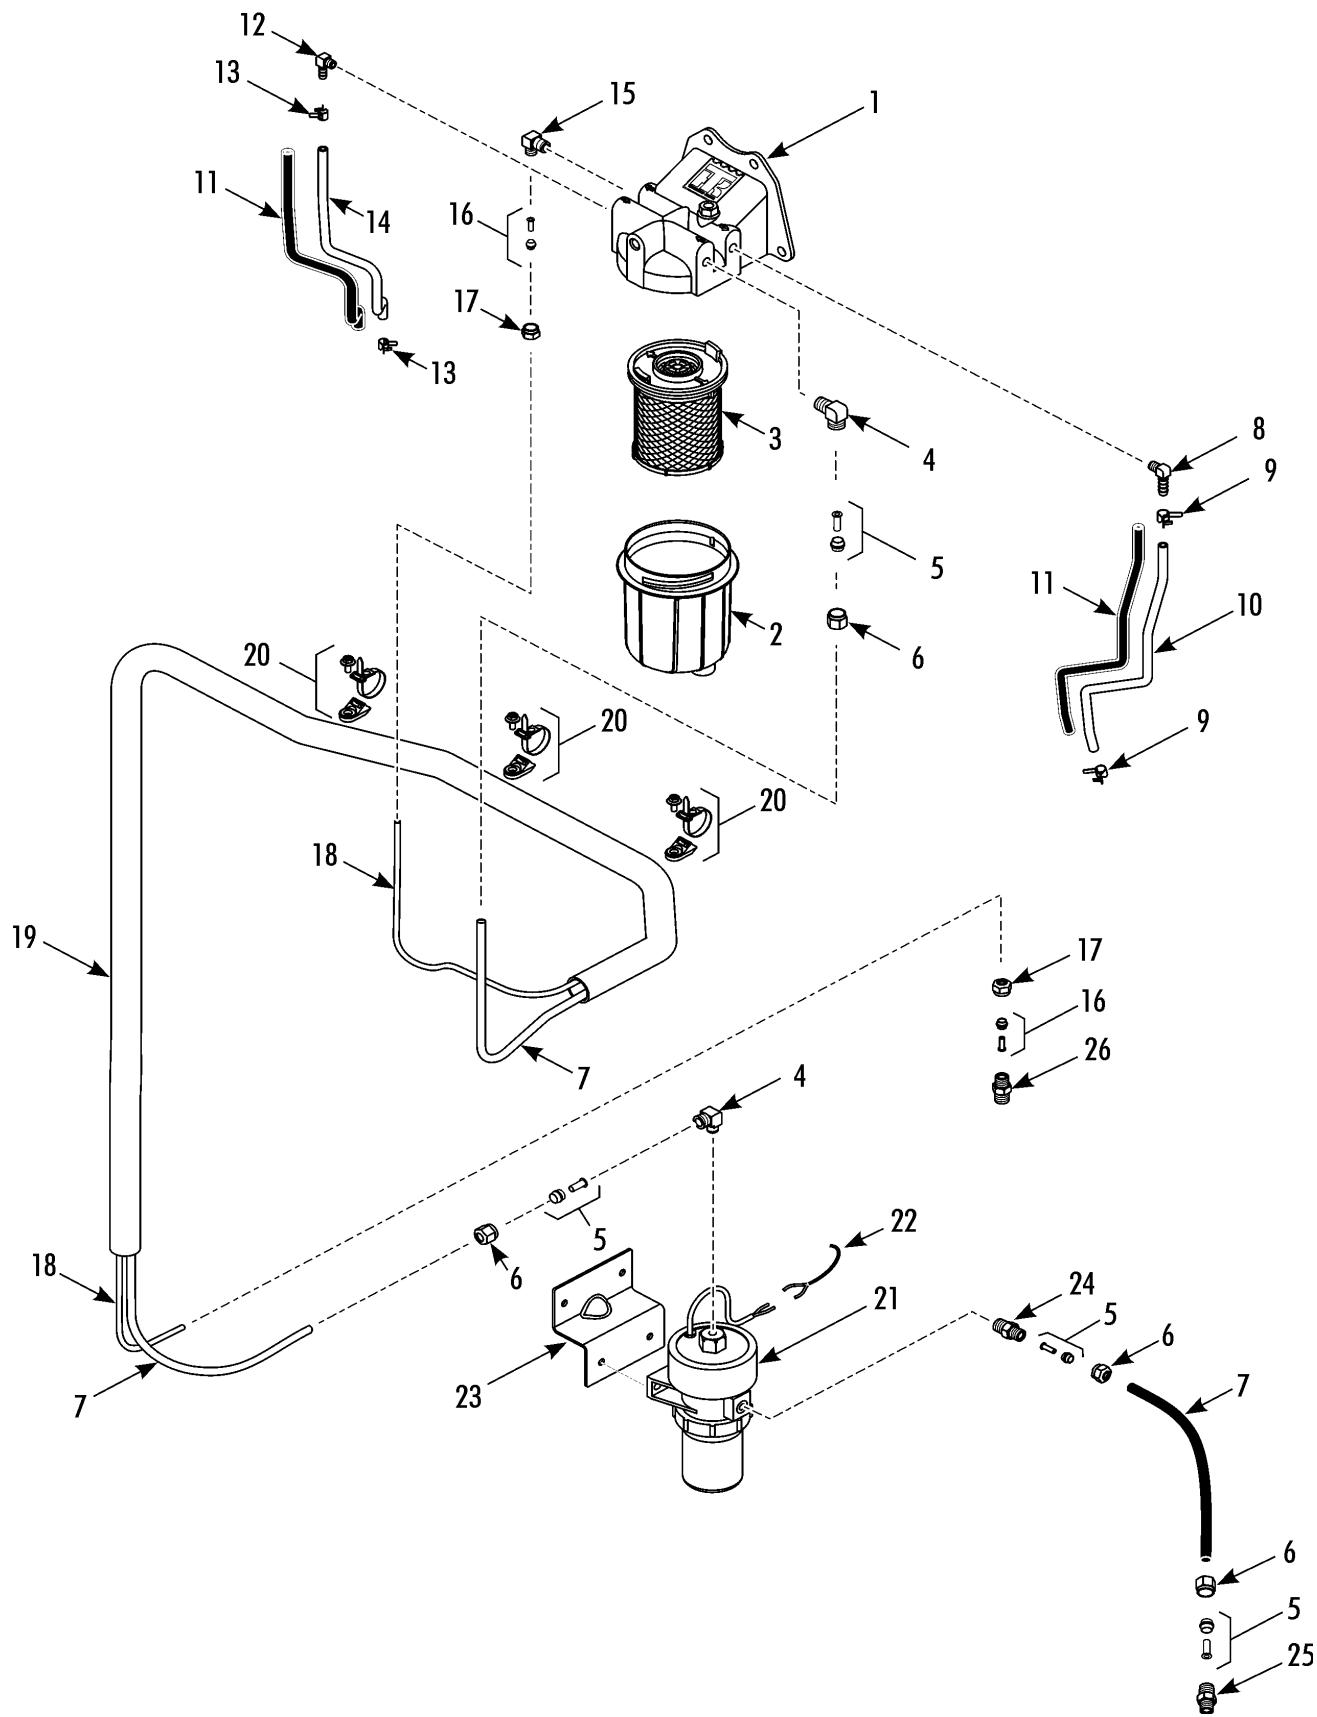260E2**FUEL FILTER & HOSES S-600/700**Revised
02/10/14


FUEL FILTER & HOSES S-600/700Revised
02/10/14**260E2**

REF	PART NO.	DESCRIPTION	QTY
22	42-717	HARNESS - fuel pump	1
	41-130	TERMINAL - splice	4
23	92-9683	BRACKET - pump	1
24	13-1223	CONNECTOR - pump inlet	1
25	13-1230	CONNECTOR - fuel tank supply	1
26	13-1231	CONNECTOR - fuel tank return	1

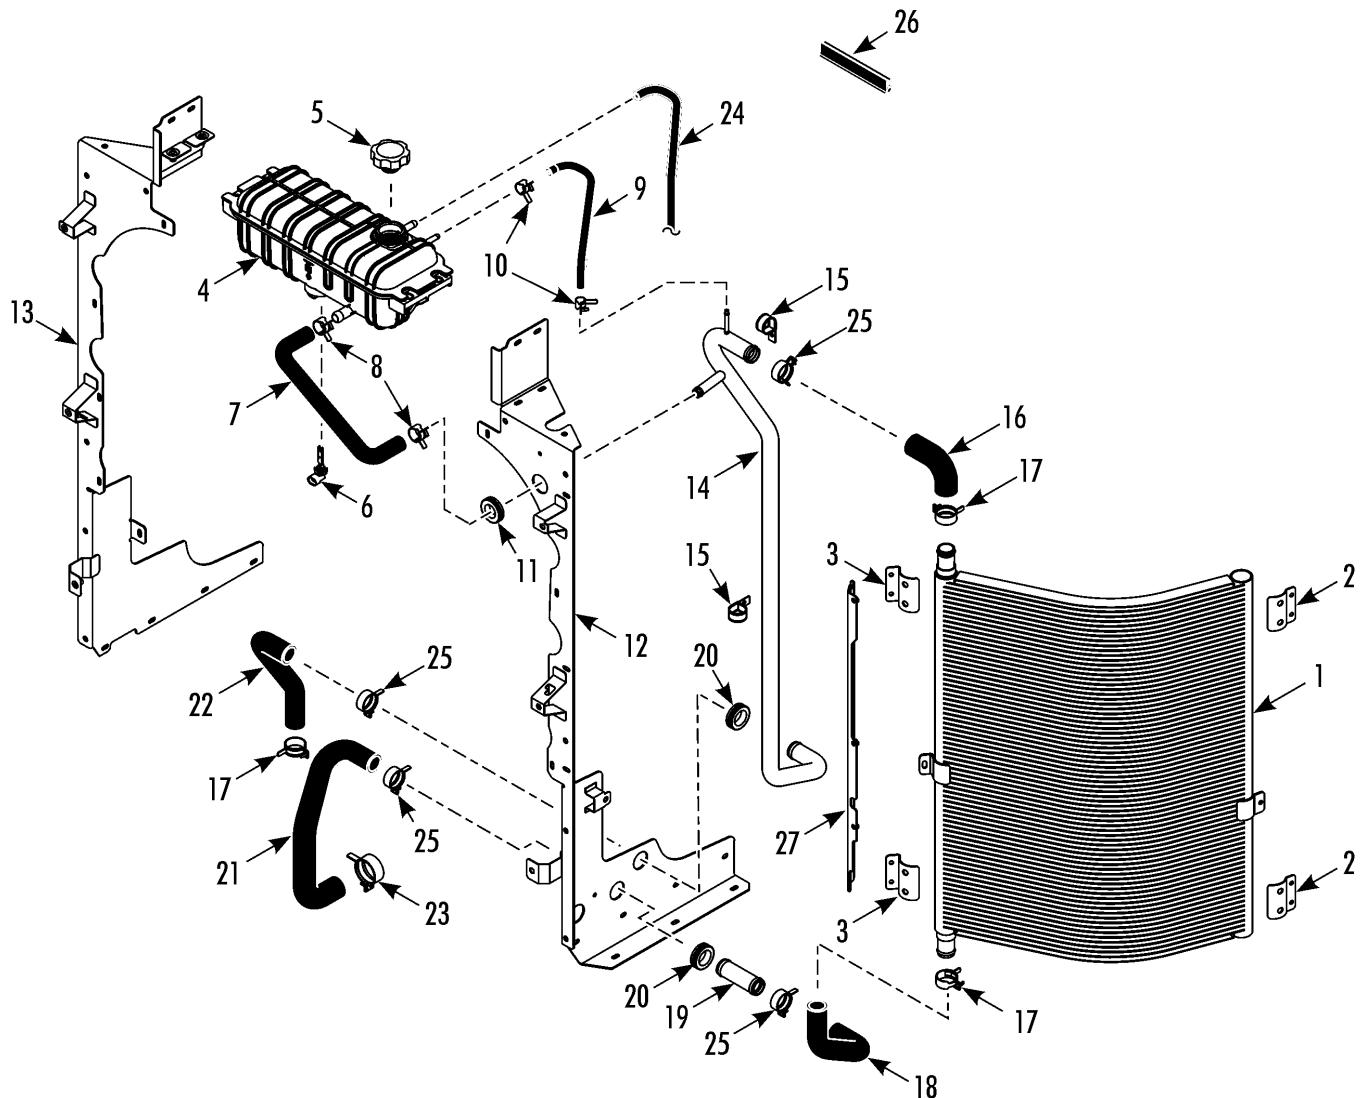




REF	PART NO.	DESCRIPTION	QTY
1	12-976	RADIATOR	1
2	92-9847	BRACKET - radiator (outside)	2
3	92-9845	BRACKET - radiator (center)	2
	51-2758	SCREW - bracket	8
4	13-1165	TANK - expansion	1
5	13-990	*CAP - expansion tank (15 psi)	1
6	42-292	*SWITCH - coolant level	1
	51-2766	SCREW - tank	4
7	13-1468	HOSE - expansion tank (outlet)	1
8	13-1148	CLAMP - hose (25 mm)	2
9	13-1469	HOSE - expansion tank (bleed)	1
10	51-2302	CLAMP - hose (16 mm)	2
11	33-1084	GROMMET - hose	1
12	98-9013	SUPPORT - coil (roadside, see 261B3)	1
13	98-9012	SUPPORT - coil (curbside, see 261B3)	1
14	13-1199	TUBE - radiator (inlet)	1
15	55-7504	CLAMP - tube	2
	51-2197	SCREW - clamp	2
16	13-1200	HOSE - radiator (inlet)	1
17	51-1739	CLAMP - hose (36 mm)	3
18	13-1198	HOSE - radiator (outlet)	1
19	13-1201	TUBE - radiator (outlet)	1
20	33-2023	GROMMET - tube	2
21	13-1216	HOSE - inlet (radiator to pump)	1
22	13-1215	HOSE - outlet (pump to radiator)	1
23	51-2209	CLAMP - hose (44 mm)	1
24	99-1655	HOSE - overflow	1
25	51-2514	CLAMP - hose (38 mm)	4
26	33-4979	EXTRUSION - rubber	1
27	92-9853	BRACKET - radiator	1

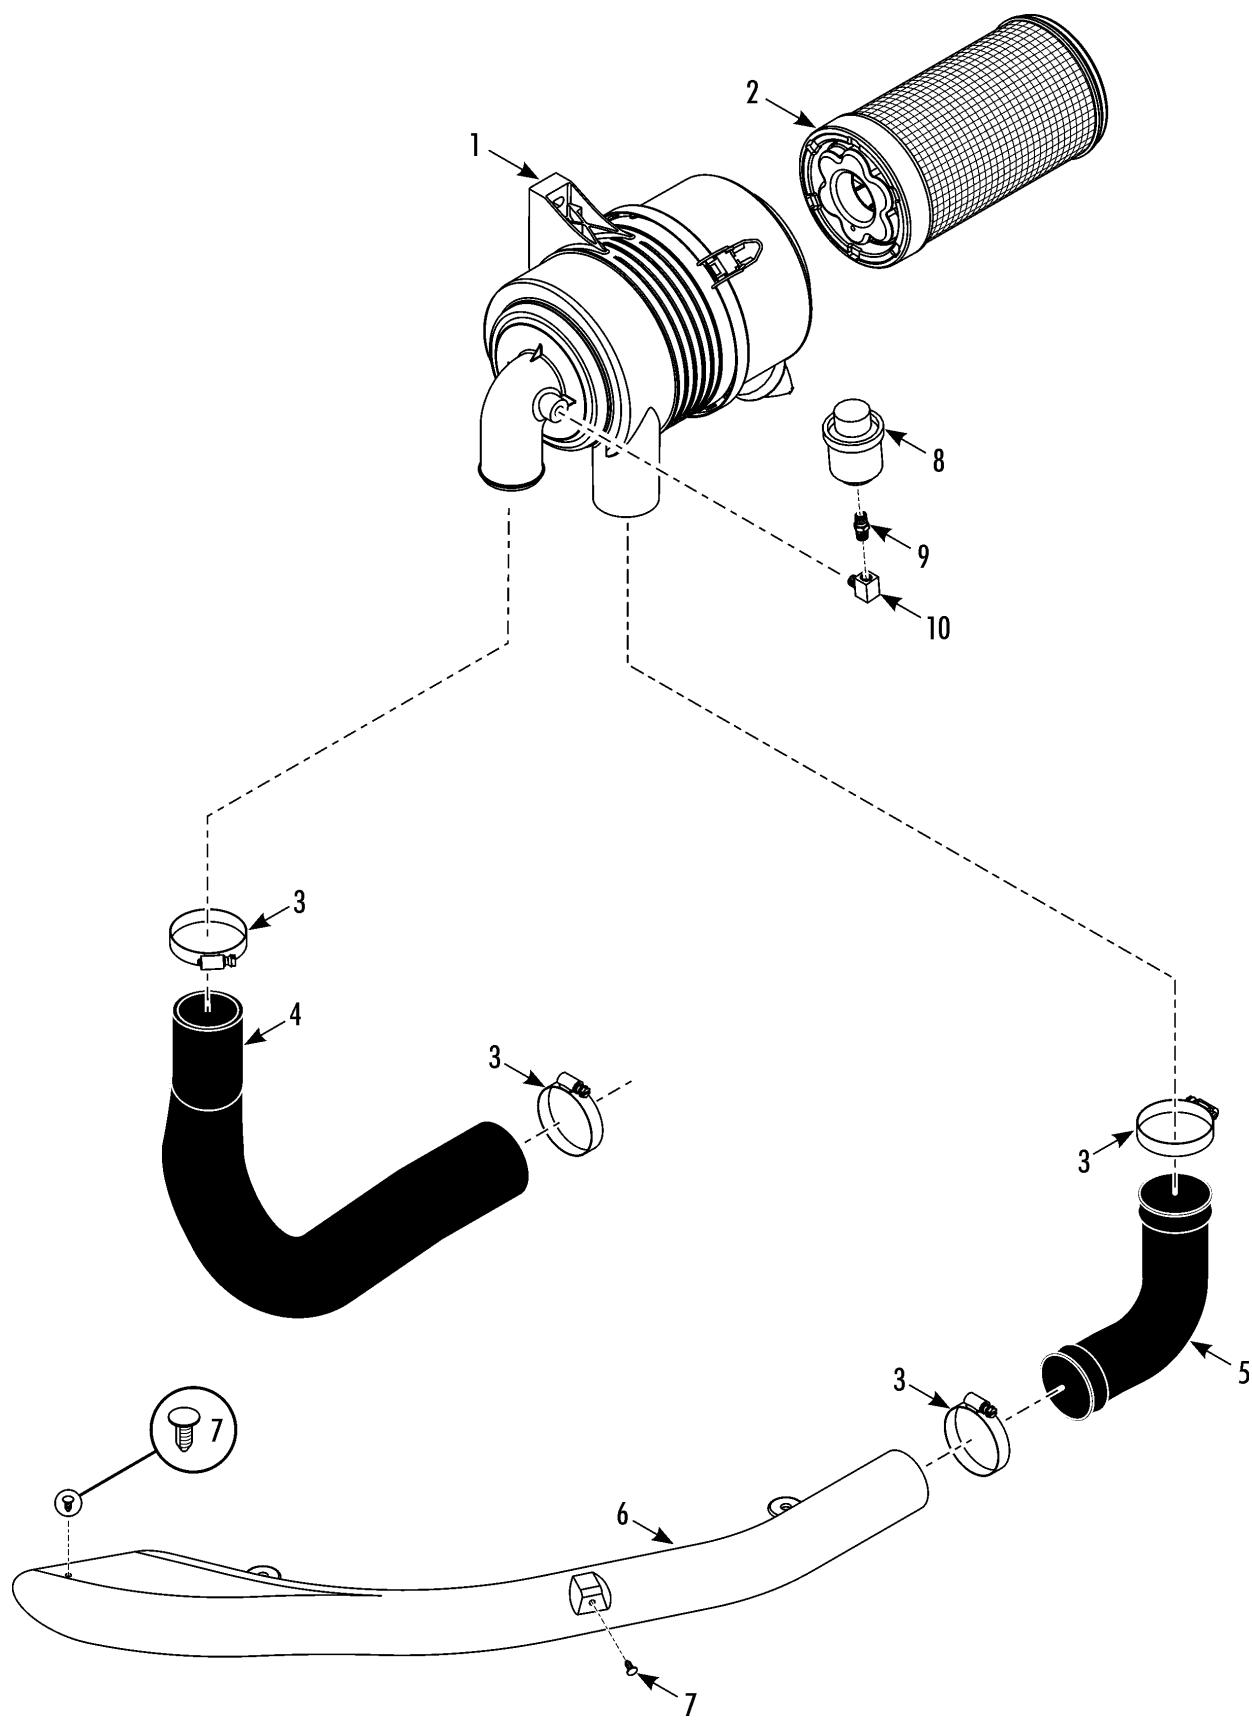

AIR CLEANER GROUP S-600/700Revised
12/17/13**260E1**

REF	PART NO.	DESCRIPTION	QTY
1	12-967	FILTER - air cleaner (EMI 3000)	1
	12-980	FILTER - air cleaner (severe duty, see 272D5)	1
2	11-9955	ELEMENT - air filter (EMI 3000)	1
	11-9956	ELEMENT - air filter (severe duty, see 272D5)	1
	51-2776	SCREW - filter	2
3	55-1636	CLAMP - hose (1.12 to 3.0 in)	4
4	13-1226	TUBE - outlet to engine	1
5	13-1227	TUBE - inlet, elbow	1
6	13-1228	DUCT - air intake	1
	51-2760	SCREW - duct	2
7	91-8167	FASTENER	2
8	11-7757	INDICATOR - air restrictor (optional)	1
9	11-7828	FITTING	1
10	55-460	ELBOW	1

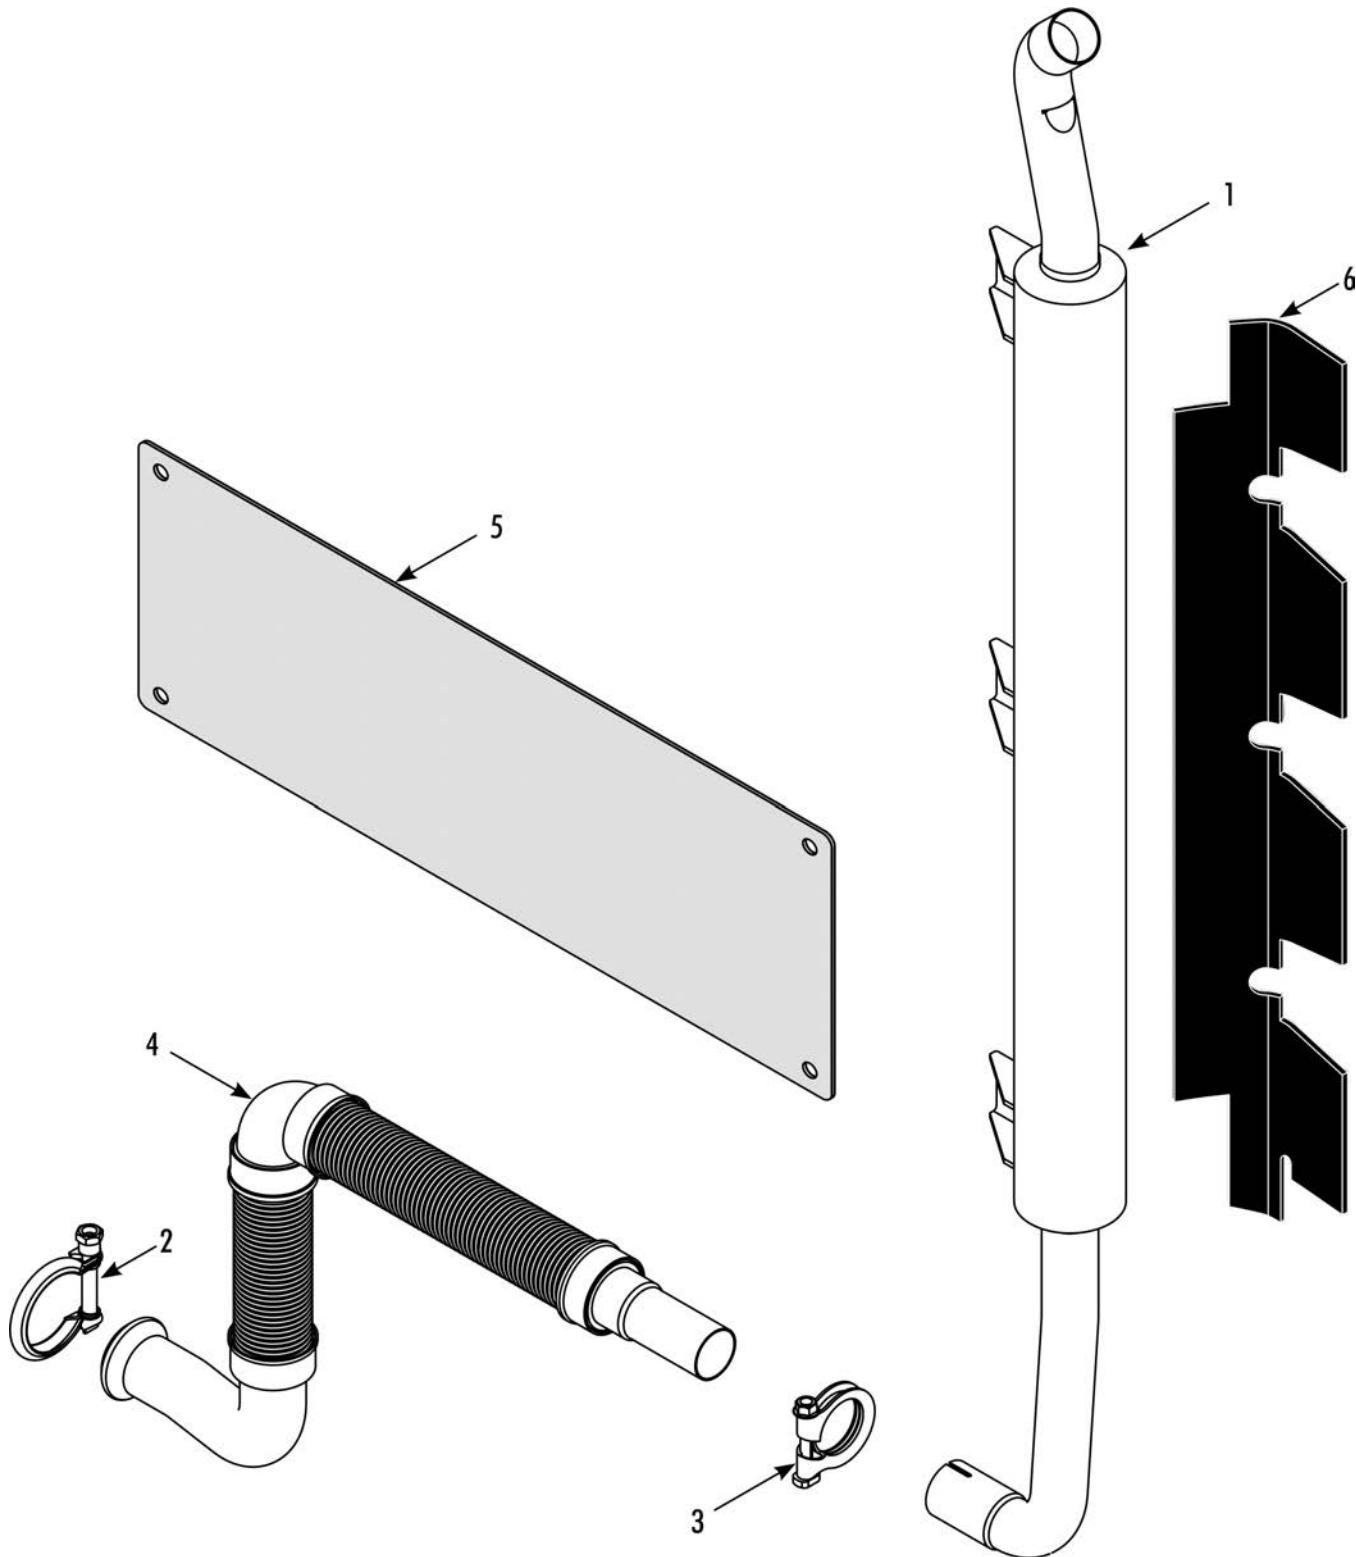


REF	PART NO.	DESCRIPTION	QTY
1	12-998	MUFFLER	1
	51-2760	SCREW - muffler	3
2	13-1217	CLAMP - v-band	1
3	91-4611	CLAMP - muffler	1
4	13-1218	TUBE - exhaust	1
	203-453	SEALER - exhaust	A/R
	51-2760	SCREW - tube	4
	55-7085	FLATWASHER	4
	55-7825	NUT	4
5	13-1220	SHIELD - manifold (metal)	1
	51-189	SCREW - shield	4
	13-1675	SHIELD - manifold (foil)	1
	51-2613	SCREW - shield	6
6	33-5129	INSULATION - muffler	1

272G6 

MUFFLER GROUP

Revised
01/09/14

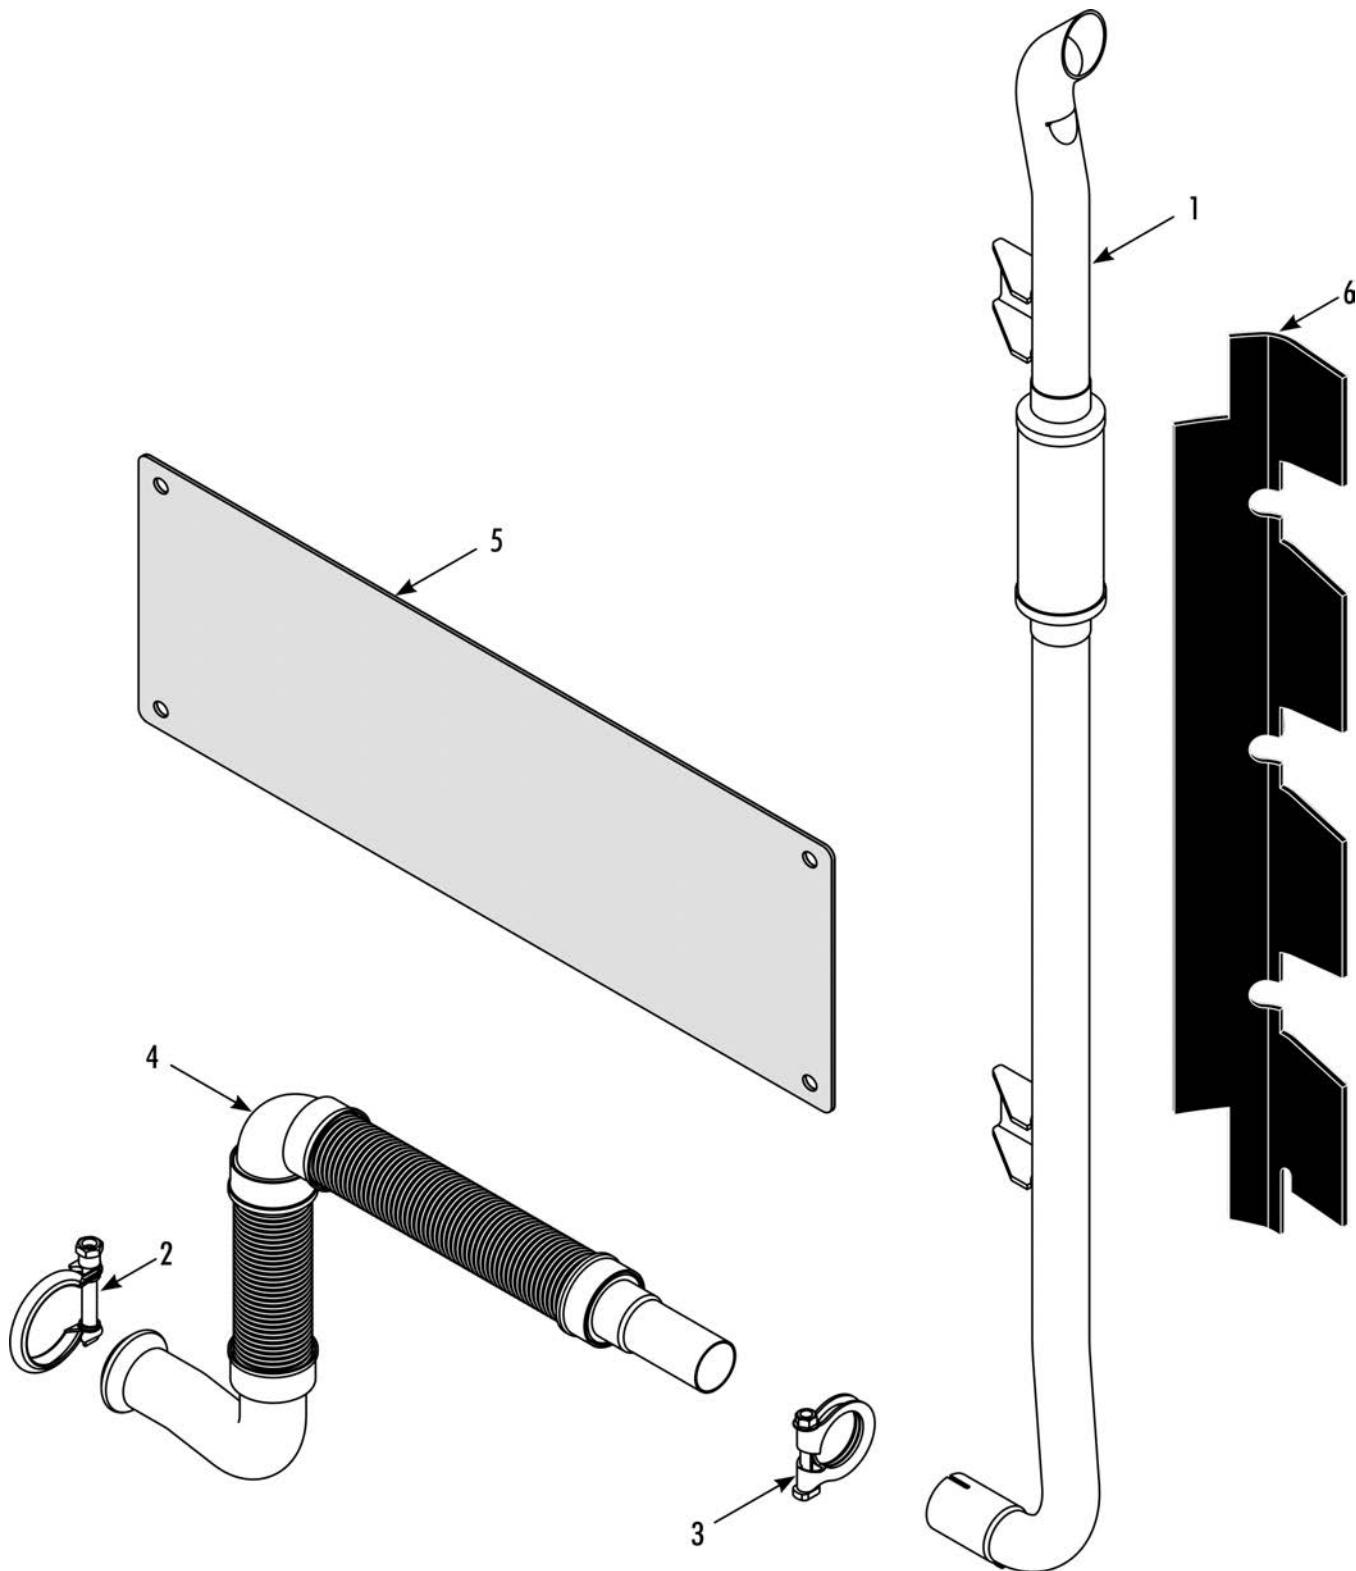


REF	PART NO.	DESCRIPTION	QTY
1	12-1029	MUFFLER	1
	51-2760	SCREW - muffler	3
2	13-1217	CLAMP - v-band	1
3	91-4611	CLAMP - muffler	1
4	13-1983	TUBE - exhaust	1
	203-453	SEALER - exhaust	A/R
	51-2760	SCREW - tube	3
	55-7085	FLATWASHER	4
	55-7825	NUT	4
5	13-1675	SHIELD - manifold (foil)	1
	51-2613	SCREW - shield	6


261C4 

ENGINE MOUNT

Revised
12/20/13

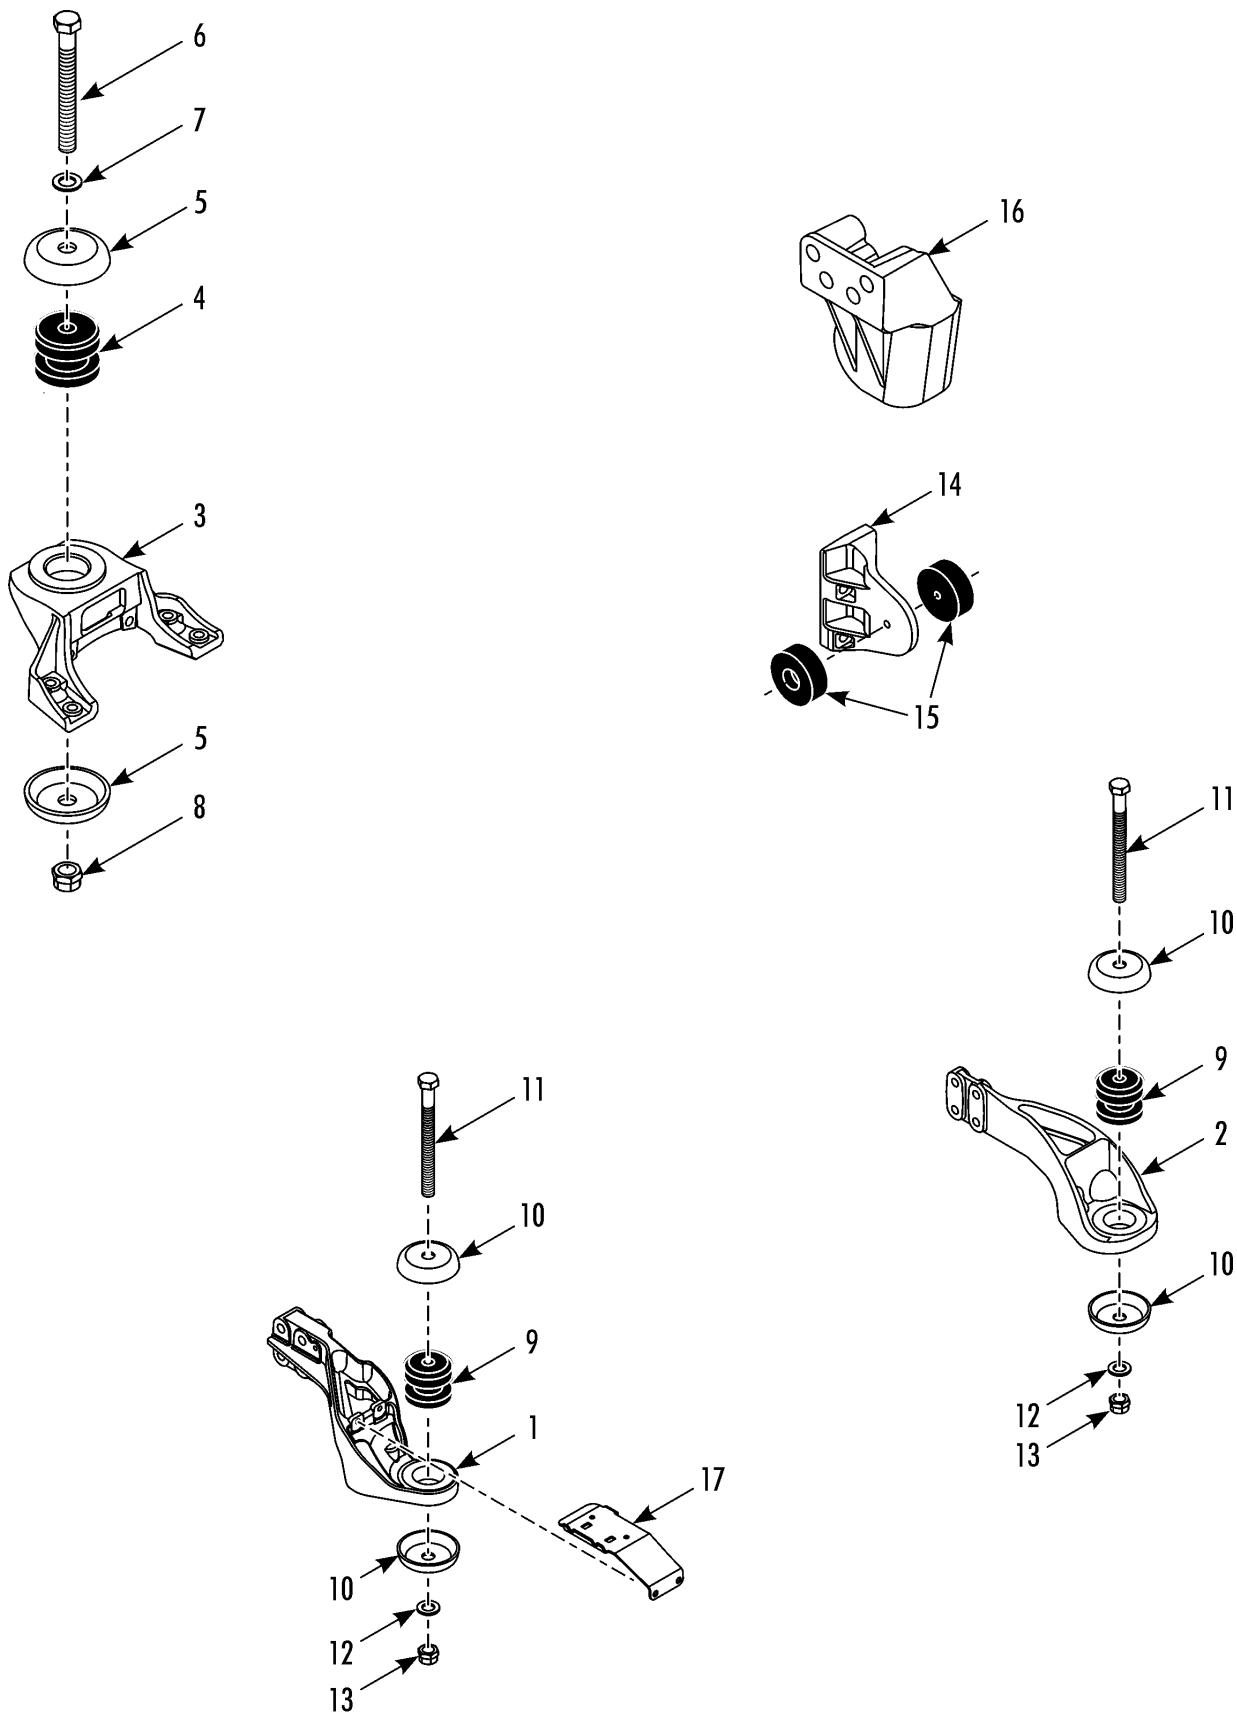


REF	PART NO.	DESCRIPTION	QTY
1	13-1291	BRACKET - engine (front, roadside)	1
2	13-1292	BRACKET - engine (rear, roadside)	1
	55-5589	SCREW - bracket (M10 X 50)	3
	55-7004	SCREW - bracket (M10 X 30)	4
	55-7072	FLATWASHER	7
3	13-1209	BRACKET - engine (rear)	1
	55-5595	SCREW - bracket (M12 X 50)	2
	55-6158	SCREW - bracket (M12 X 40)	4
	55-7072	FLATWASHER	6
4	13-1210	MOUNT - vibration (rear)	1
5	13-1211	CUP - snubbing	2
6	51-2207	SCREW - mount (M22 X 200)	1
7	51-2307	FLATWASHER	1
8	51-2638	NUT	1
9	13-1207	MOUNT - vibration (front)	2
10	13-1208	CUP - snubbing	4
11	51-2273	SCREW - mount (M16 X 180)	2
12	51-152	FLATWASHER	2
13	51-1004	NUT	2
14	13-1213	BLADE - snubber	1
	108-2109	SCREW - blade	4
15	13-1214	SNUBBER	2
	55-7074	SCREW - snubber	1
	55-7007	NUT	1
16	13-1212	CAGE - snubber	1
	55-7168	SCREW - cage	4
17	93-555	BRACKET - harness	1
	55-5955	SCREW - bracket	3
	55-4638	FLATWASHER	3

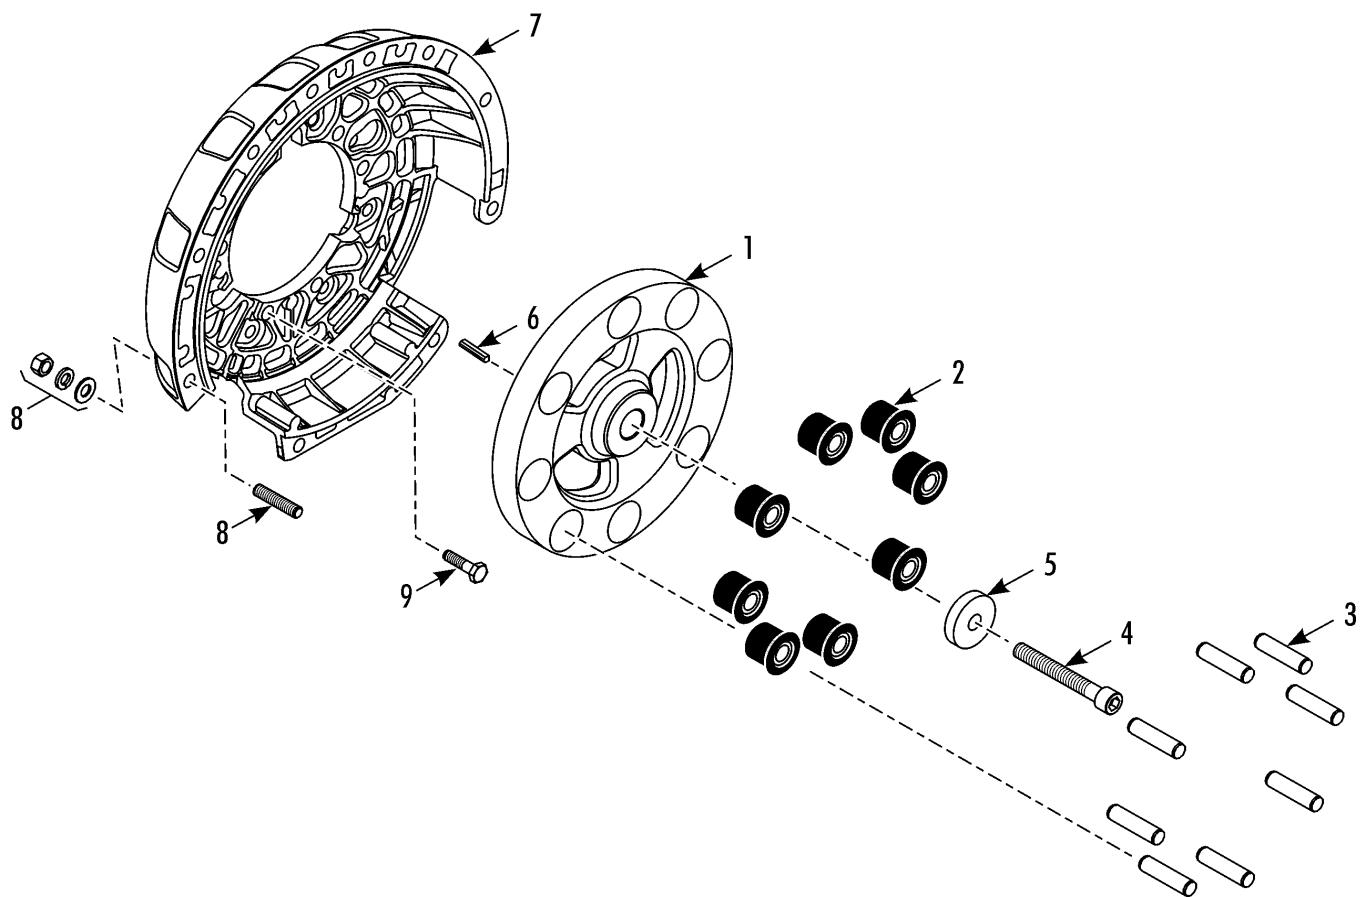


REF	PART NO.	DESCRIPTION	QTY
1	77-3045	COUPLER - compressor (inc bushings)	1
2	77-3044	*BUSHING - drive (set of 8)	1
	204-1114	ADHESIVE - bushing	1
3	51-814	PIN - drive (see note)	8
4	51-220	SCREW - coupling	1
5	55-9300	SPACER	1
6	55-9024	KEY - compressor	1
	204-972	TOOL - keyway alignment	1
7	12-975	FLANGE - compressor	1
8	55-1525	STUD - flange to engine	10
	55-8318	NUT	10
	55-375	LOCKWASHER	10
	55-402	FLATWASHER	10
9	55-1469	SCREW - flange to compressor	6
	55-896	FLATWASHER	6

For more information on coupining bushings and pins, see TT696.

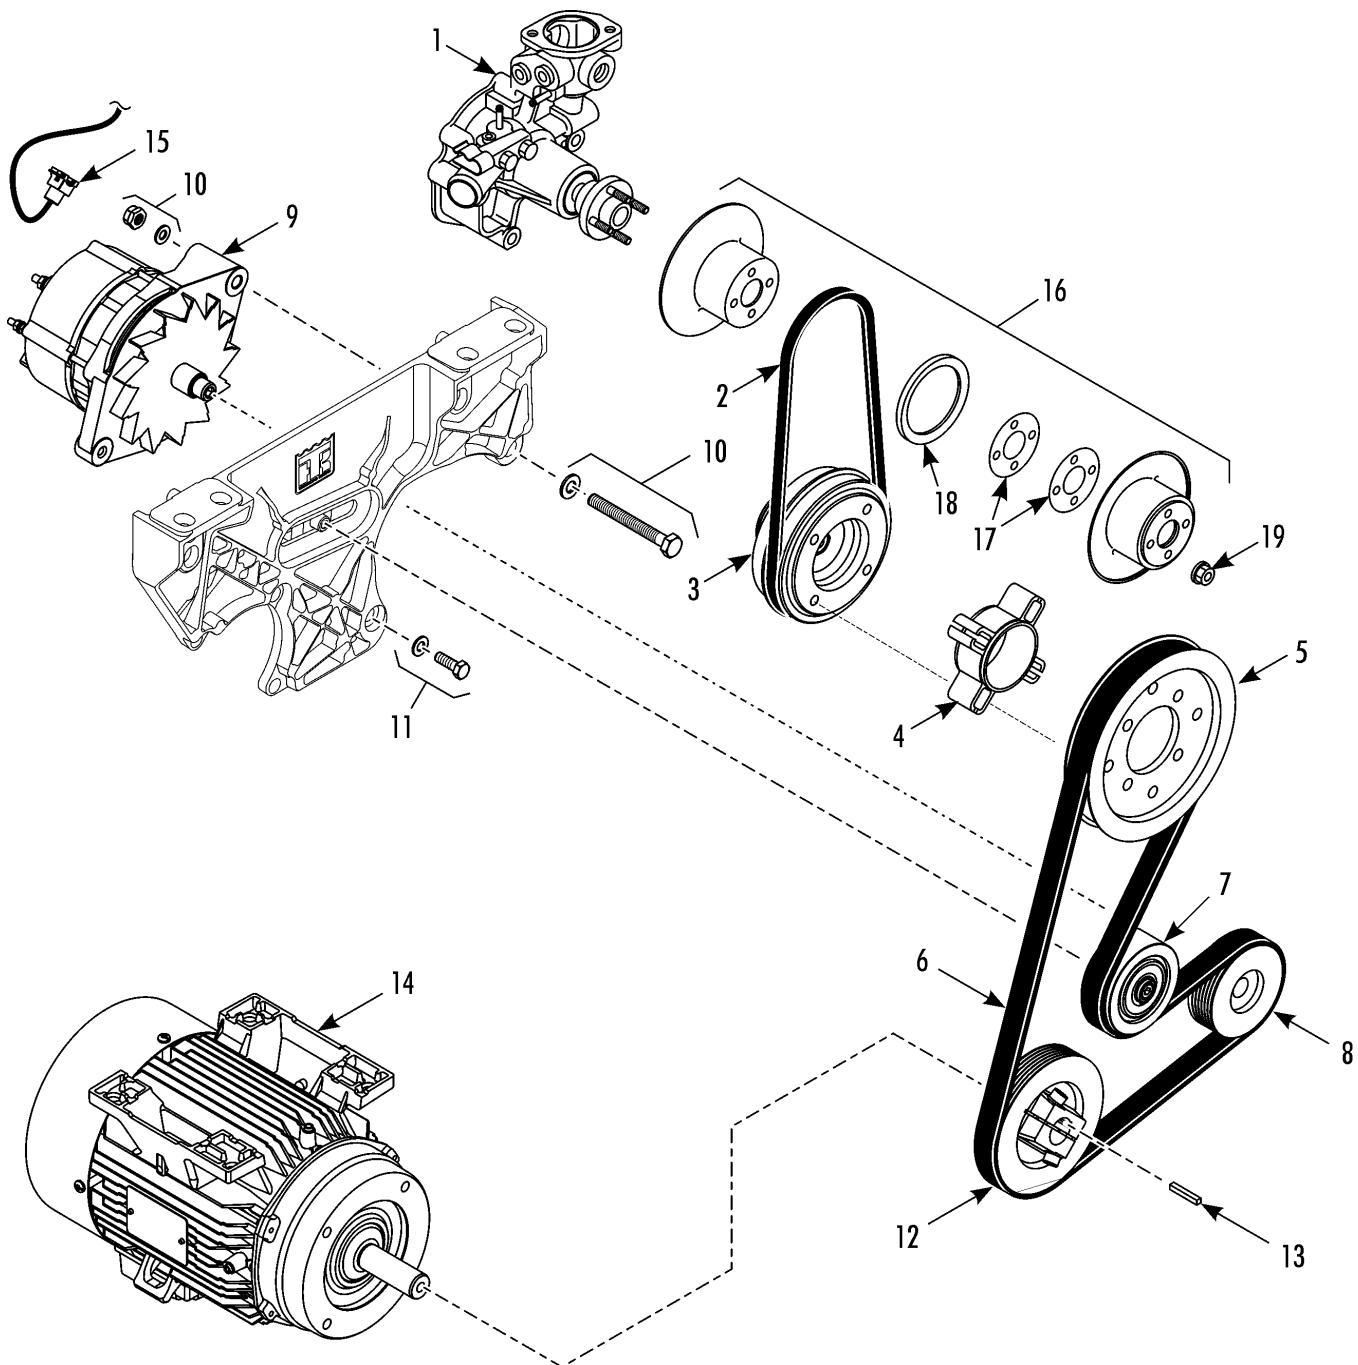


REF	PART NO.	DESCRIPTION	QTY
1	13-1259	PUMP - coolant (see 272F7)	1
2	78-1340	BELT - pump	1
3	13-353	PULLEY - crankshaft (see 272F4)	1
	55-6250	SCREW - pulley	1
	55-6249	WASHER	1
4	70-4124	SPACER - pulley	1
5	77-2691	PULLEY - engine/alternator & generator	1
	55-6279	SCREW - pulley	4
	51-144	FLATWASHER	4
6	78-1876	BELT - alternator & generator	1
7	78-1843	TENSIONER - belt (smooth)	1
8	77-3057	PULLEY - alternator	1
9	45-2254	ALTERNATOR - 37 amp	1
	41-8461	ALTERNATOR - 37 amp (Standard Life Plus)	1
	845-2254	ALTERNATOR - 37 amp (remanufactured)	1
	45-2256	ALTERNATOR - 65 amp (see note)	1
	41-8463	ALTERNATOR - 65 amp (Standard Life Plus, CW)	1
	845-2256	ALTERNATOR - 65 amp (remanufactured)	1
10	55-8751	SCREW - alternator (M10)	1
	55-7072	FLATWASHER	2
	55-7005	NUT	1
11	55-5424	SCREW - alternator (M8)	1
	55-7069	FLATWASHER	1
12	77-3056	PULLEY - generator	1
	51-1005	SCREW - pulley	2
	55-4613	FLATWASHER	2
13	55-3264	KEY	1
14	104-802	GENERATOR (see 261C6)	1
15	42-865	HARNESS - alternator	1
	44-9607	*CONNECTOR - alternator	1
16	13-358	PULLEY - coolant pump	1
17	77-1427	*SHIM (1 mm)	A/R
	77-2752	*SHIM (0.5 mm)	A/R

NOTE: When updating from a 37 amp to a 65 amp alternator, refer to Parts Bulletin PB1504 for harness and fuse modification.

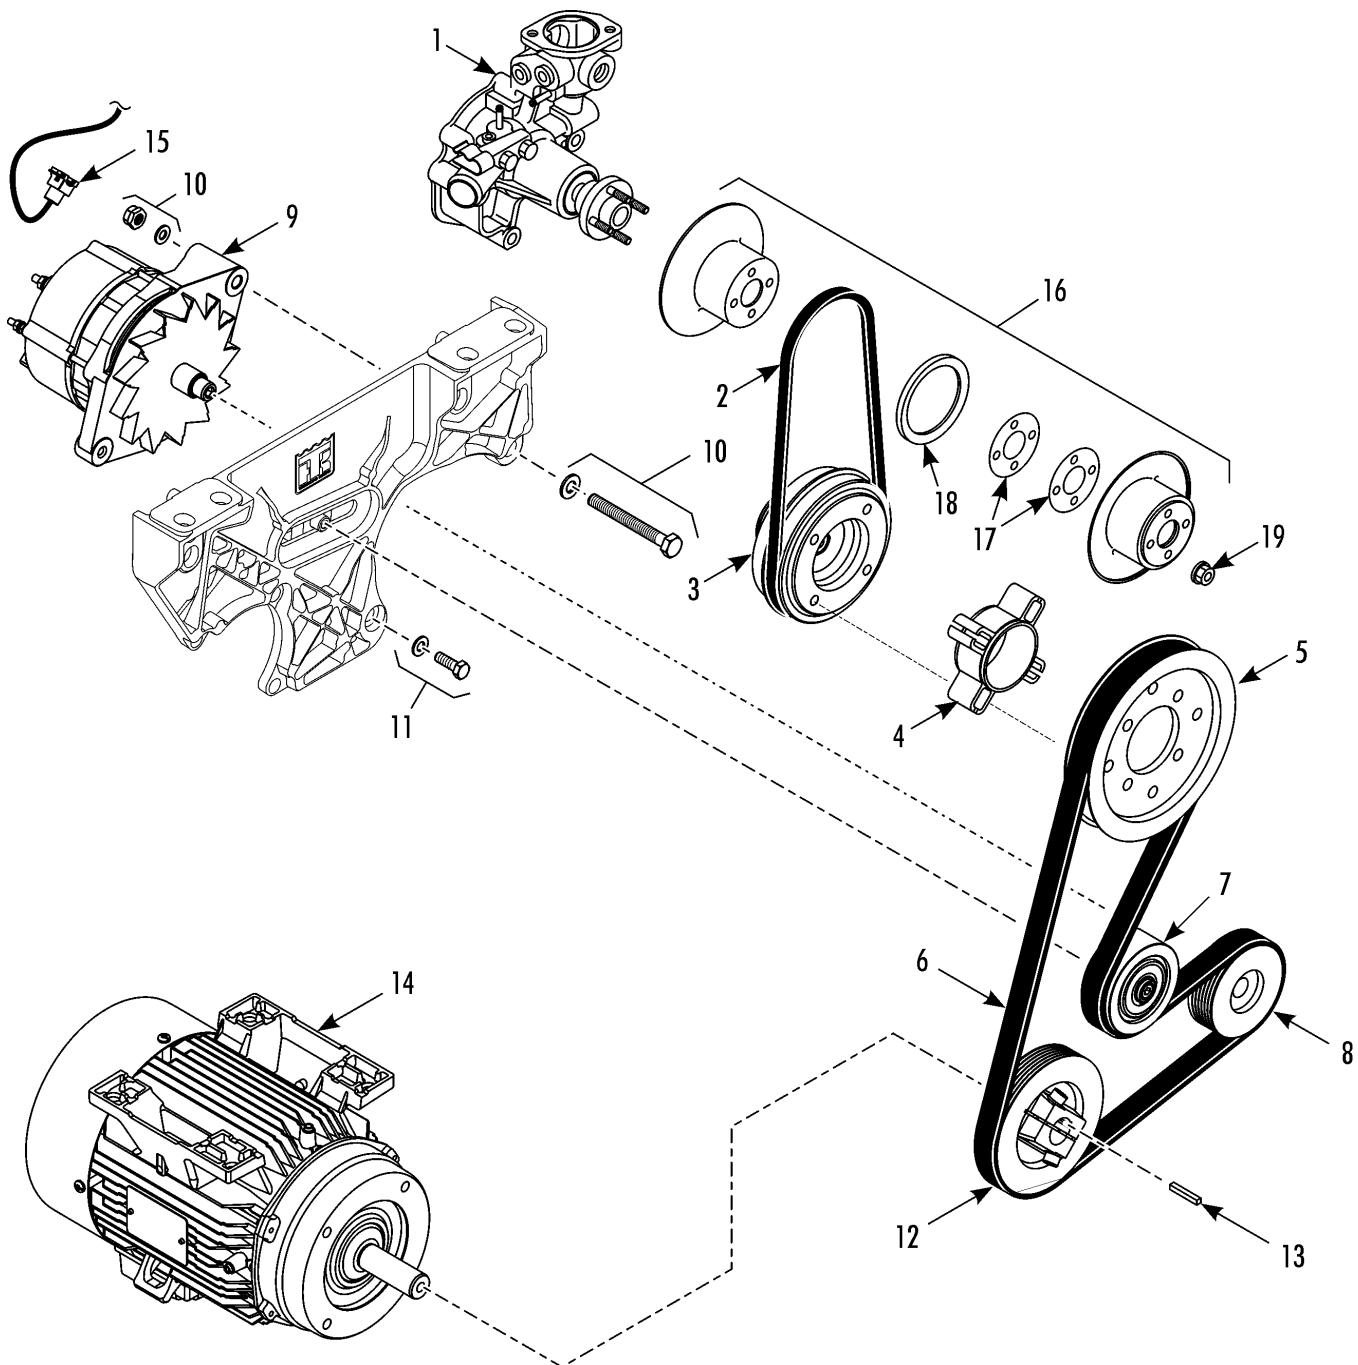

REF	PART NO.	DESCRIPTION	QTY
18	77-1428	*SPACER	1
19	55-5792	NUT	4

NOTE: When updating from a 37 amp to a 65 amp alternator, refer to Parts Bulletin PB1504 for harness and fuse modification.

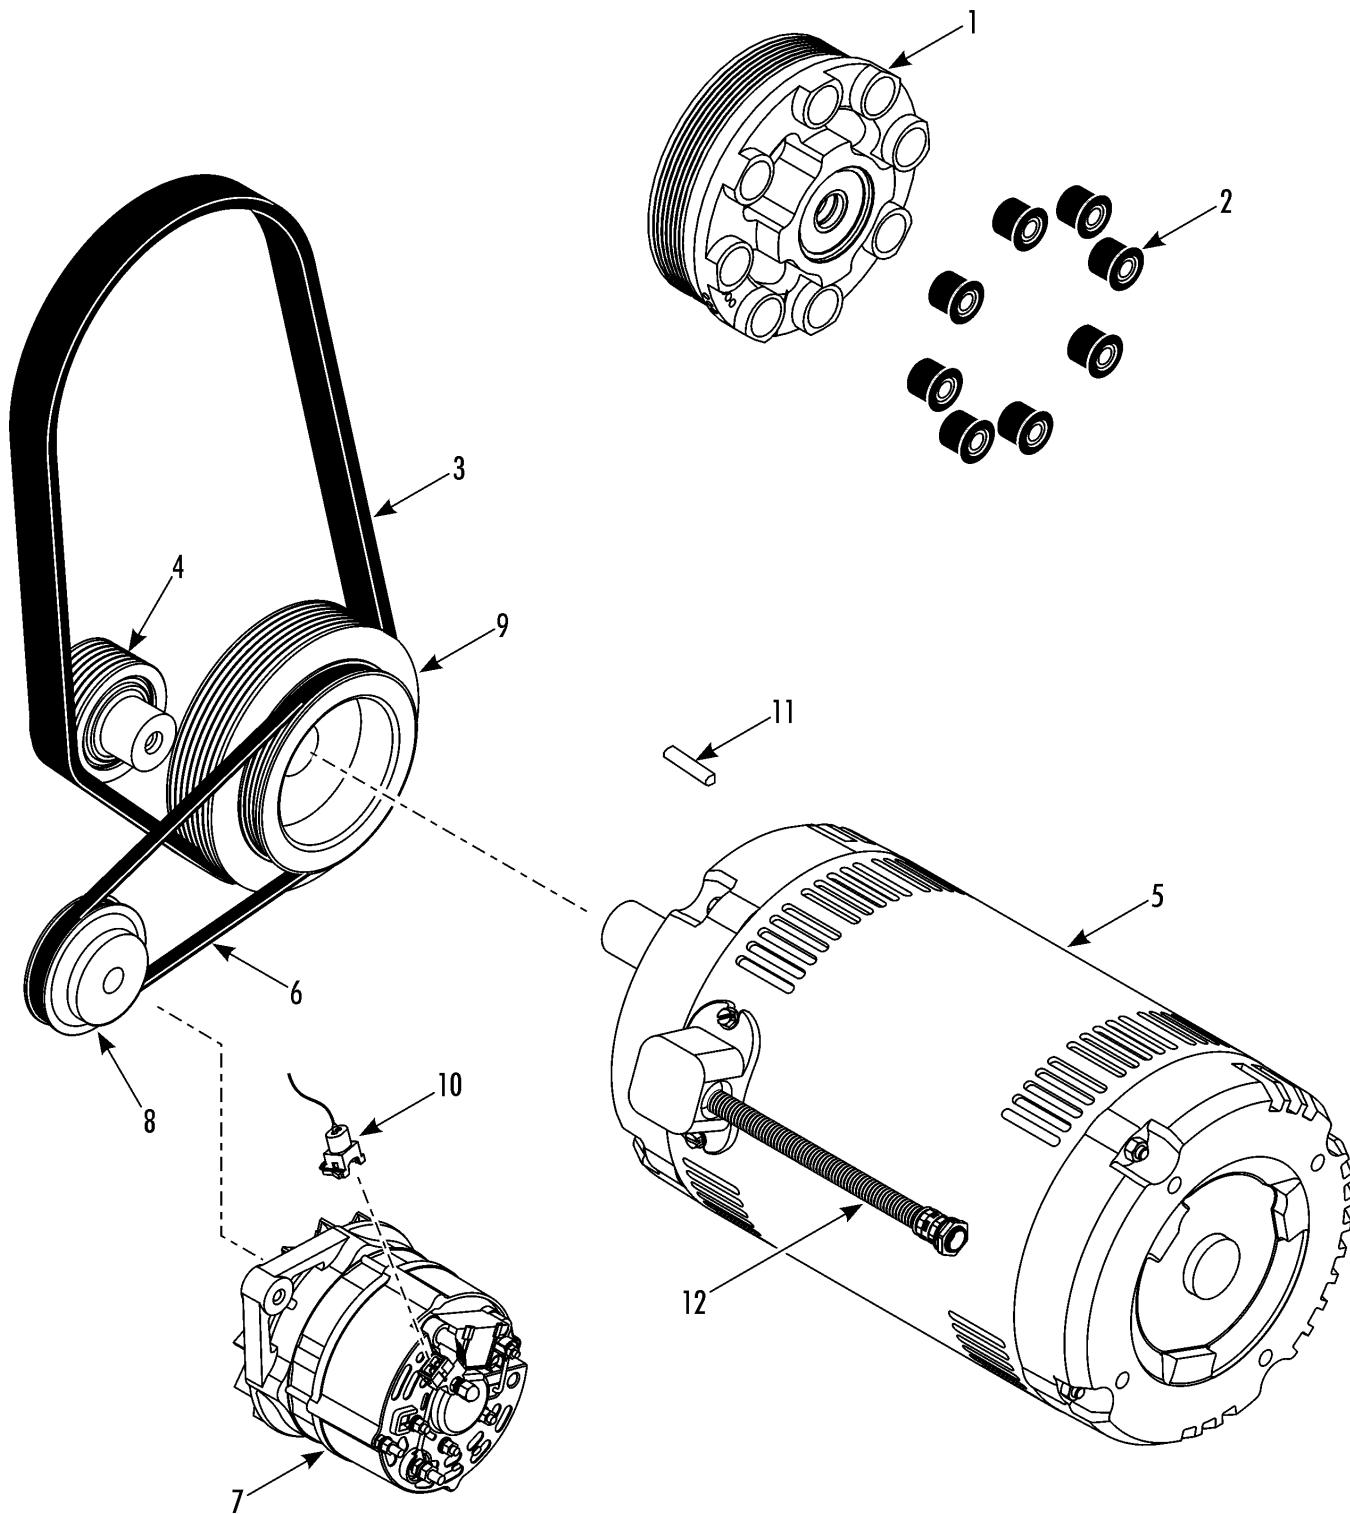

BELT GROUP (Smart Power, compressor end)


Revised
01/01/14



261D0

REF	PART NO.	DESCRIPTION	QTY
1	107-396	CLUTCH	1
2	77-3043	*BUSHING (set of 8)	1
	204-1114	*ADHESIVE - bushing	A/R
	51-220	SCREW - clutch	1
	55-9300	SPACER	1
	55-9024	KEY	1
3	78-1845	BELT - motor to clutch (12 hp)	1
	78-1860	BELT - motor to clutch (19 hp)	1
4	78-1900	TENSIONER (grooved)	1
5	104-825	MOTOR - standby (12 hp, see 261D9)	1
	104-814	MOTOR - standby (19 hp, see 261D9)	1
6	78-1833	BELT - alternator (12 hp)	1
	78-1863	BELT - alternator (19 hp)	1
	78-1833	BELT - alternator (120 amp alt)	1
7	45-2498	ALTERNATOR - 37 amp	1
	45-2257	ALTERNATOR - 65 amp (see note)	1
	45-2259	ALTERNATOR - 120 amp	1
	55-8751	SCREW - pivot (M10)	1
	55-7072	WASHER (M10)	1
	55-7005	NUT (M10)	1
	55-7167	SCREW - adjust (M8)	1
	55-2769	WASHER (M8)	1
8	77-3075	PULLEY - alternator (units w/ 12 hp motor)	1
	77-3085	PULLEY - alternator (units w/ 19 hp motor)	1
9	77-3074	PULLEY - standby motor (12 hp, see 261D9)	1
	77-3084	PULLEY - standby motor (19 hp, see 261D9)	1
10	42-854	HARNESS - alternator	1
11	55-5944	KEY	1
12	42-729	CONDUIT - harness (25 ft)	A/R

NOTE: When updating from a 37 amp to a 65 amp alternator, refer to Parts Bulletin PB1504 for harness and fuse modification.

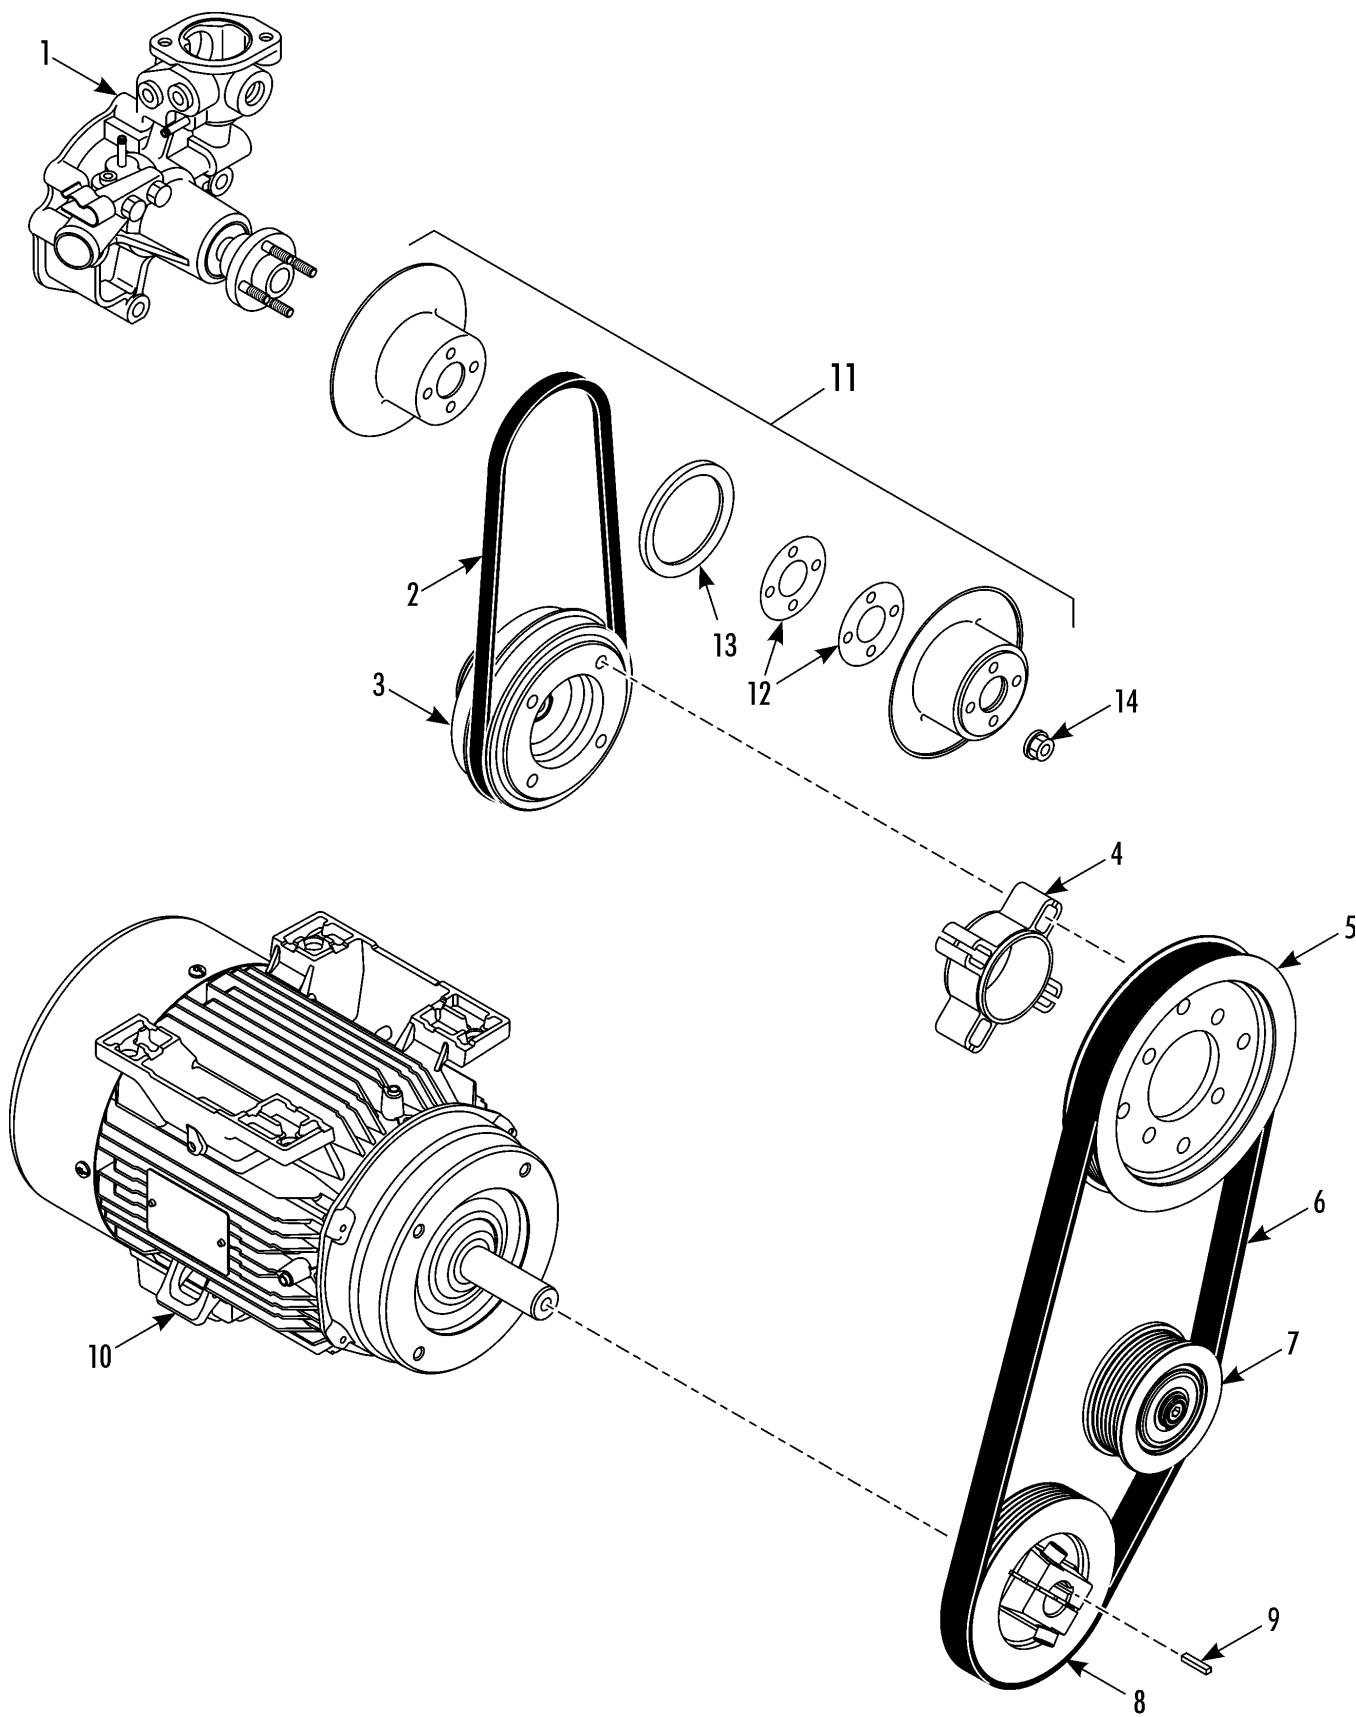


**BELT GROUP (Smart Power / battery charger,
coolant pump end)**

Revised
02/22/14




261E1

REF	PART NO.	DESCRIPTION	QTY
1	13-1259	PUMP - coolant (see 272F7)	1
2	78-1340	BELT - pump	1
3	13-353	PULLEY - crankshaft	1
4	70-4124	SPACER - pulley	1
5	77-2691	PULLEY - engine/alternator & generator	1
	55-6279	SCREW - pulley	4
	51-144	FLATWASHER	4
6	78-1844	BELT - generator	1
7	78-1842	TENSIONER - belt (grooved)	1
	55-7069	FLATWASHER	1
8	77-3056	PULLEY - generator	1
	51-1005	SCREW - pulley	2
	55-4613	FLATWASHER	2
9	55-3264	KEY - generator	1
10	104-802	GENERATOR (see 261C6)	1
11	13-358	PULLEY - coolant pump	1
12	77-1427	*SHIM (1 mm)	A/R
	77-2752	*SHIM (0.5 mm)	A/R
13	77-1428	*SPACER	1
14	55-5792	NUT	4

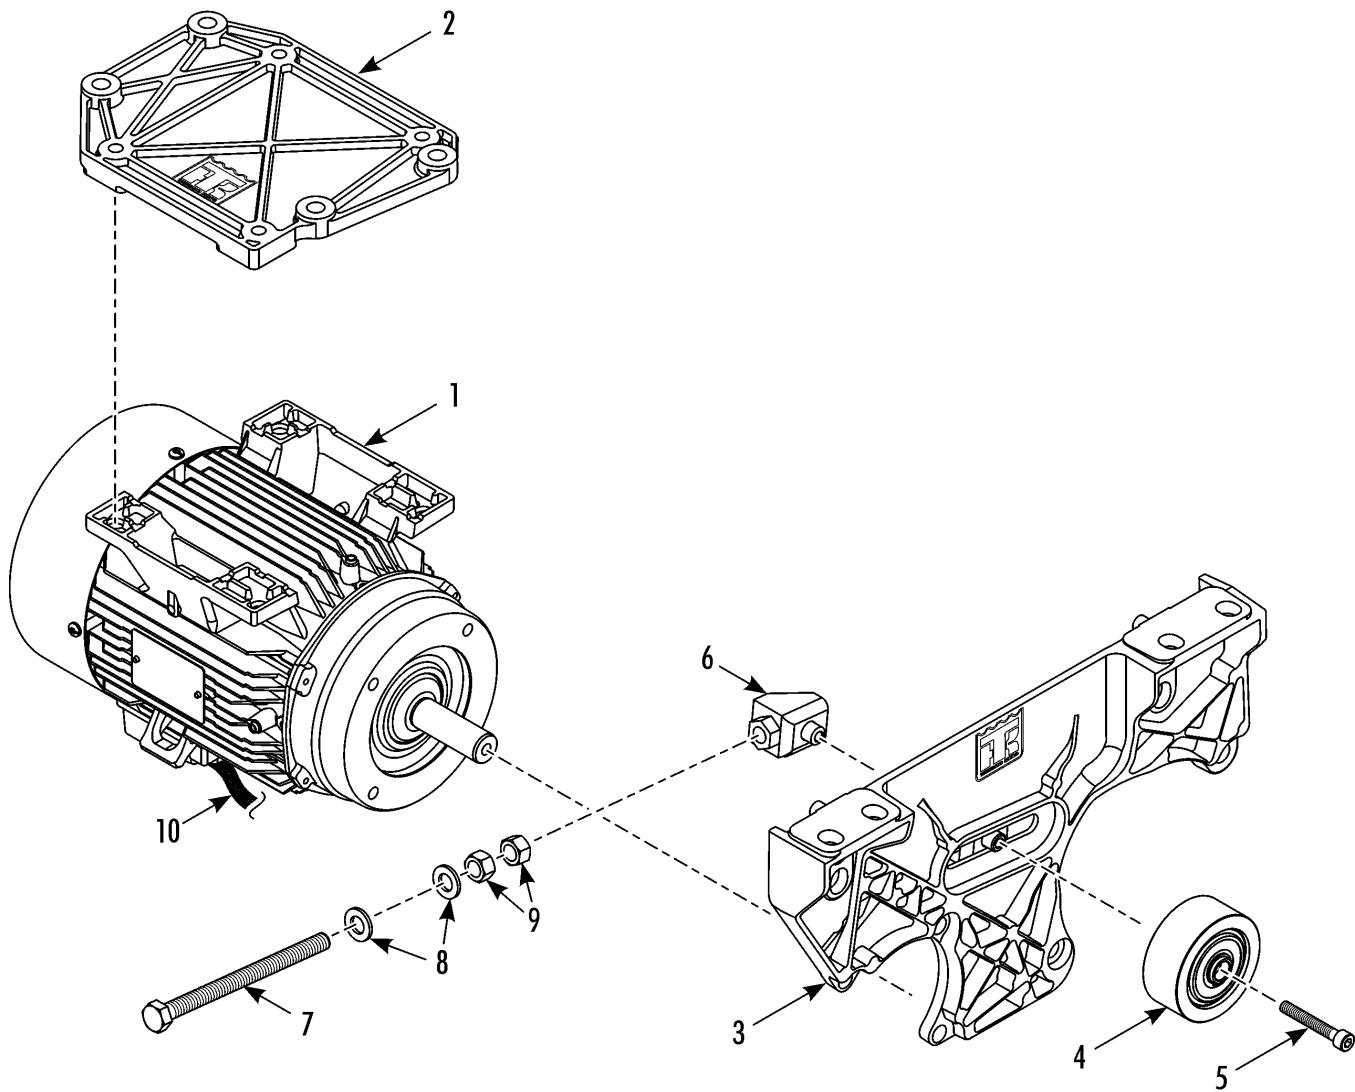




REF	PART NO.	DESCRIPTION	QTY
1	104-802	GENERATOR	1
	55-5424	SCREW - generator (M8)	3
	55-7069	FLATWASHER	3
	55-4680	SCREW - generator (M10)	4
	55-7072	FLATWASHER	4
2	93-273	PLATE - generator	1
	55-4680	SCREW - plate	4
	55-7072	FLATWASHER	4
3	98-9091	BRACKET - generator	1
	55-9726	SCREW - bracket	8
	55-5914	FLATWASHER	8
4	78-1843	TENSIONER - belt	1
5	51-2210	SCREW - tensioner (M8)	1
6	92-9662	SLIDER - tensioner	1
7	51-2384	SCREW - slider (M12)	1
8	55-5914	FLATWASHER	2
9	55-8471	NUT	2
10	42-755	HARNESS - generator (see 261F4)	1

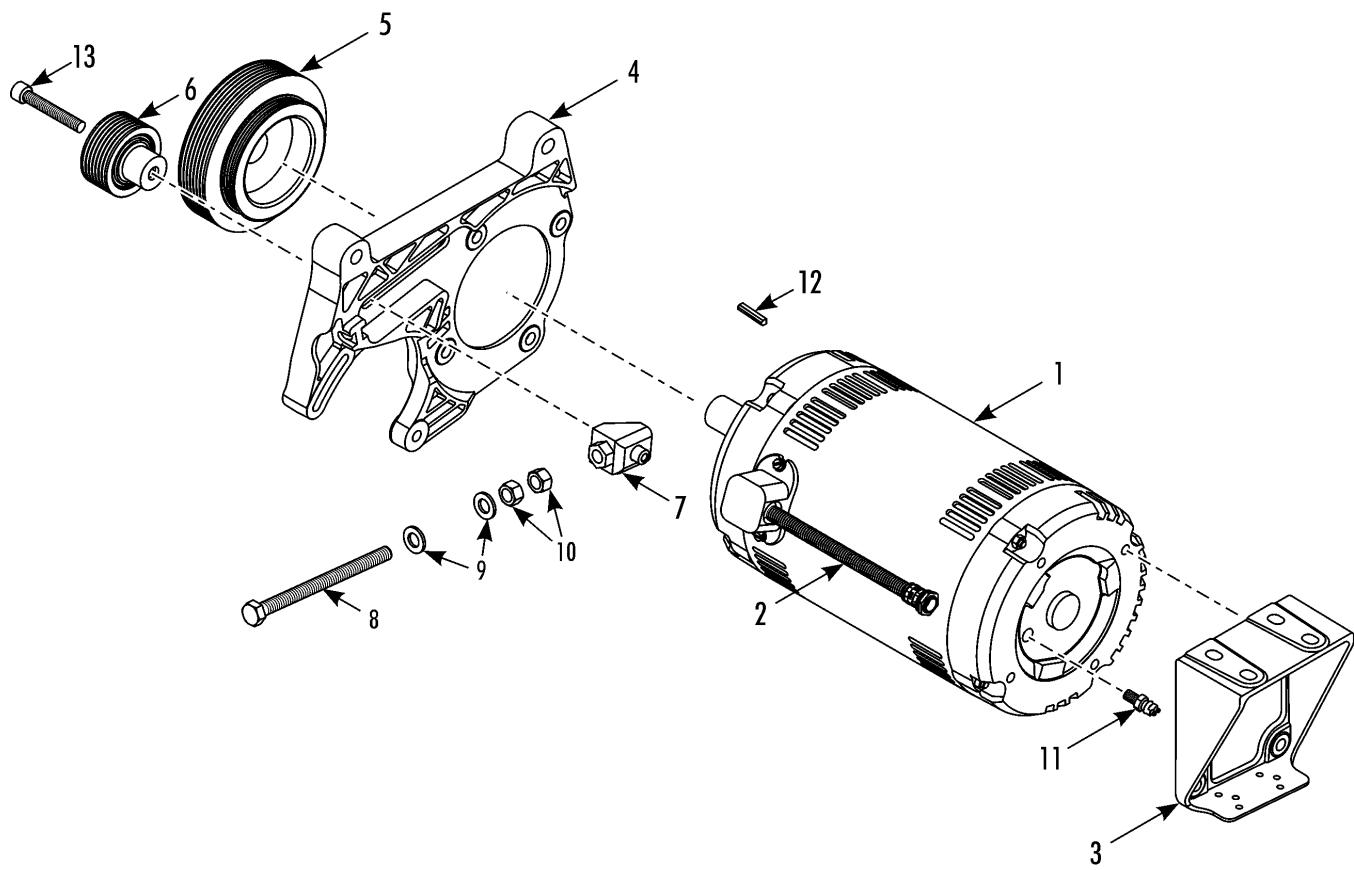

STANDBY MOTOR (Smart Power)Revised
01/24/14**261D9**

REF	PART NO.	DESCRIPTION	QTY
1	104-825	MOTOR - standby (12 hp)	1
	104-826	MOTOR - standby (19 hp)	1
	51-140	SCREW - motor	7
	55-5914	FLATWASHER	7
2	42-729	CONDUIT - harness (25 ft)	A/R
	51-2309	FITTING - conduit (M25)	1
	51-2247	FITTING - conduit (M32)	1
	51-2253	WASHER - sealing	1
	51-2251	NUT	1
	33-4942	O-RING	1
3	92-9880	MOUNT - motor (opposite drive end)	1
	51-140	SCREW - mount	4
	55-5914	FLATWASHER	4
4	92-9881	MOUNT - motor (drive end)	1
	51-2310	SCREW - mount	2
5	77-3074	PULLEY - standby motor (12 hp)	1
	77-3084	PULLEY - standby motor (S-600, 19 hp)	1
	77-3139	PULLEY - standby motor (S-700, 19 hp)	1
	55-9724	SCREW - pulley	2
	55-4613	FLATWASHER	2
	78-1900	KIT - tensioner (grooved)	1
6	13-1982	*TENSIONER - belt	1
7	93-1185	*SLIDER - tensioner	1
8	51-2384	SCREW - slider (M12)	1
9	55-5914	FLATWASHER	2
10	55-8471	NUT	2
11	42-853	SENSOR - rpm	1
12	55-5944	KEY	1
13	55-8586	SCREW - tensioner (M10)	1
	55-4625	FLATWASHER	1

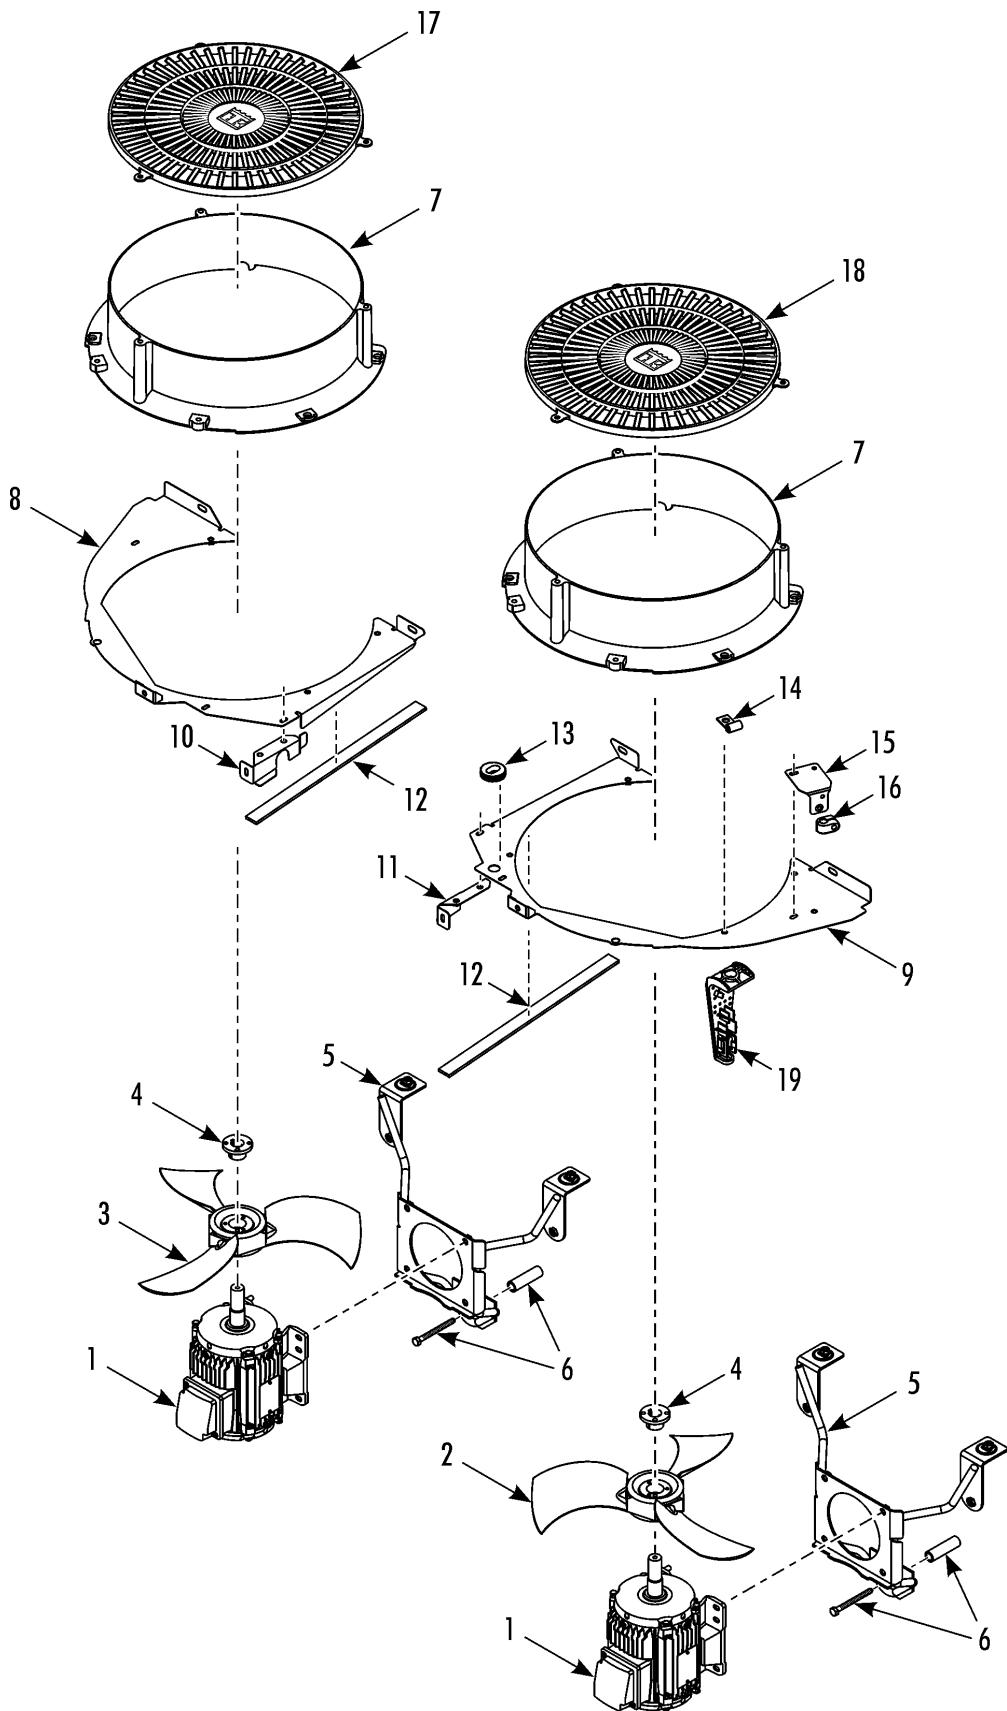


CONDENSER FANS GROUP

Revised
01/18/14



261AO

REF	PART NO.	DESCRIPTION	QTY
1	104-804	MOTOR - condenser	2
	42-1280	*PROTECTOR - thermal	1
	51-2776	SCREW - motor	8
2	78-1879	FAN - condenser (roadside, CCW)	1
3	78-1825	FAN - condenser (curbside, CW)	1
4	77-3073	*BUSHING - fan	2
5	93-774	BRACKET - motor (condenser)	2
	51-2770	SCREW - bracket	8
6	51-2593	BUSHING - bulkhead	2
	51-891	SCREW - bushing (90 mm)	2
	55-2904	WASHER	2
7	78-1841	ORIFICE - fan	2
	51-2759	SCREW - orifice	8
	108-1850	WASHER	8
8	93-1217	PANEL - fan (top, curbside)	1
9	93-1218	PANEL - fan (top, roadside)	1
	93-234	PANEL - fan (top, roadside, S-700)	1
	51-2758	SCREW - panel (16 mm)	5
	51-2770	SCREW - panel (20 mm)	4
	51-953	WASHER	9
10	92-9672	SHIELD - condenser (curbside)	1
11	92-9671	SHIELD - condenser (roadside)	1
	51-2758	SCREW - shield	4
12	99-8562	STRIP - sealing (25 ft, cut to length)	A/R
13	33-4923	GROMMET	1
14	51-176	CLAMP - harness (before Oct 13)	1
15	93-235	BRACKET - sensor (before Oct 13)	1
	51-2758	SCREW - bracket (before Oct 13)	1
16	55-6388	CLAMP - sensor (before Oct 13)	1
	51-2766	SCREW - clamp (before Oct 13)	1
17	92-9673	GRILLE - fan guard (curbside, CW)	1
18	93-395	GRILLE - fan guard (roadside, CCW)	1
	51-2759	SCREW - grille	6

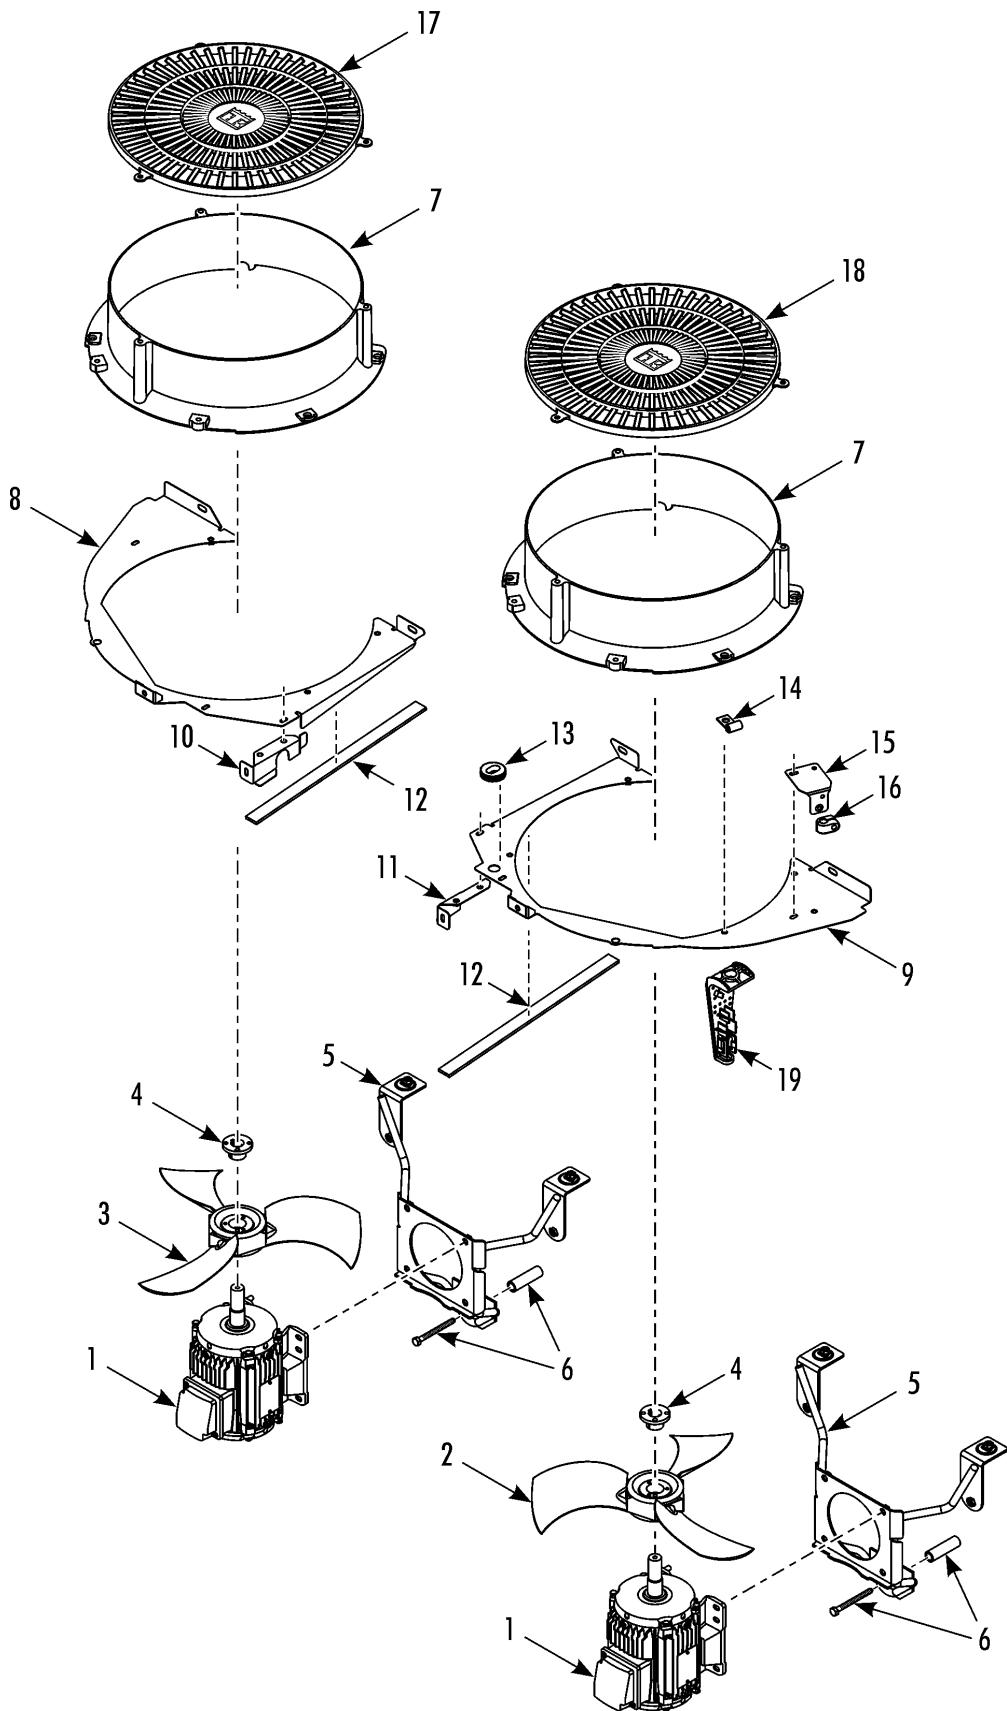


Revised
01/18/14

CONDENSER FANS GROUP



261AO

REF	PART NO.	DESCRIPTION	QTY
19	93-1442	BRACKET - sensor (Oct 13 & after)	1

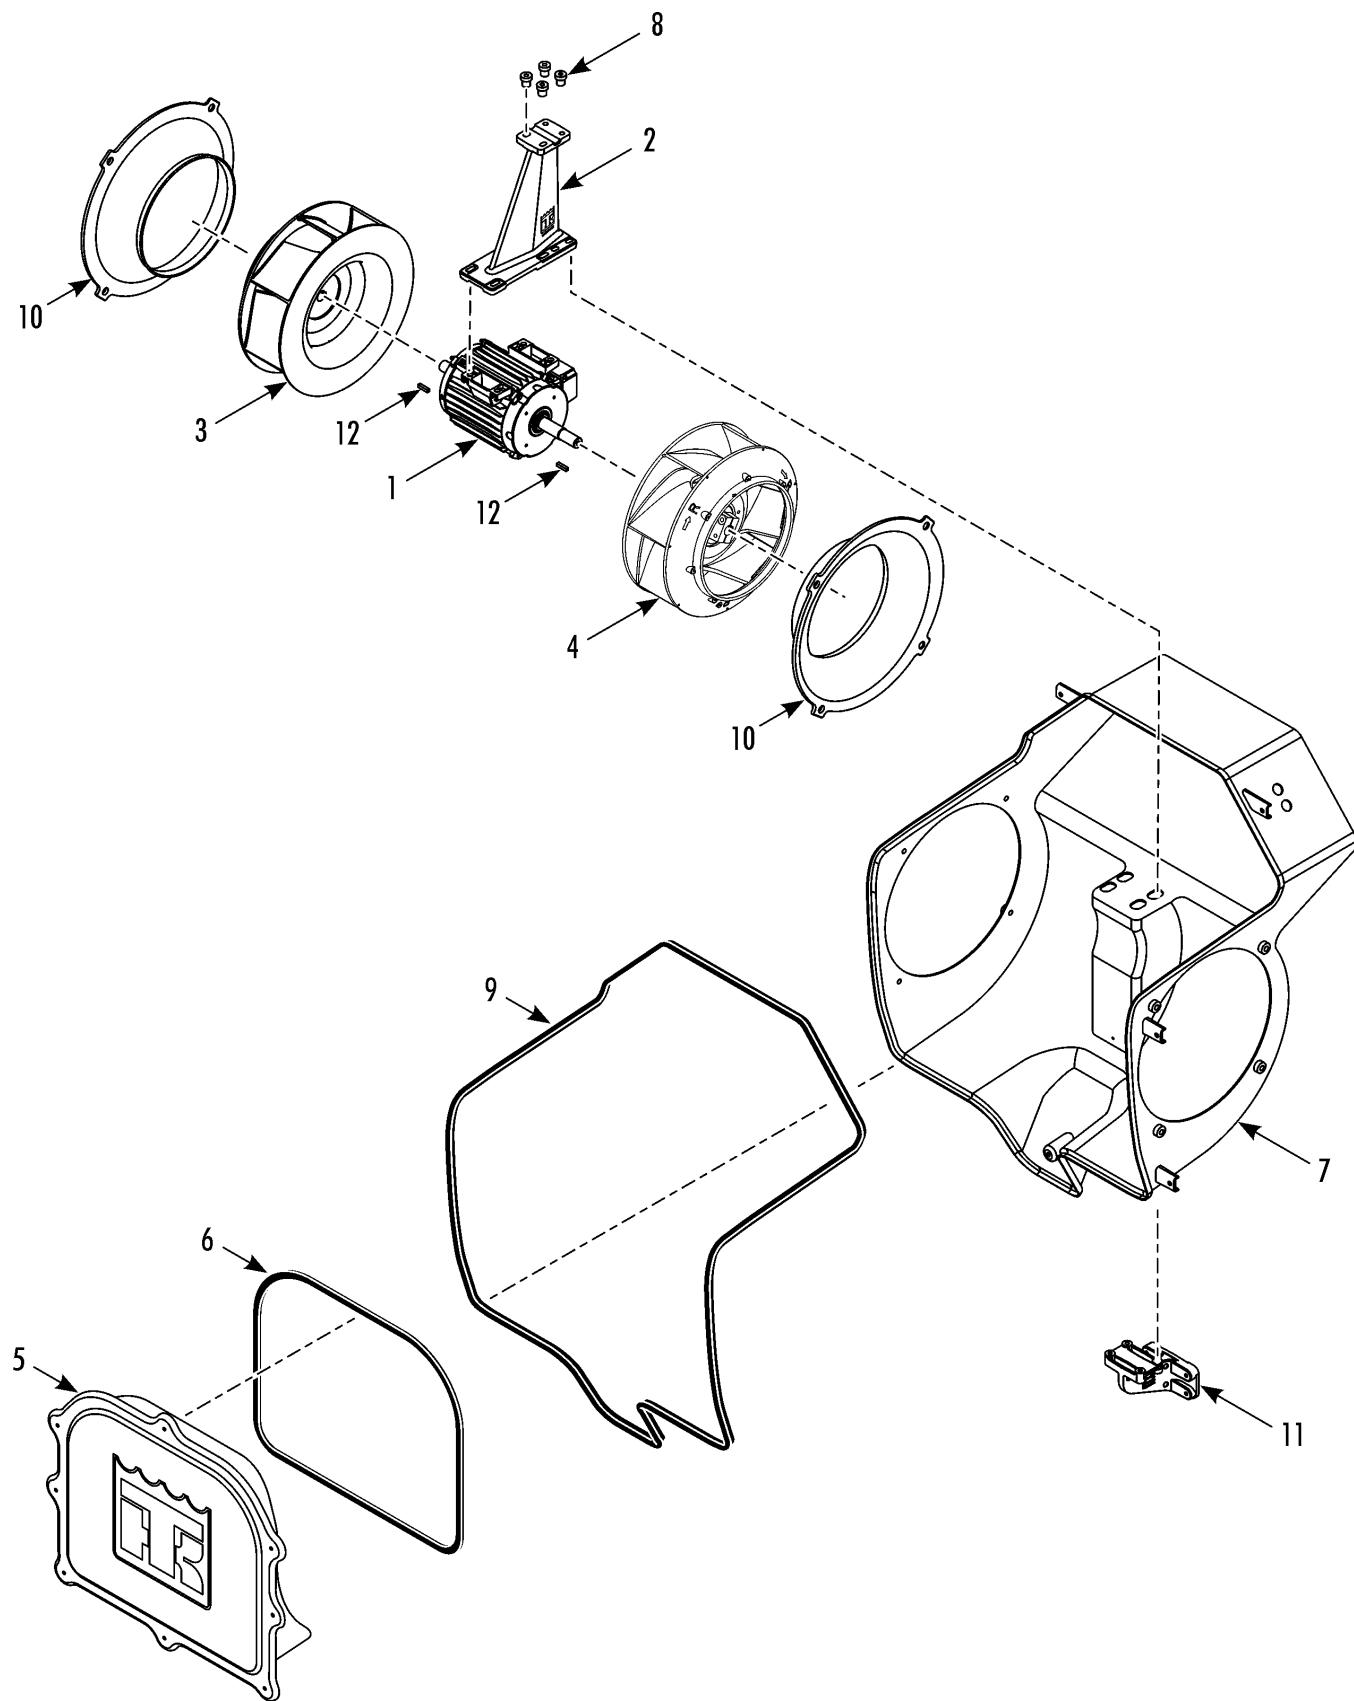


EVAPORATOR BLOWER GROUP

Revised
01/24/14



261B7

REF	PART NO.	DESCRIPTION	QTY
1	104-809	MOTOR - evaporator blower (S-600, C-600)	1
	104-823	MOTOR - evaporator blower (S-600M, S-700)	1
	42-1278	*PROTECTOR - thermal (high speed)	1
	42-1279	*PROTECTOR - thermal (low speed)	1
	55-7828	SCREW - motor	4
	55-7085	FLATWASHER	4
2	92-9686	BRACKET - motor	1
	51-1119	SCREW - bracket	4
	55-4184	WASHER	4
	55-7825	NUT	4
3	78-1819	BLOWER - evaporator (curbside)	1
4	78-1818	BLOWER - evaporator (roadside)	1
	55-8137	SCREW - blower	4
	55-7085	FLATWASHER	4
5	98-9133	DOOR - access	1
6	33-4924	*SEAL - access door	1
7	98-8972	HOUSING - evaporator blower	1
8	51-2225	BUSHING - evaporator blower (top)	4
9	98-8973	INLET - spinning	2
	51-2200	SCREW - inlet	12
	51-953	WASHER	12
12	55-3264	KEY - motor	2
11	92-9687	BRACKET - housing	1
	55-8137	SCREW - bracket	4
	51-953	WASHER	4

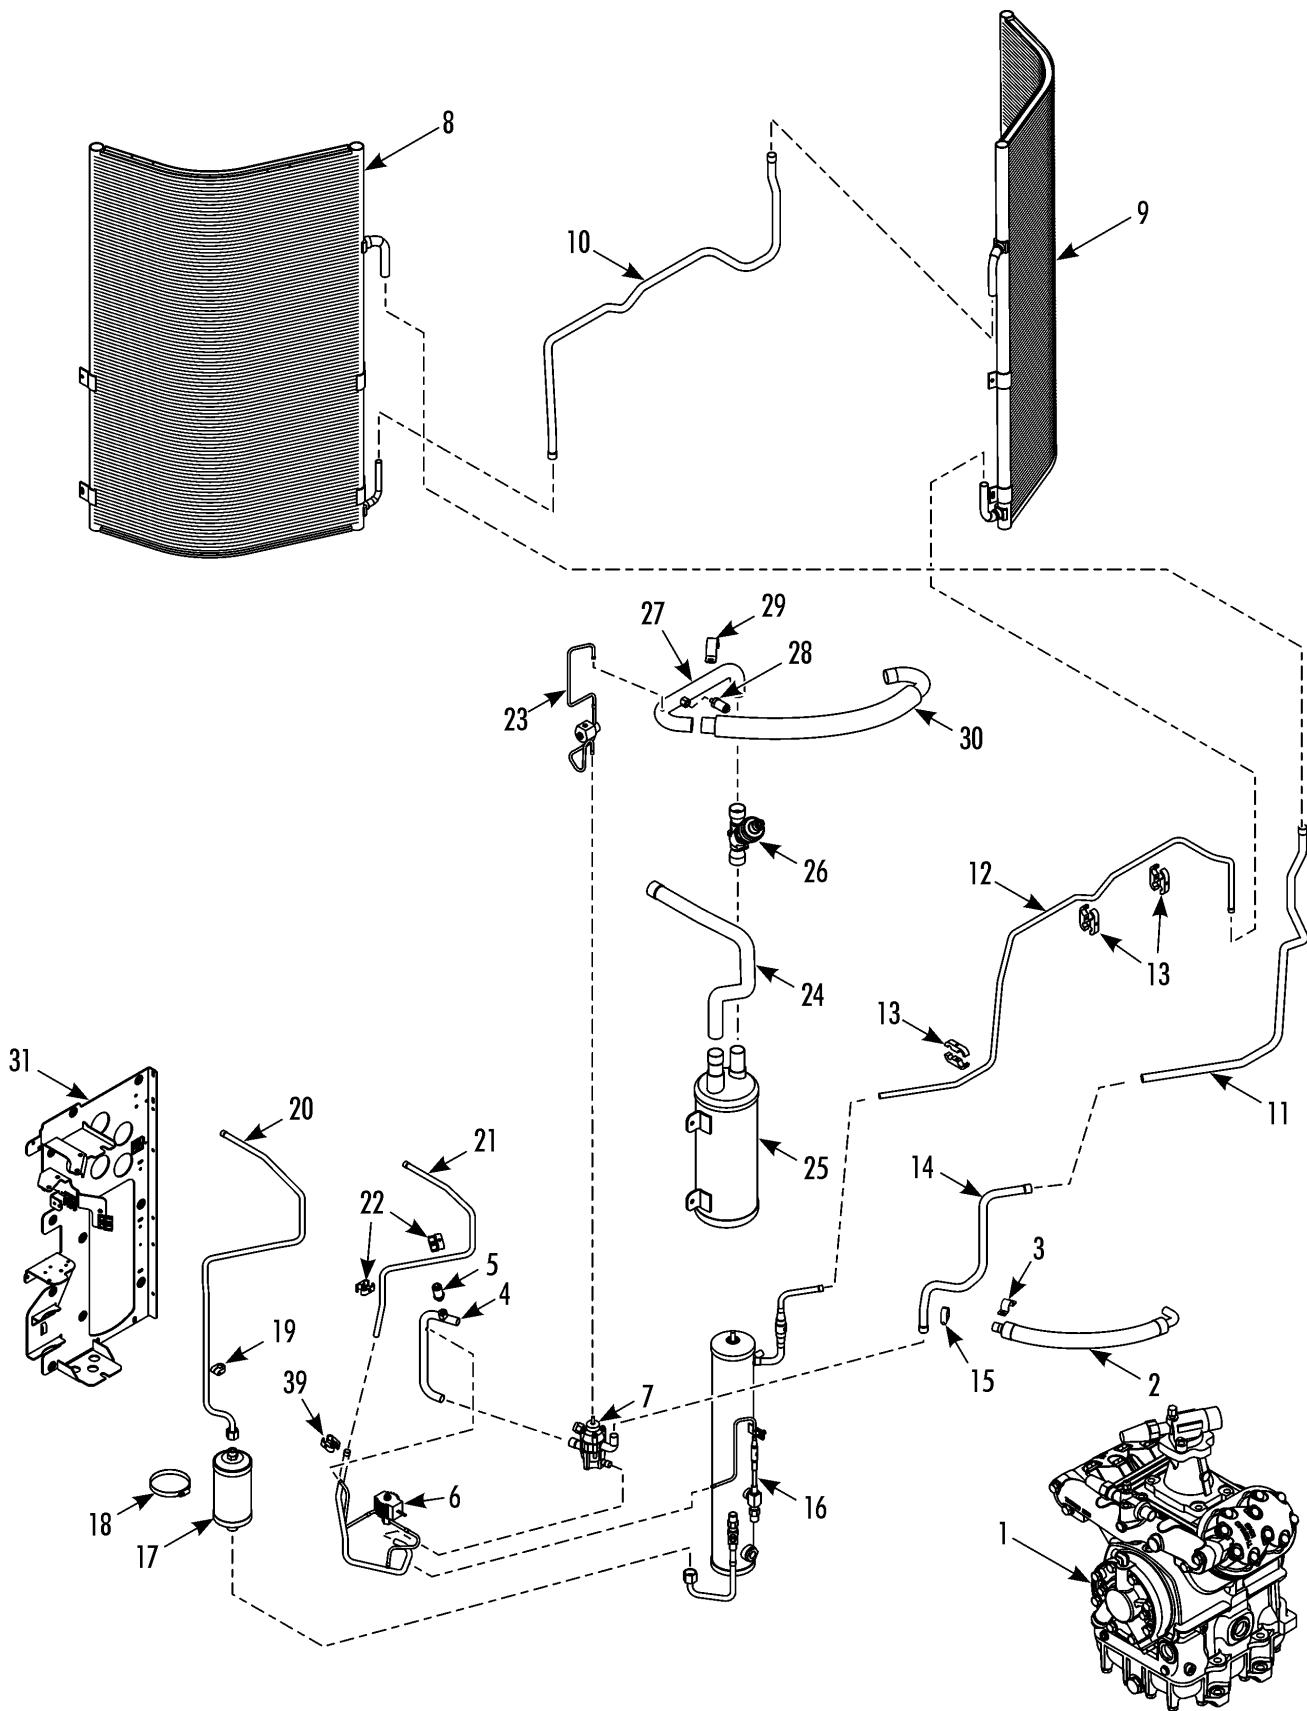

REFRIGERATION CONDENSER



272H6


Revised
01/30/14

REF	PART NO.	DESCRIPTION	QTY
1	8102-900	COMPRESSOR - X430 LS C5 (see 261A9)	1
2	61-6428	VIBRASORBER - discharge	1
3	93-270	CLAMP - vibrasorber	1
4	61-5980	TUBE - discharge to 3-way valve	1
5	42-1309	TRANSDUCER - discharge (500 psi)	1
6	61-6626	SOLENOID - hot gas bypass (see 275B8)	1
7	61-5978	VALVE - 3-way (see 261H1)	1
8	67-2752	COIL - condenser (curbside)	1
9	67-2751	COIL - condenser (roadside)	1
10	61-5967	TUBE - coil to coil	1
11	61-5969	TUBE - receiver to curbside coil	1
12	61-5968	TUBE - roadside coil to receiver	1
13	91-3171	CLAMP - tube	6
14	61-5979	TUBE - 3-way to condenser	1
15	91-372	CLAMP - tube	1
16	67-2687	TANK - receiver (see 261G1)	1
17	61-600	DEHYDRATOR	1
18	55-2688	CLAMP - dehydrator	1
19	91-759	CLAMP - tube	3
20	61-5988	TUBE - dehydrator to exchanger	1
21	61-6066	TUBE - joint to evaporator (hot gas)	1
22	55-6730	CLAMP - tube	4
23	61-6168	SOLENOID - pilot	1
24	61-5976	TUBE - exchanger to accumulator	1
25	67-2714	TANK - accumulator	1
26	61-3764	VALVE - throttling (electronic)	1
	40-947	*KIT - valve repair (incl motor, piston & connector)	1
27	61-5977	TUBE - accumulator to vibrasorber	1
28	42-1310	TRANSDUCER - suction (200 psi)	1
29	93-269	CLAMP - vibrasorber	1
30	61-5901	VIBRASORBER - suction	1
31	92-9688	BRACKET - refrigeration	1

275B8  THERMO KING


SOLENOID AND TUBING

Revised
01/21/14

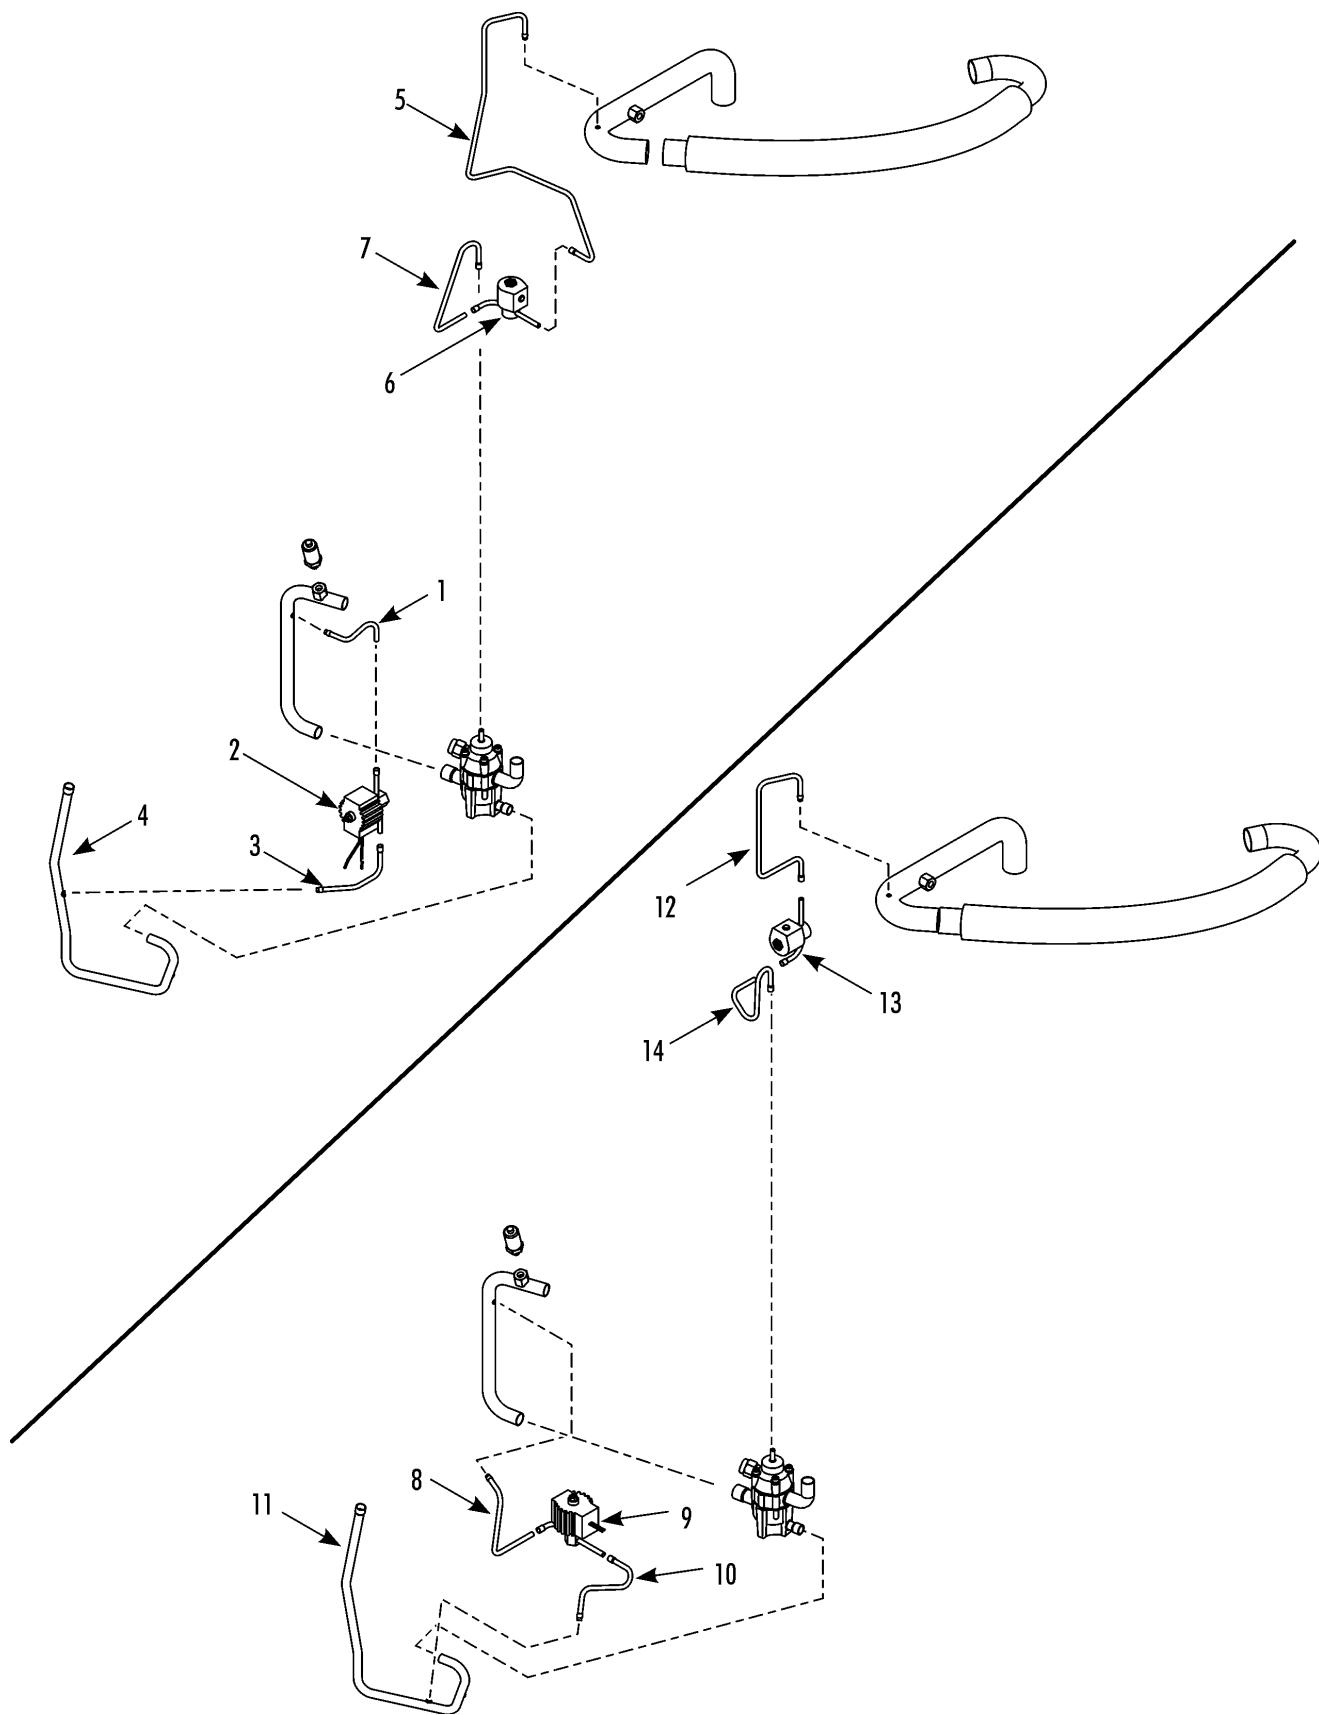



REF	PART NO.	DESCRIPTION	QTY
1	61-5982	TUBE - inlet	1
2	61-4941	SOLENOID - hot gas	1
	42-1470	*COIL	1
3	61-5983	TUBE - outlet	1
4	61-6065	TUBE - 3-way to joint (hot gas)	1
5	61-5989	TUBE - solenoid to suction tube	1
6	61-5781	SOLENOID - pilot	1
	41-1521	*COIL	1
7	61-5990	TUBE - solenoid to 3-way valve	1
8	61-6716	TUBE - inlet	1
9	61-6626	SOLENOID - hot gas	1
	42-1470	*COIL	1
10	61-6717	TUBE - outlet	1
11	61-6715	TUBE - 3-way to joint (hot gas)	1
12	61-6718	TUBE - solenoid to suction tube	1
13	61-6168	SOLENOID - pilot	1
	41-1521	*COIL	1
14	61-6719	TUBE - solenoid to 3-way valve	1

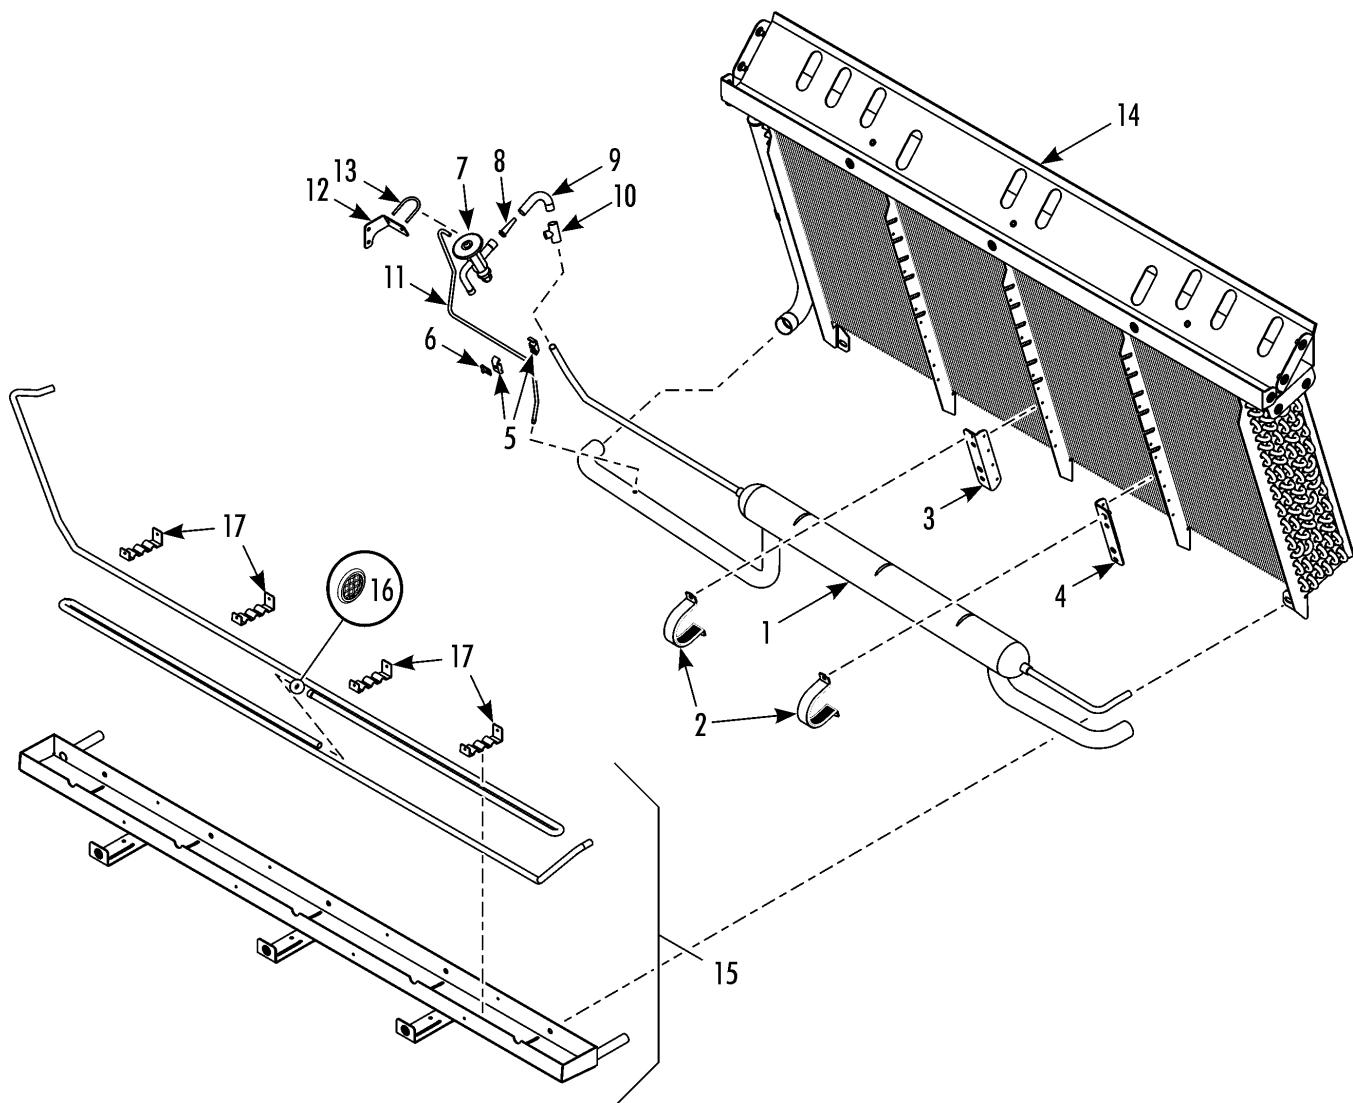


REFRIGERATION EVAPORATOR

Revised
01/27/14



261B2

REF	PART NO.	DESCRIPTION	QTY
1	67-2728	HEAT EXCHANGER	1
2	92-6491	CLAMP - heat exchanger	2
	51-2200	SCREW - clamp	4
3	92-9655	BRACKET - clamp (curbside)	1
	55-9698	*INSERT - threaded (M6)	5
4	92-9656	BRACKET - clamp (roadside)	1
	55-9698	*INSERT - threaded (M6)	5
	51-1183	RIVET - bracket	8
5	55-7600	CLAMP - tube	2
	51-2254	SCREW - clamp	1
	55-7075	FLATWASHER	2
	55-7008	NUT	2
6	51-2257	CLAMP (1/8)	1
7	61-6283	VALVE - expansion	1
8	66-4441	SCREEN - expansion valve (outlet)	1
9	61-6062	TUBE - joint to expansion valve	1
10	66-620	TEE	1
11	61-6063	TUBE - equalizer	1
12	92-9660	BRACKET - valve	1
	51-2202	SCREW - bracket	3
13	51-2378	U-BOLT	1
	55-2001	FLATWASHER	2
	55-4560	NUT	2
14	67-2727	COIL - evaporator (S-600/C-600, see 261B1)	1
	67-2878	COIL - evaporator (S-700, see 261B1)	1
15	67-2793	PAN - defrost drain (inc drain pan, tubes & brackets)	1
16	61-6223	*SCREEN - filter	1
17	92-9658	*BRACKET - defrost tube	4
	51-1183	*RIVET - bracket	8

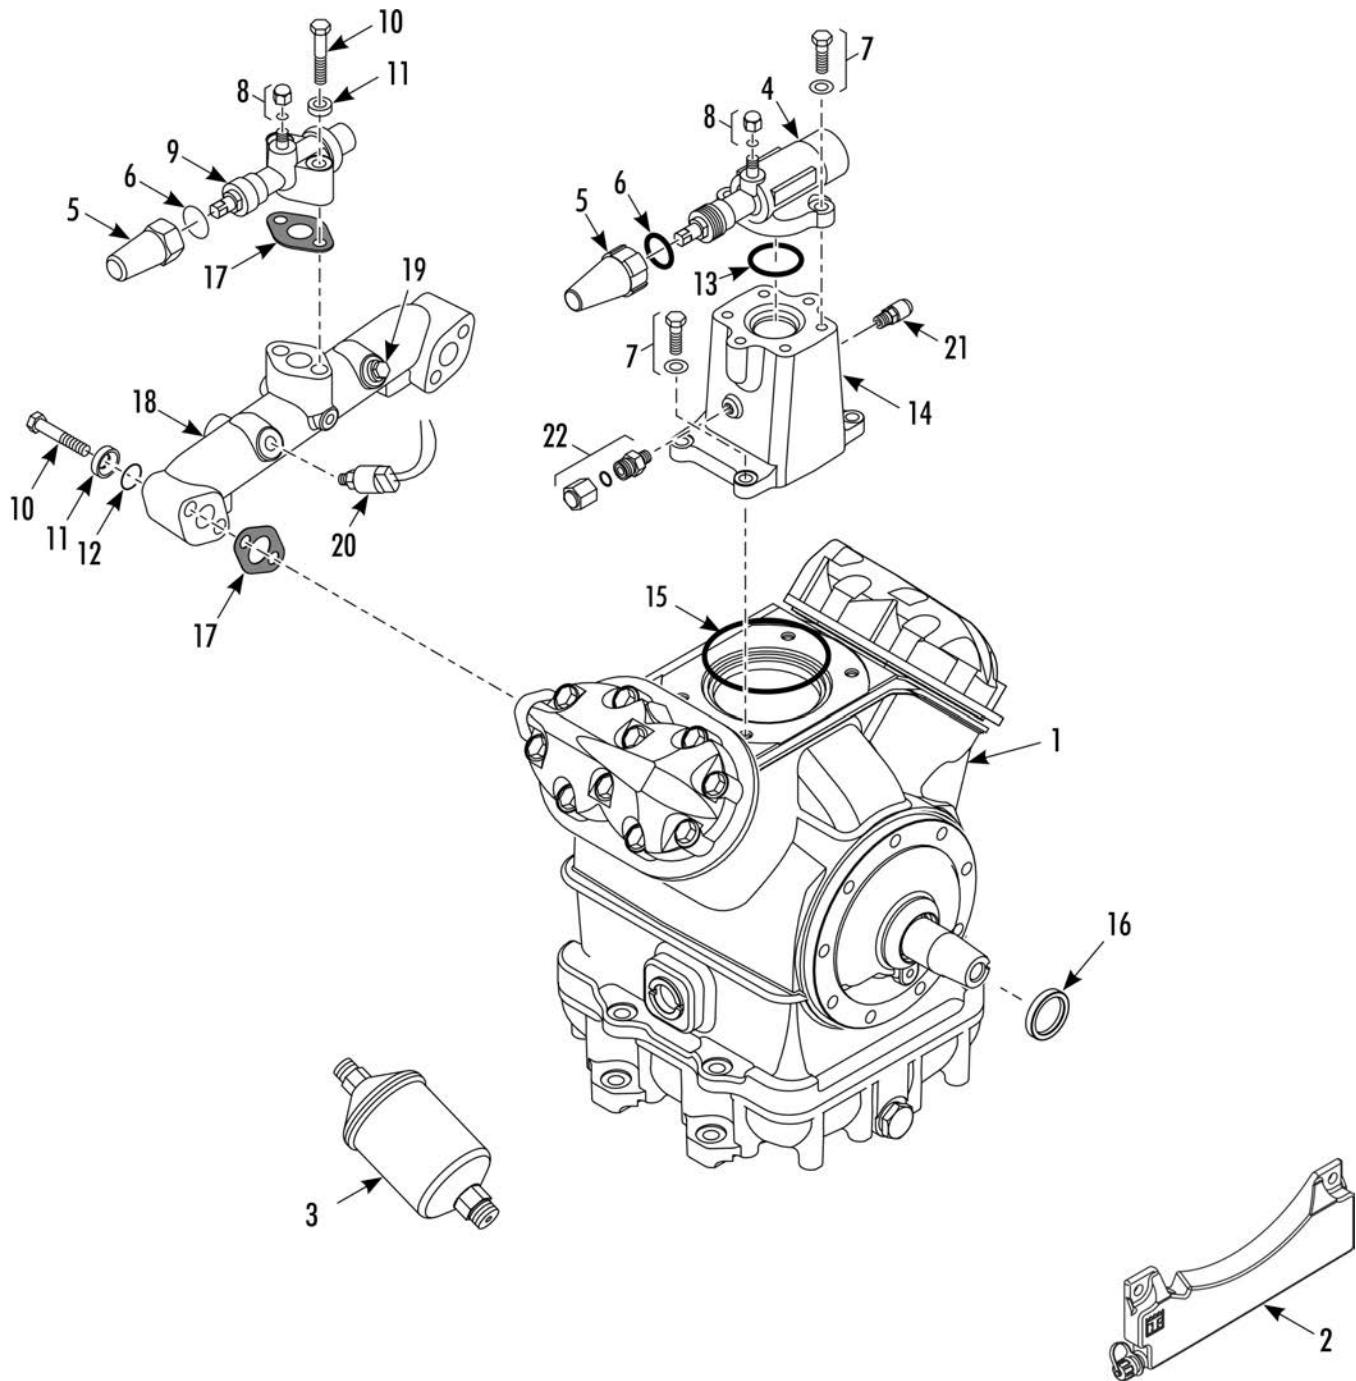


COMPRESSOR GROUP - X430 (LS C5)

Revised
02/05/14

261A9

REF	PART NO.	DESCRIPTION	QTY
1	8102-900	COMPRESSOR - X430 LS C5 (new exchange, dry, see 223C5)	1
2	22-1315	BOTTLE - oil collection (see 242D0)	1
3	66-7800	FILTER - oil (see 212B7)	1
4	66-5318	VALVE - suction	1
5	66-3015	*CAP - service valve (incl gasket)	1
6	33-350	**GASKET - cap	1
7	55-9106	SCREW - valve & adapter	6
	55-896	FLATWASHER	6
8	55-1983	CAP - flare	2
	33-768	GASKET - flare	2
9	66-129	VALVE - discharge (incl 5 & 6)	1
10	55-6822	SCREW - discharge valve & manifold	6
11	55-6804	WASHER - sealing	6
12	33-2019	O-RING - manifold	4
13	33-4615	O-RING - suction valve	1
14	61-5658	ADAPTER - suction valve	1
15	33-1221	O-RING - adapter	1
16	33-3004	SEAL - oil (large shaft, 1-3/16 dia)	1
17	33-2805	GASKET - manifold & valve	3
18	22-1269	MANIFOLD - discharge	1
19	51-1498	PLUG - pipe (7/16 - 20)	1
20	42-708	SWITCH - hpc	1
	33-4277	GASKET - plug & switch	1
21	11-2886	VALVE (Schrader)	2
	11-7777	*CORE - valve	1
	55-5672	*CAP - valve	1
	203-385	SEALER - thread	A/R
22	66-8928	ADAPTER - o-ring seal	1
	33-1461	O-RING - cap	1
	66-9387	CAP - adapter	1

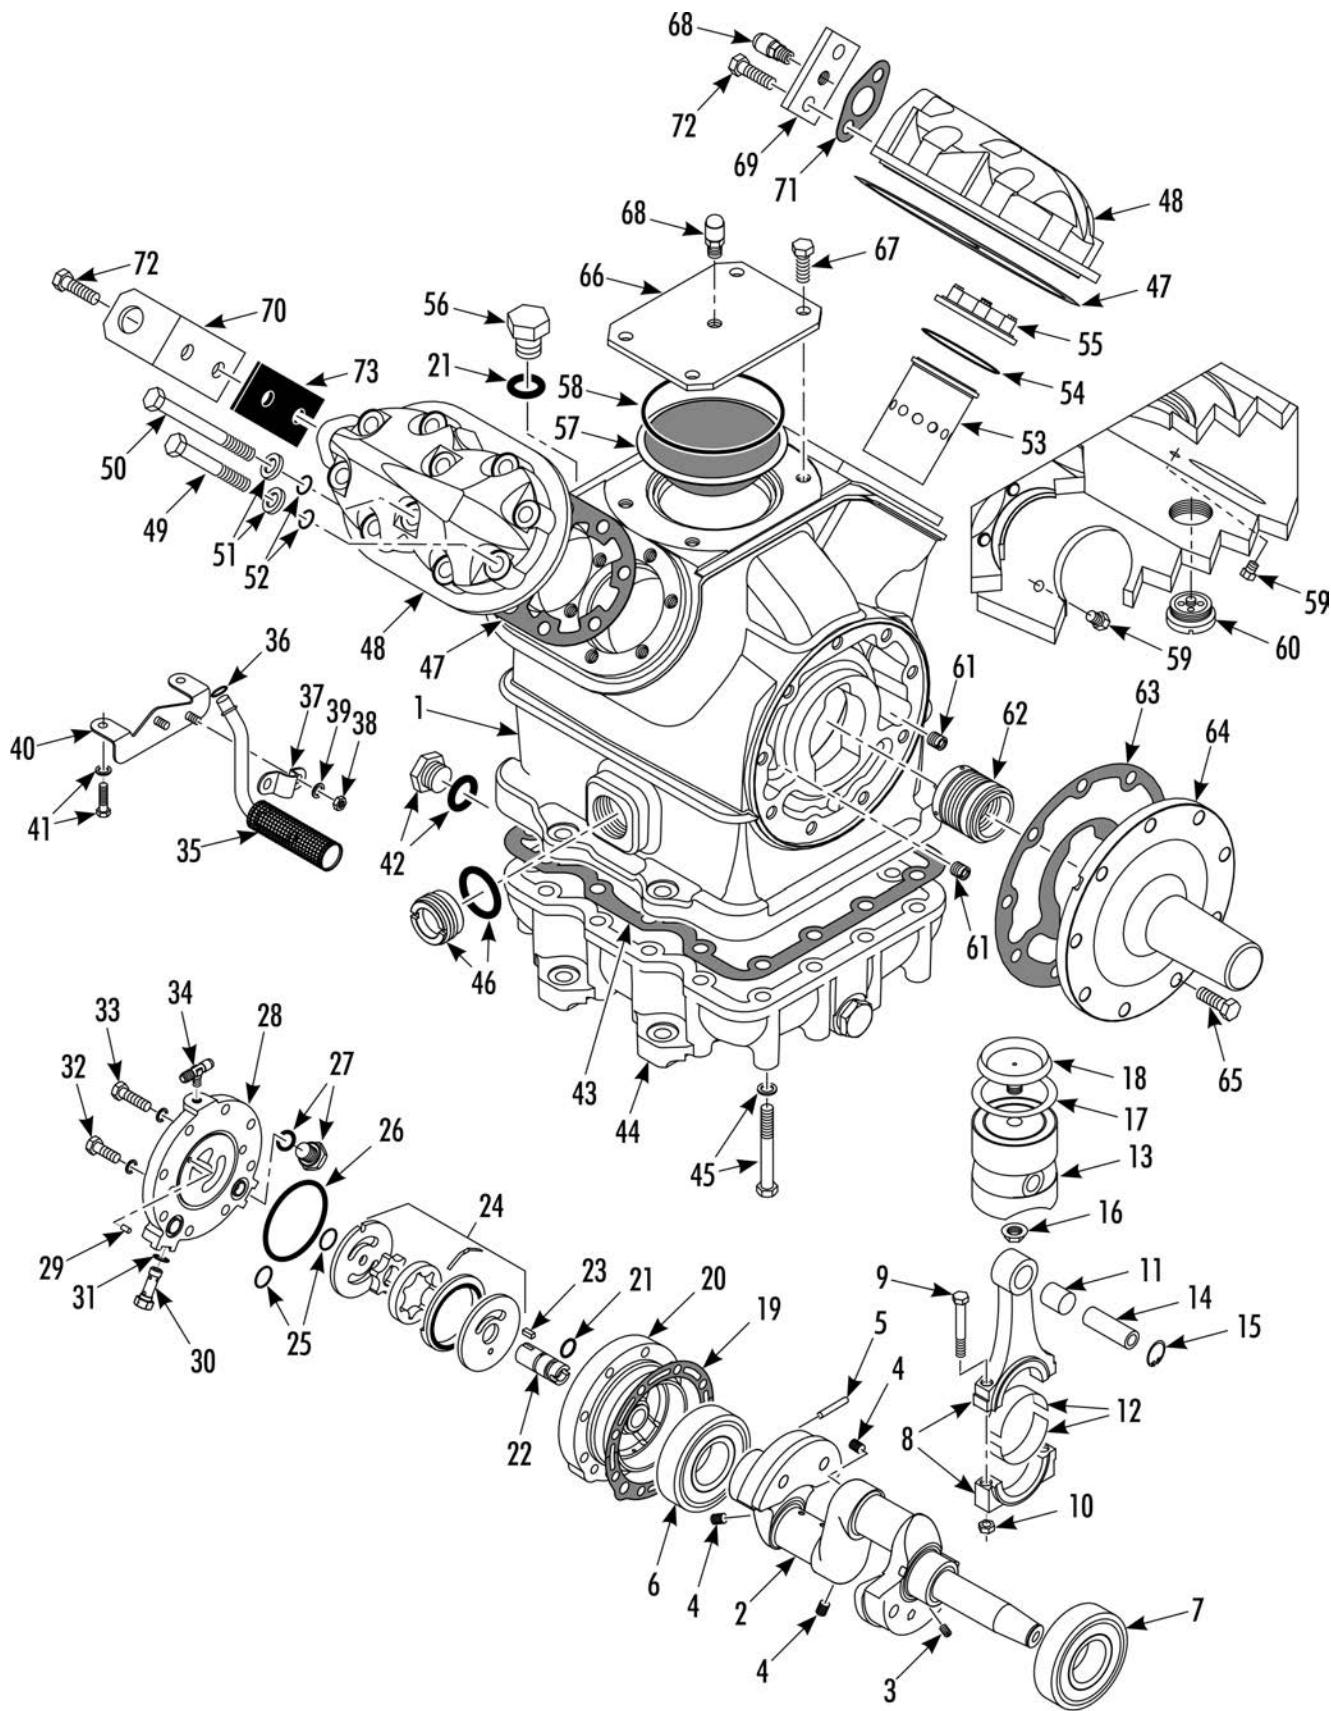

COMPRESSOR - X430 LS C5

Revised
08/17/13

223C5


REF	PART NO.	DESCRIPTION	QTY
	8102-900	COMPRESSOR - X430 LS C5 (new exchange, dry)	1
	8102-927	COMPRESSOR - X430 LS C5 (EMEIA, dry, reman)	1
1	NSS	*BODY - compressor	1
2	22-1027	*CRANKSHAFT	1
	55-1409	**RIVET - counterweight	A/R
3	22-123	*PLUG - oil metering	1
4	55-4720	*PLUG	3
5	55-4213	*PIN - dowel	1
6	77-169	*BEARING - ball	1
7	77-2872	*BEARING - ball (C5)	1
8	22-639	*ROD - connecting	4
9	55-5062	**BOLT - connecting rod	2
10	51-666	**NUT (12 point)	2
11	11-475	**BUSHING - piston pin	1
12	22-1246	*BEARING SET - connecting rod (standard)	4
	22-1264	*BEARING SET (0.005 us)	4
	22-1265	*BEARING SET (0.010 us)	4
	22-1266	*BEARING SET (0.020 us)	4
	22-1267	*BEARING SET (0.030 us)	4
13	22-850	*PISTON	4
14	NSS	**PIN - piston	4
15	55-2122	**RING - retaining	8
16	51-115	**NUT	1
17	NSS	**REED - piston	1
18	NSS	**HEAD - piston	1
19	33-1549	*GASKET - pump end	1
20	22-1277	*HOUSING - oil pump	1
	55-4210	*PIN - dowel	1
21	33-1223	**O-RING	2
22	22-1149	*SHAFT - oil pump	1
23	55-9760	*KEY - shaft	1
24	22-1160	*PUMP - oil (incl items 21-23)	1
25	33-239	*O-RING	2

NOTE: This compressor does not contain compressor oil. Add one gallon of oil before running compressor. For R404A, R134a & R407C, use 203-513 oil. For R12, R22, R502, R403B, R402A & R401B, use 67-404 oil.

223C5  THERMO KING

COMPRESSOR - X430 LS C5

Revised
08/17/13

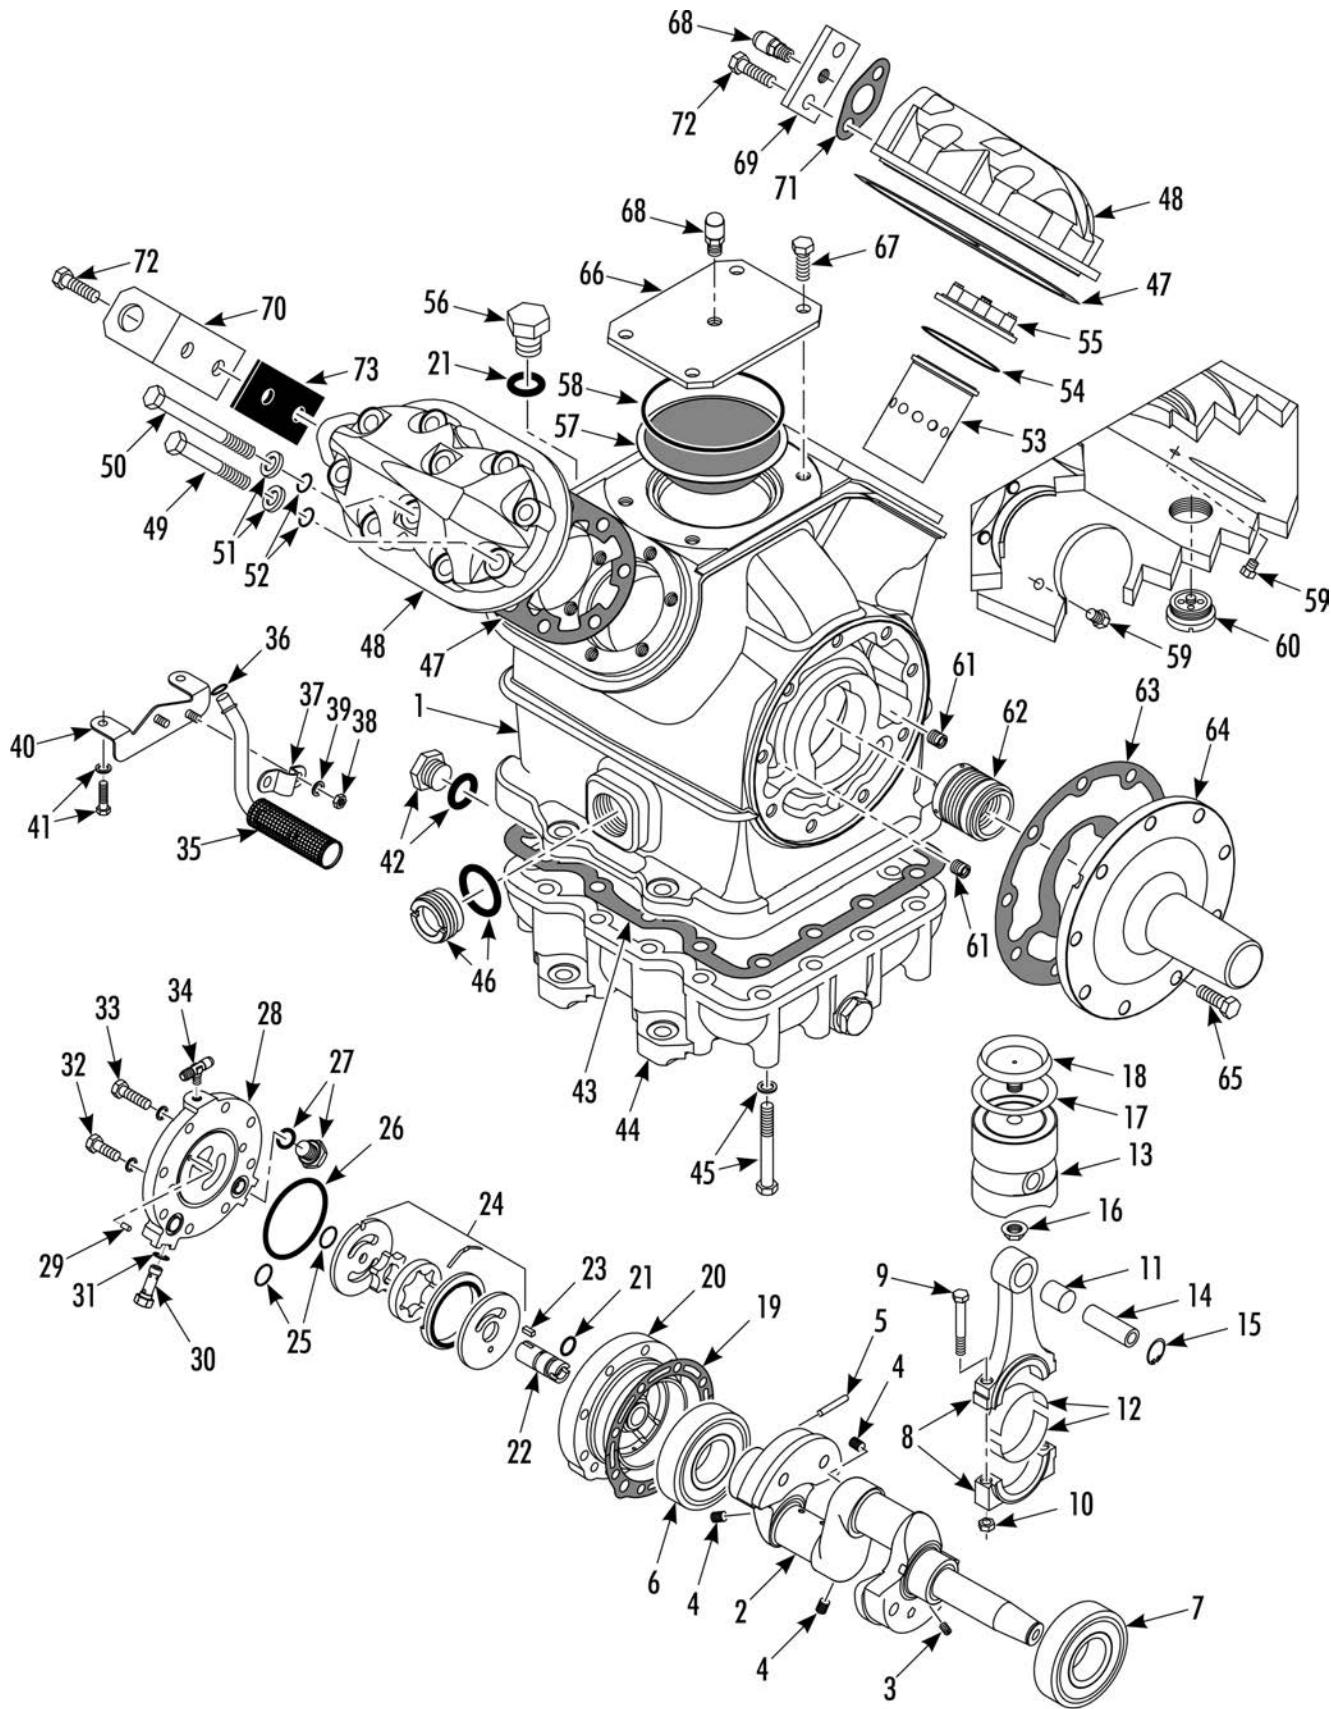

COMPRESSOR - X430 LS C5

Revised
08/17/13

223C5


REF	PART NO.	DESCRIPTION	QTY
26	33-1175	*O-RING	1
27	55-6752	*PLUG - oil pump cover	1
	33-2095	**O-RING	4
28	22-1278	*COVER - pump	1
29	55-4211	*PIN - dowel	1
30	22-784	*REGULATOR	1
31	33-672	**O-RING	1
32	55-681	*SCREW - cover to housing	2
	51-149	*FLATWASHER	2
33	55-183	*SCREW - pump	8
34	11-9001	*VALVE - tee	1
	203-393	*SEALER - thread	A/R
	55-1983	*CAP - valve	1
35	22-611	*SCREEN - oil pickup	1
36	33-2205	*O-RING	1
37	99-4848	*CLAMP - screen	1
38	55-291	*NUT	1
39	55-366	*LOCKWASHER	2
40	99-4849	*BRACKET - screen	1
41	55-165	*SCREW - bracket	2
	55-366	*LOCKWASHER	2
42	55-6751	*PLUG - magnetic	2
	33-2095	*O-RING	2
43	33-2515	*GASKET - oil sump	16
44	22-747	*SUMP - oil (two drain holes)	1
45	55-1417	*SCREW - oil sump	16
	55-896	*FLATWASHER	16
46	22-350	*SIGHT GLASS	3
	33-822	*O-RING	3
47	33-2552	*GASKET - cylinder head	2
48	22-789	*HEAD - cylinder	2
49	55-6805	*SCREW (2 in lg)	12
50	55-6806	*SCREW (2-5/8 in lg)	8

NOTE: This compressor does not contain compressor oil. Add one gallon of oil before running compressor. For R404A, R134a & R407C, use 203-513 oil. For R12, R22, R502, R403B, R402A & R401B, use 67-404 oil.

223C5  THERMO KING

COMPRESSOR - X430 LS C5


Revised
08/17/13

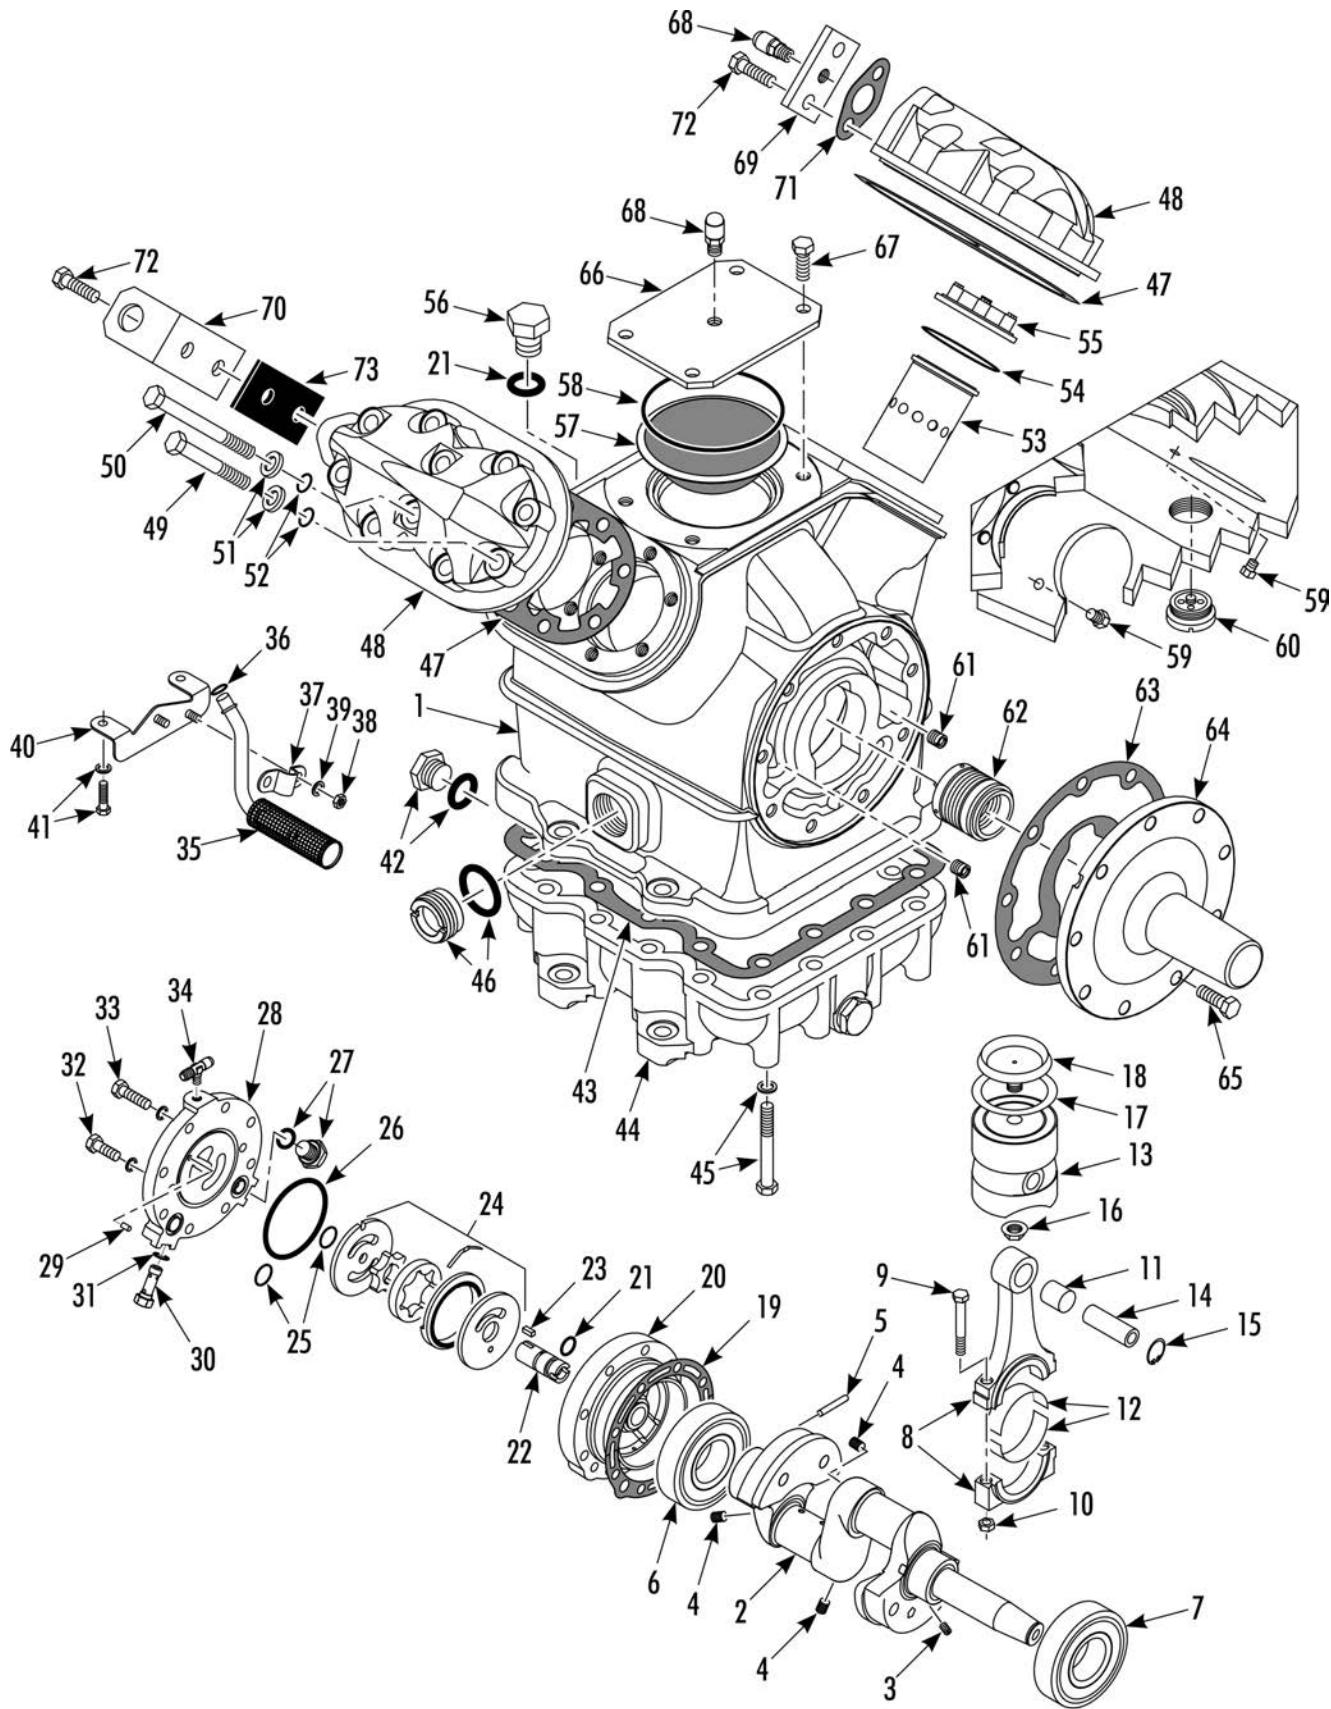

COMPRESSOR - X430 LS C5Revised
08/17/13**223C5**

REF	PART NO.	DESCRIPTION	QTY
51	55-6804	*WASHER - sealing	20
52	33-2019	*O-RING	20
53	22-656	*SLEEVE - cylinder	4
54	33-408	*O-RING	4
55	22-990	*PLATE - valve	4
56	55-6750	*PLUG - oil fill	1
	66-8043	*PLUG - oil fill (use with compr oil filter tube)	1
57	22-306	*SCREEN - suction	1
58	33-1221	*O-RING	1
59	22-653	*VALVE - check	2
60	22-787	*VALVE - check (oil return)	1
61	22-568	*VALVE - check	2
62	22-1101	*SEAL - crankshaft (for 1-3/16 dia crankshaft)	1
63	33-2513	*GASKET - drive end	1
64	22-671	*PLATE - crankshaft cover	1
65	55-9106	*SCREW - housing	9
	55-896	*FLATWASHER	9
66	99-6545	*PLATE - suction inlet	1
67	55-329	*SCREW - plate	4
68	11-2886	*VALVE (Schrader)	1
	11-7777	*CORE - valve	1
	55-5672	*CAP - valve	1
69	91-5630	*PLATE - cover	1
70	91-9858	*PLATE - cover (w/ lifting hole)	1
71	33-2805	*GASKET - manifold	1
72	55-329	*SCREW - plate	4
73	33-3103	*GASKET - manifold	1
	203-513	*OIL - compressor (use w/ R134a, R404A)	A/R
	67-404	OIL - compressor (R12, R22, R502, R403B, R402A & R401B)	A/R
	30-243	KIT - gasket	1

NOTE: This compressor does not contain compressor oil. Add one gallon of oil before running compressor. For R404A, R134a & R407C, use 203-513 oil. For R12, R22, R502, R403B, R402A & R401B, use 67-404 oil.

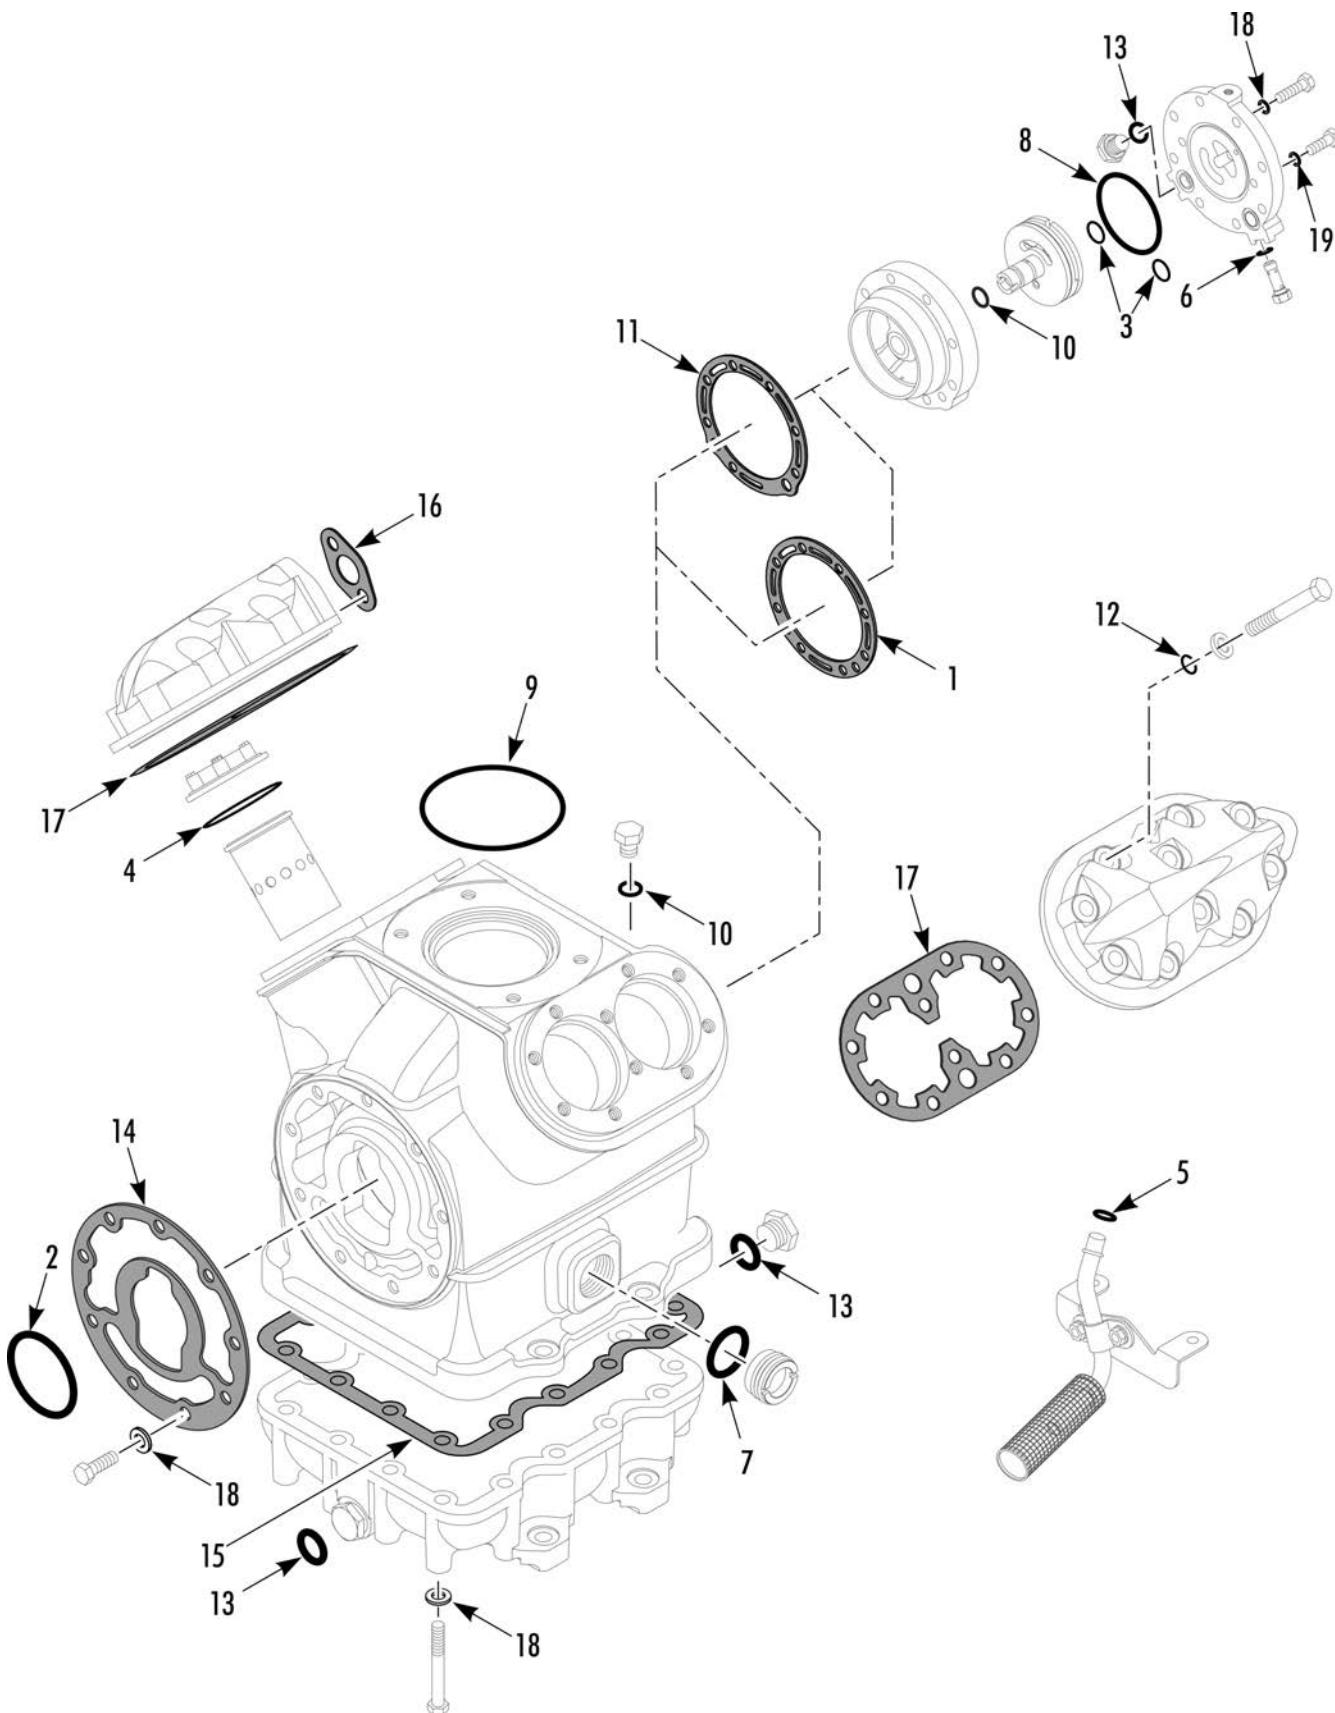131F1**COMPRESSOR GASKET SET (30-243, X426 & X430)**Revised
02/06/14


COMPRESSOR GASKET SET (30-243, X426 & X430)

Revised
02/06/14



131F1

REF	PART NO.	DESCRIPTION	QTY
	30-243	KIT - gasket	1
1	33-110	*GASKET - pump housing (X426)	1
2	33-235	*O-RING - dust seal	1
3	33-239	*O-RING - oil galley	2
4	33-408	*O-RING - cylinder sleeve	4
5	33-2205	*O-RING - oil pickup tube	1
6	33-672	*O-RING - regulator	1
7	33-822	*O-RING - sight glass	3
8	33-1175	*O-RING - oil pump cover	1
9	33-1221	*O-RING - throttling valve	1
10	33-1223	*O-RING - oil pump & oil fill	2
11	33-1549	*GASKET - pump housing (X430)	1
12	33-2019	*O-RING - cylinder head screw	24
13	33-2095	*O-RING - oil pump plug & drain plug	3
14	33-2513	*GASKET - drive plate	1
15	33-2515	*GASKET - oil sump	1
16	33-2805	*GASKET - manifold	2
17	33-2552	*GASKET - cylinder head	2
18	55-896	*WASHER - compressor seal (3/8)	A/R
19	55-895	*WASHER - oil pump	2

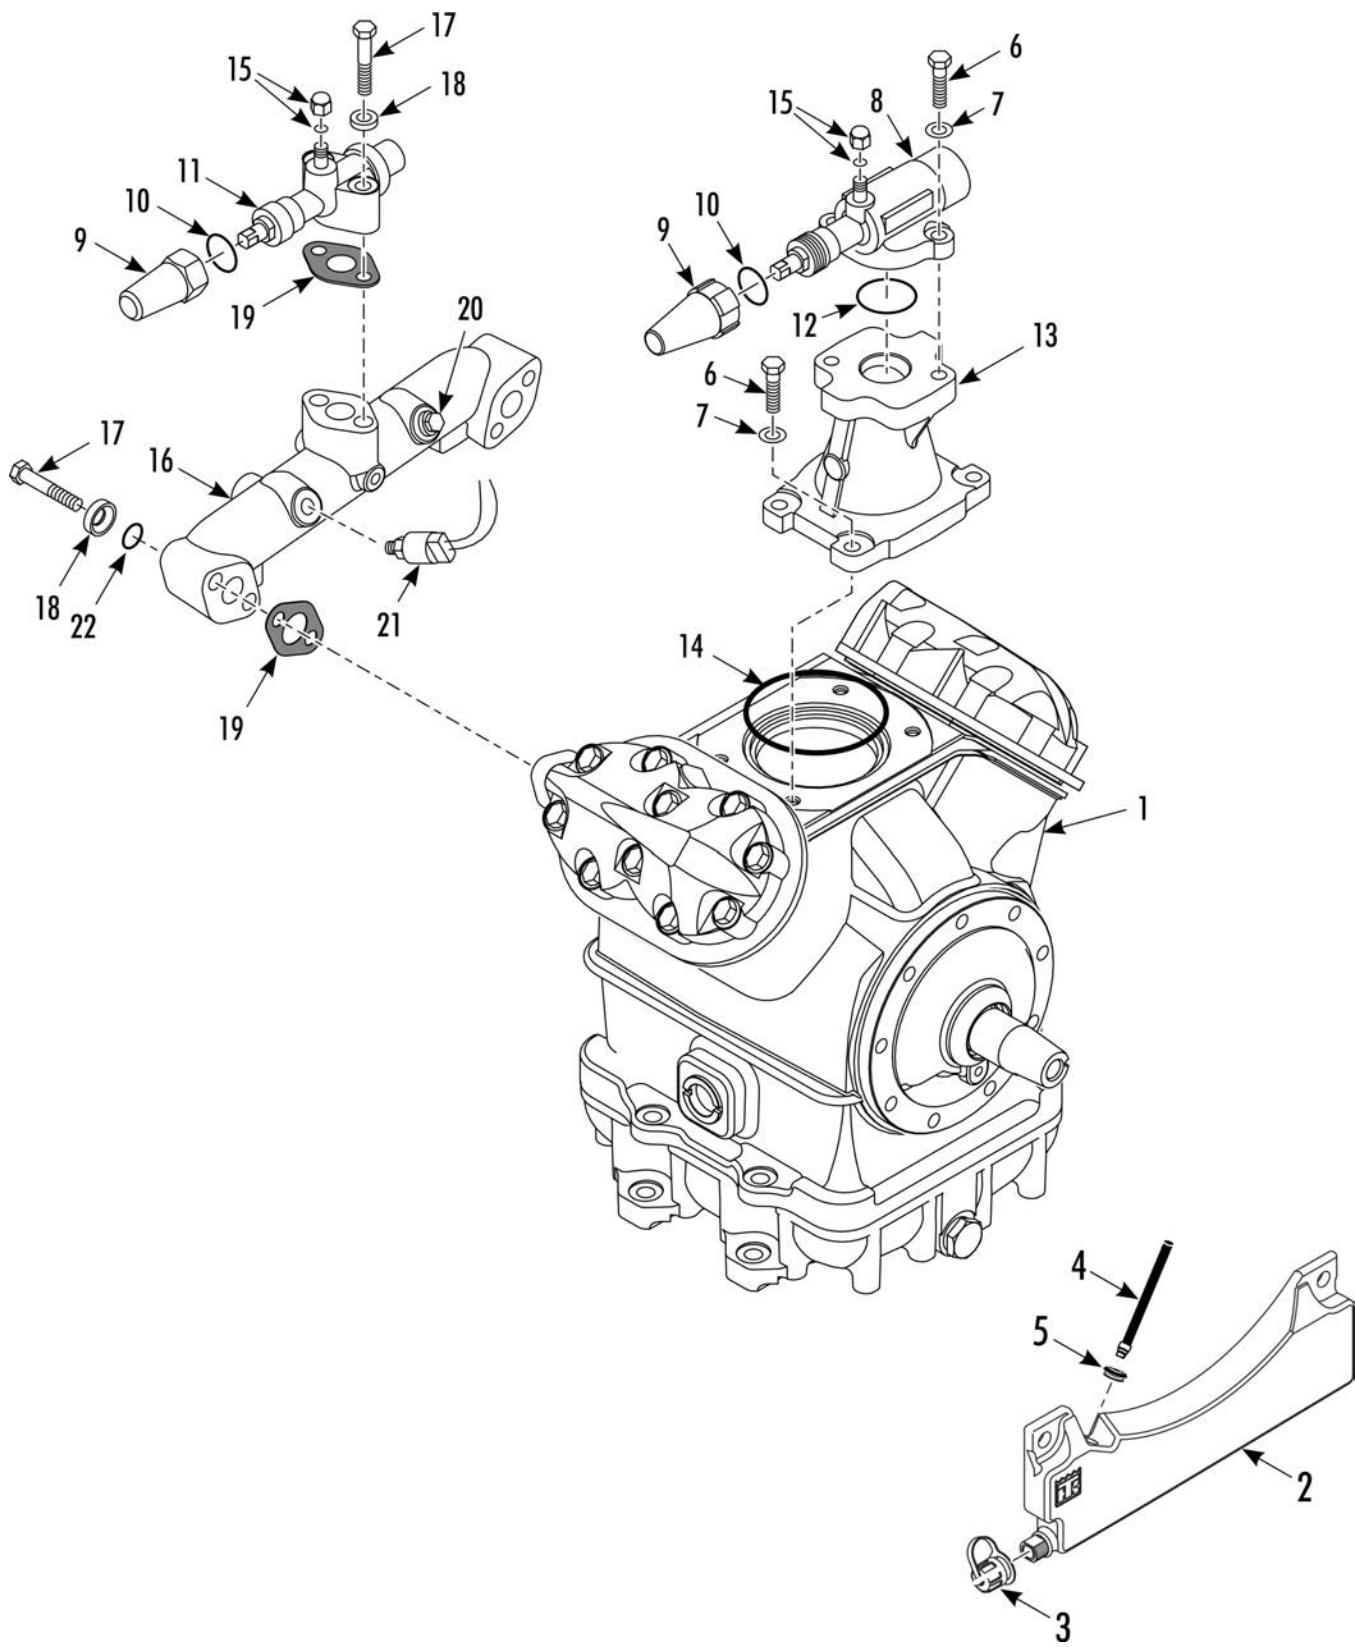


COMPRESSOR GROUP - X430P

272H7


Revised
01/27/14

REF	PART NO.	DESCRIPTION	QTY
1	102-1137	COMPRESSOR - X430P (see 272E5)	1
2	22-1315	BOTTLE - oil collection (see 242D0)	1
3	22-1328	*CAP - bottle	1
	51-2021	*WASHER - cap	1
4	11-4367	TUBE - oil (5.25 in)	A/R
5	33-4631	GROMMET	1
6	55-9106	SCREW - valve & adapter	6
7	55-896	FLATWASHER	6
8	66-5318	VALVE - suction	1
9	66-3015	*CAP - service valve (brass, incl gasket)	1
10	33-350	**GASKET - brass cap	1
11	66-129	VALVE - discharge (incl 9 & 10)	1
12	33-4615	O-RING - valve	1
13	61-6787	ADAPTER - suction valve	1
14	33-1221	O-RING - adapter	1
15	55-1983	CAP - flare	2
	33-768	GASKET - flare	2
16	22-1269	MANIFOLD - discharge	1
17	55-6822	SCREW - manifold & discharge valve	4
18	55-6804	WASHER - sealing	6
19	33-2805	GASKET - manifold & valve	3
20	51-1498	PLUG - pipe (7/16 - 20)	1
	33-4277	GASKET - plug	1
21	42-708	SWITCH - hpc	1
	33-4277	GASKET - switch	1
22	33-2019	O-RING	4

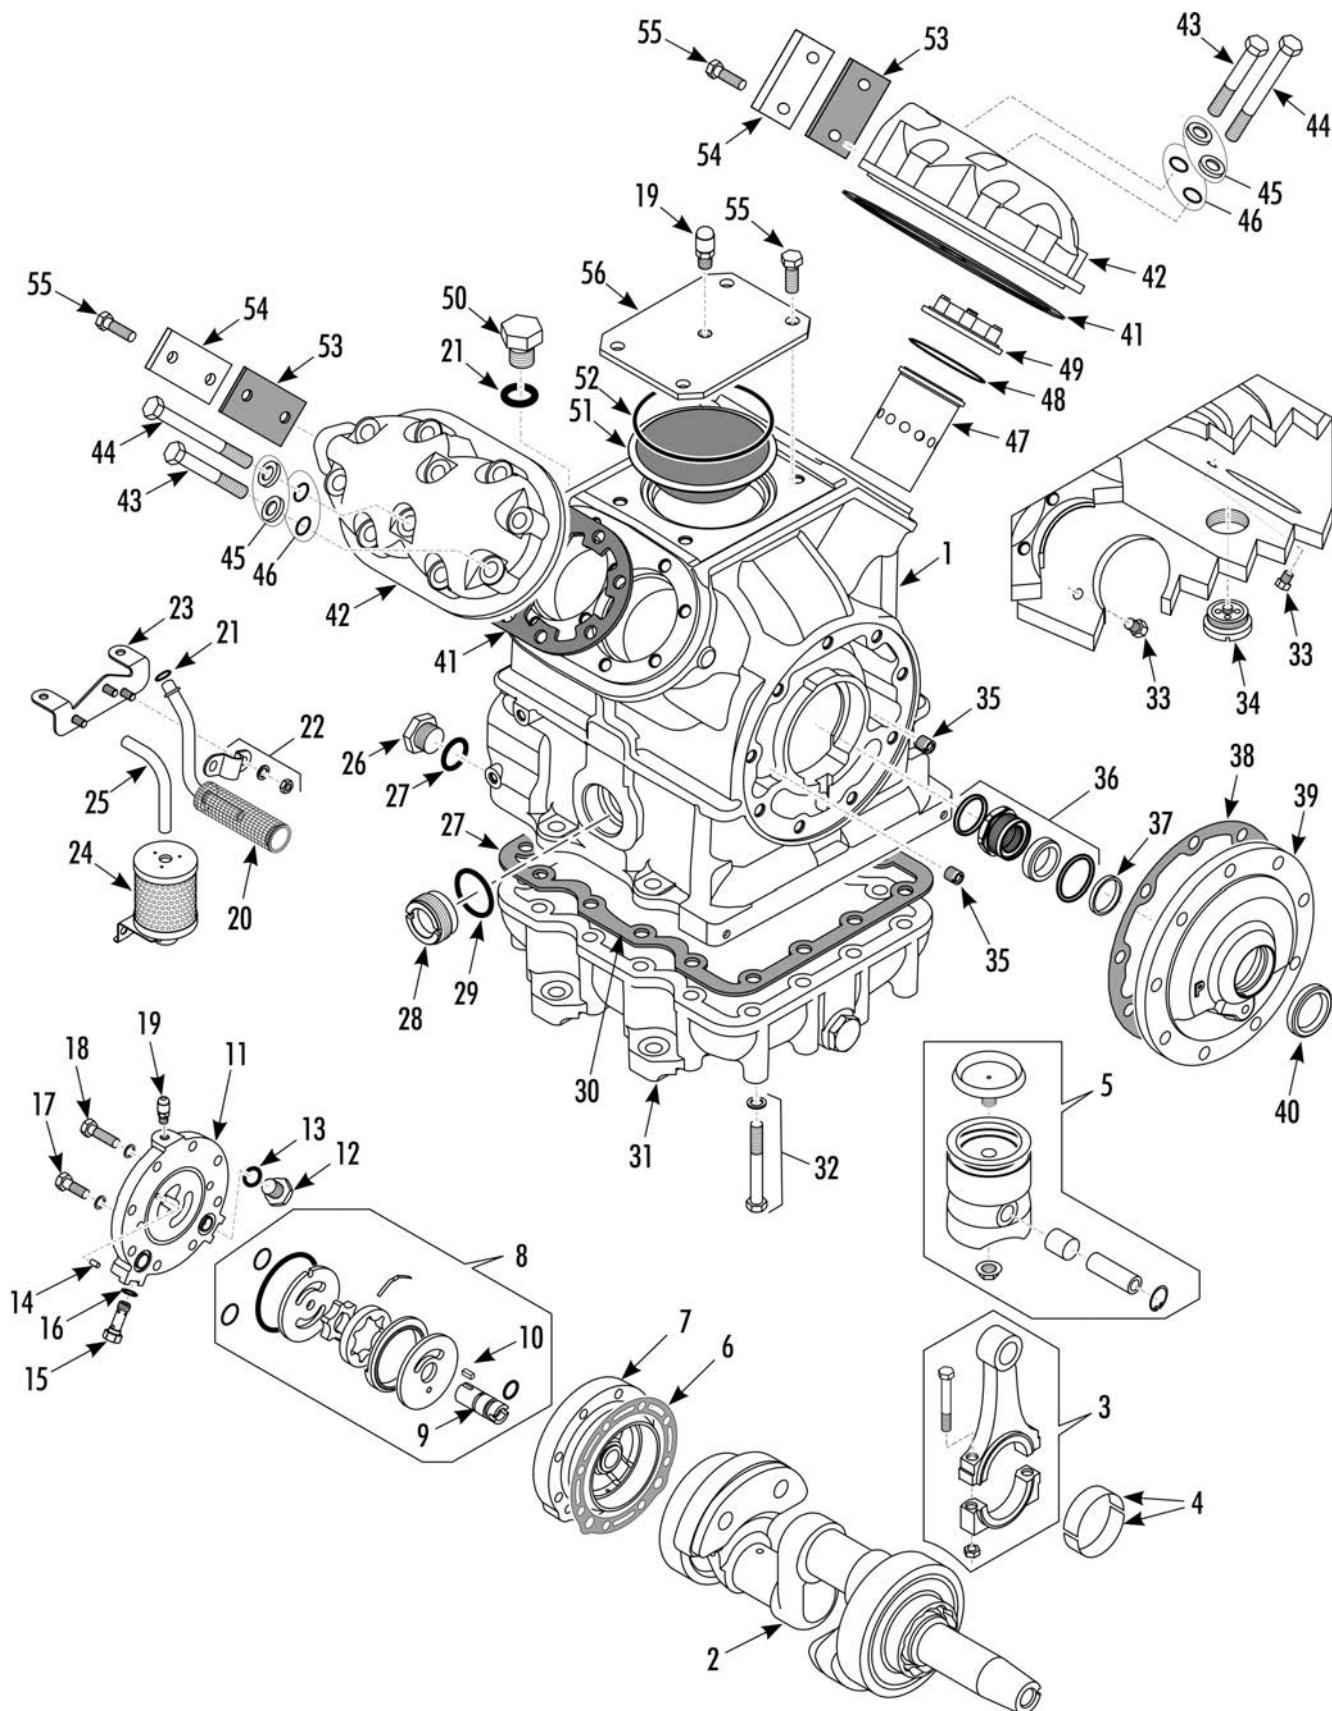



REF	PART NO.	DESCRIPTION	QTY
	102-1137	COMPRESSOR - X430P (see 272E5)	
1	NSS	*BODY - compressor	1
2	23-161	*CRANKSHAFT	1
3	22-639	*ROD - connecting	4
4	22-1246	*BEARING SET - connecting rod (standard)	4
	22-1264	*BEARING SET (0.005 us)	4
	22-1265	*BEARING SET (0.010 us)	4
	22-1266	*BEARING SET (0.020 us)	4
	22-1267	*BEARING SET (0.030 us)	4
5	22-850	*PISTON	4
6	33-5217	*GASKET - pump end	1
7	22-1277	*HOUSING - oil pump	1
	55-4210	**PIN - dowel	1
8	22-1160	*PUMP - oil	1
9	22-1149	**SHAFT - oil pump	1
10	55-9760	**KEY - shaft	1
11	22-1326	*COVER - pump	1
12	55-6752	*PLUG - oil pump cover	1
13	33-2095	*O-RING	1
14	55-4211	*PIN - dowel	1
15	22-784	*REGULATOR	1
16	33-672	*O-RING	1
17	55-681	*SCREW - cover to housing	2
	51-149	*FLATWASHER	2
18	55-183	*SCREW - pump	8
19	11-2886	*VALVE	1
	203-393	*SEALER - thread	A/R
20	22-611	*SCREEN - oil pickup	1
21	33-2205	*O-RING	1
22	99-4848	*CLAMP - screen	1
	55-291	*NUT	2
	55-366	*LOCKWASHER	2
23	93-1486	*BRACKET - screen & filter	1

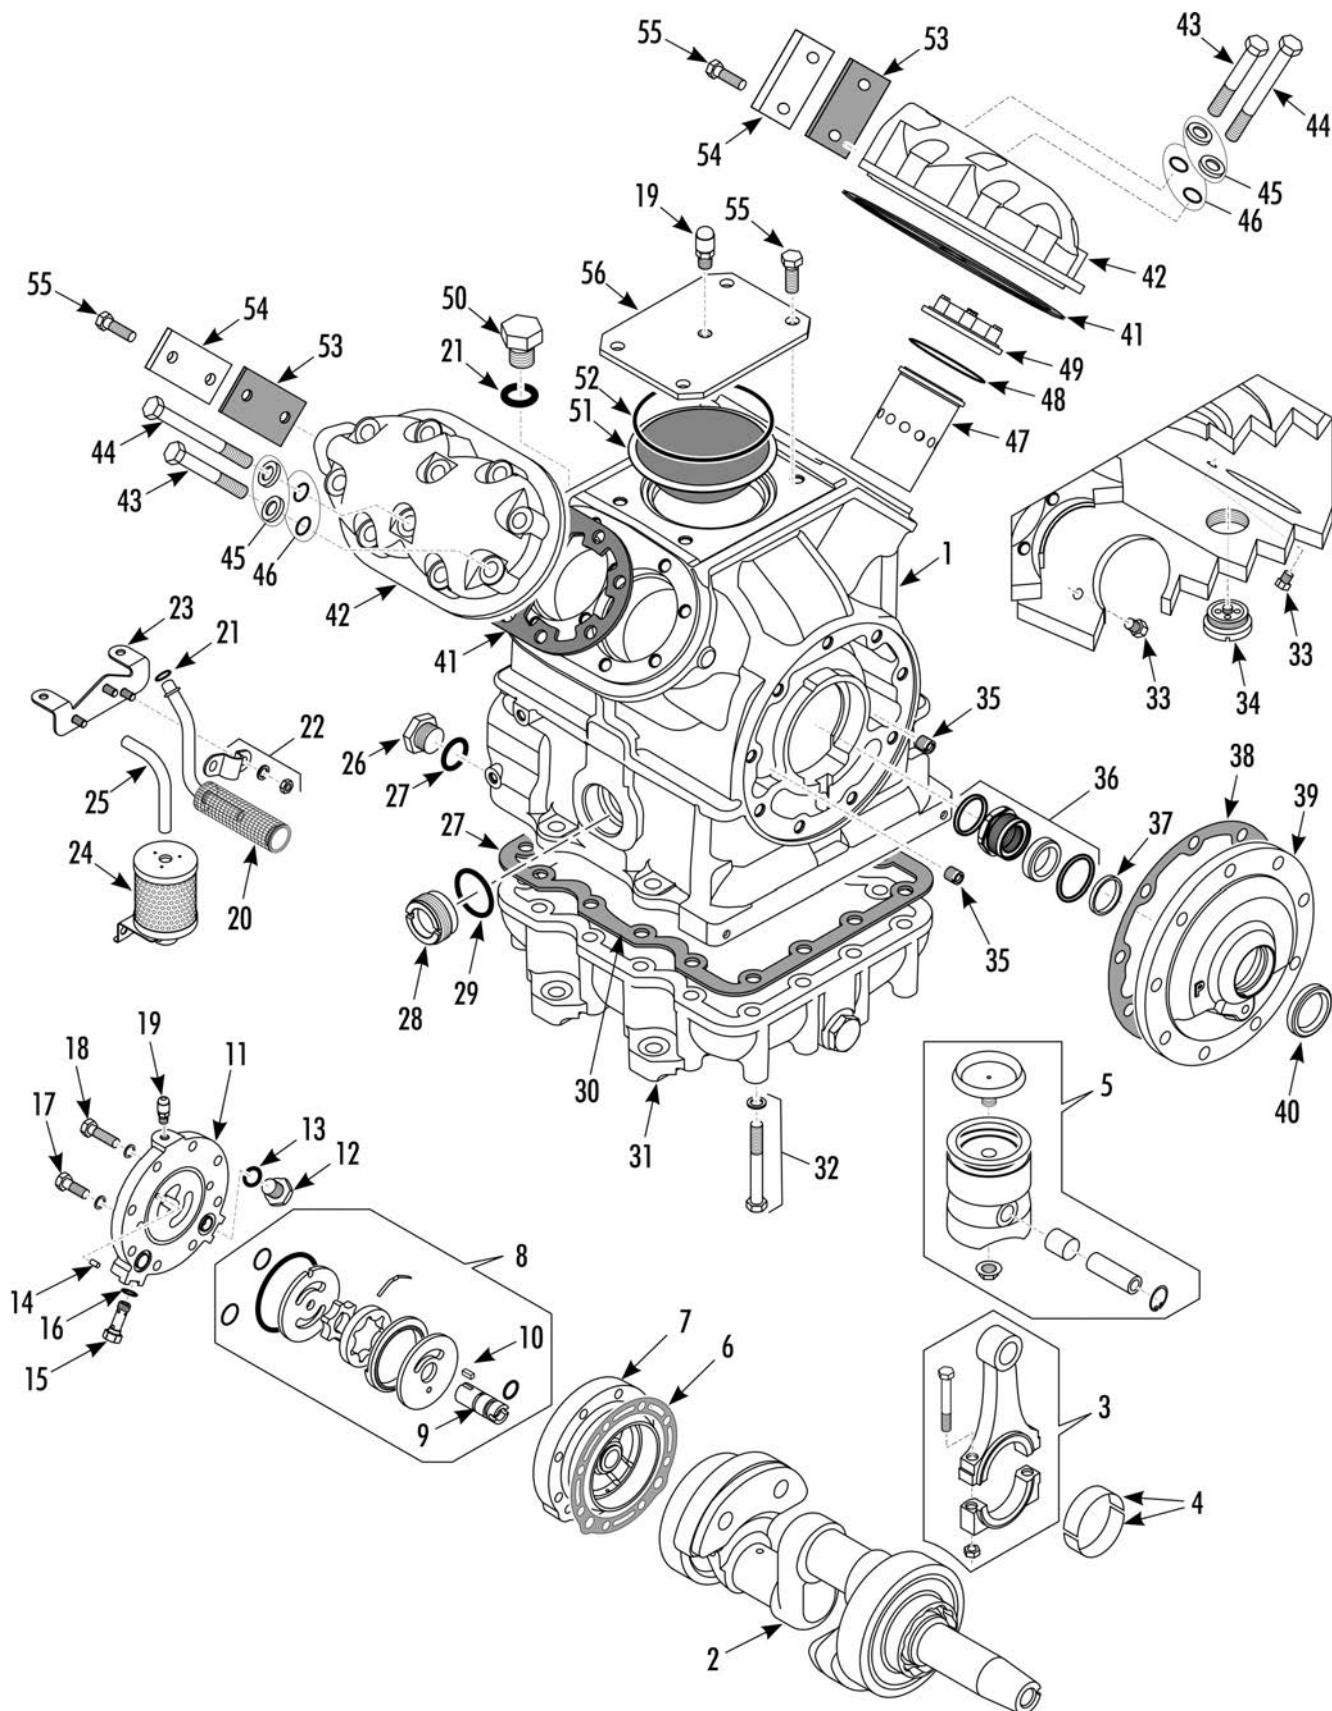


COMPRESSOR - X430P



272E5

Revised
02/26/14

REF	PART NO.	DESCRIPTION	QTY
	55-165	*SCREW - bracket	2
	55-366	*LOCKWASHER	2
24	22-1376	*FILTER - oil (compressor)	1
25	61-6658	*TUBE - oil filter	1
26	55-6751	*PLUG - magnetic	2
27	33-2095	*O-RING	2
28	22-350	*SIGHTGLASS	3
29	33-822	*O-RING	3
30	33-2515	*GASKET - oil sump	1
31	22-552	*SUMP - oil	1
32	55-1417	*SCREW - oil sump	16
	55-896	*FLATWASHER	16
33	22-653	*VALVE - check	2
34	22-787	*VALVE - check (oil return)	1
35	22-568	*VALVE - check	2
36	22-1103	*SEAL - crankshaft	1
37	33-5238	*SEAL - crankshaft	1
38	33-5218	*GASKET - drive end	1
39	12-1045	*PLATE - crankshaft	1
	55-9106	*SCREW - housing	9
	55-896	*FLATWASHER	9
40	33-5061	*SEAL - crankshaft	1
41	33-2552	*GASKET - cylinder head	2
42	22-789	*HEAD - cylinder	2
43	55-6805	*SCREW (2 in lg)	12
44	55-6806	*SCREW (2-5/8 in lg)	8
45	55-6804	*WASHER - sealing	24
46	33-2019	*O-RING	24
47	22-656	*SLEEVE - cylinder	4
48	33-408	*O-RING	4
49	22-990	*PLATE - valve	4
50	55-6750	*PLUG - oil fill	1
51	22-306	*SCREEN - suction	1

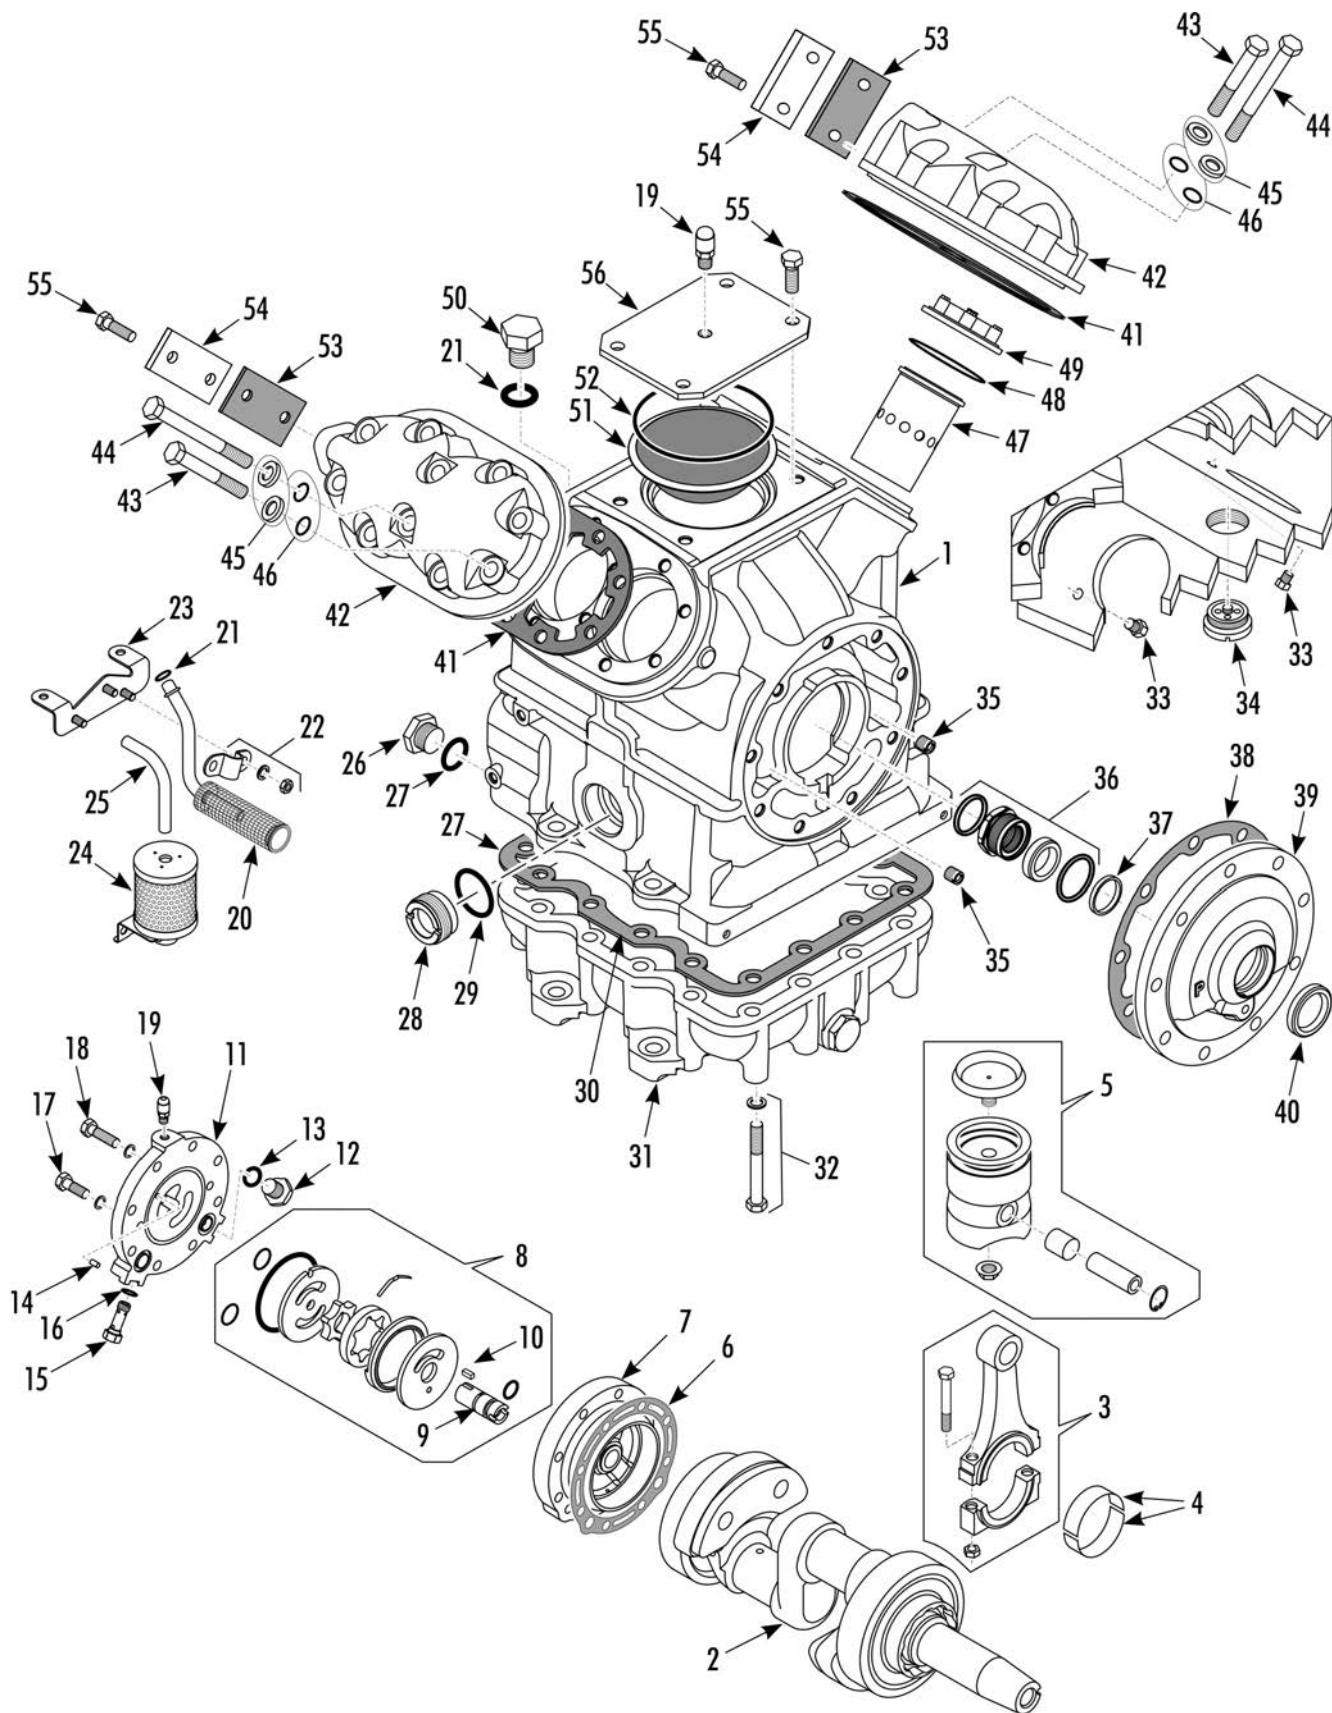




REF	PART NO.	DESCRIPTION	QTY
52	33-1221	*O-RING	1
53	33-2805	*GASKET - manifold	2
54	22-1269	*MANIFOLD - discharge	2
55	55-6822	*SCREW - manifold	6
56	33-3103	*GASKET - plate	1
57	91-5630	*PLATE - cover	1
58	55-329	*SCREW - plate	6
60	33-3101	GASKET - plate	1
61	91-4134	PLATE - suction	1
62	11-2886	*VALVE (Schrader)	1
	203-513	OIL - compressor (use w/ R134a, R404A)	A/R
	30-326	KIT - gasket (see 272E0)	1

272E0  THERMO KING

COMPRESSOR GASKET SET (30-326, X430P)

Revised
01/19/14

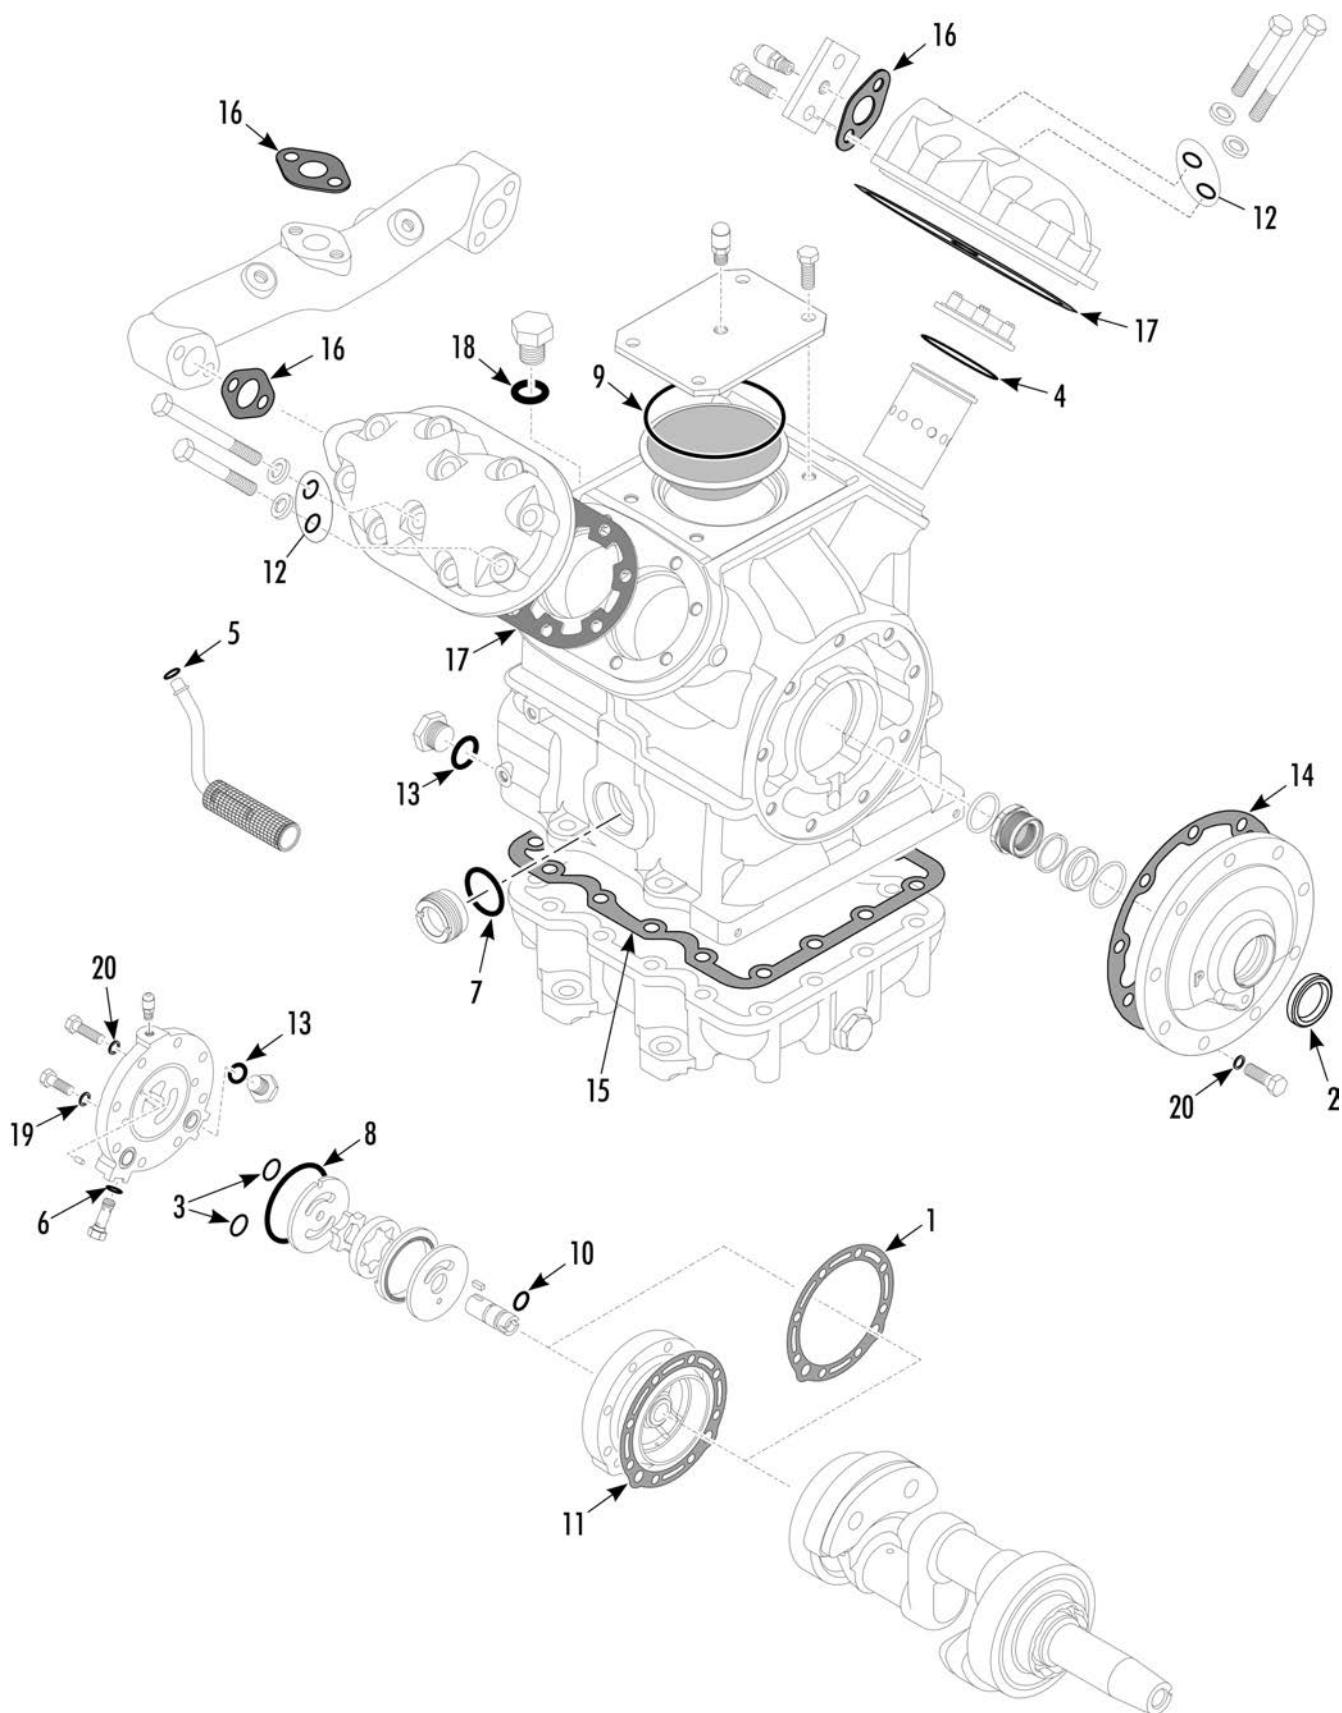


COMPRESSOR GASKET SET (30-326, X430P)

Revised
01/19/14



272EO

REF	PART NO.	DESCRIPTION	QTY
	30-326	KIT - gasket (X430P)	1
1	33-110	*GASKET - pump housing (X426)	1
2	33-5061	*O-RING - dust seal	1
3	33-239	*O-RING - oil galley	2
4	33-408	*O-RING - cylinder sleeve	4
5	33-2205	*O-RING - oil pickup tube	1
6	33-672	*O-RING - regulator	1
7	33-822	*O-RING - sight glass	1
8	33-1175	*O-RING - oil pump cover	1
9	33-1221	*O-RING - throttling valve	1
10	33-1223	*O-RING - oil pump	2
11	33-5217	*GASKET - pump housing (X430P)	1
12	33-2019	*O-RING - cylinder head screw	24
13	33-2095	*O-RING - oil pump plug & drain plug	2
14	33-5218	*GASKET - drive plate	1
15	33-2515	*GASKET - oil sump	1
	33-3797	GASKET - oil sump (7 qt base)	1
16	33-2805	*GASKET - manifold	3
17	33-2552	*GASKET - cylinder head	2
18	55-381	WASHER - oil fill	1
19	51-149	*WASHER - oil pump (5/16)	2
20	55-896	*WASHER - compressor seal (3/8)	37

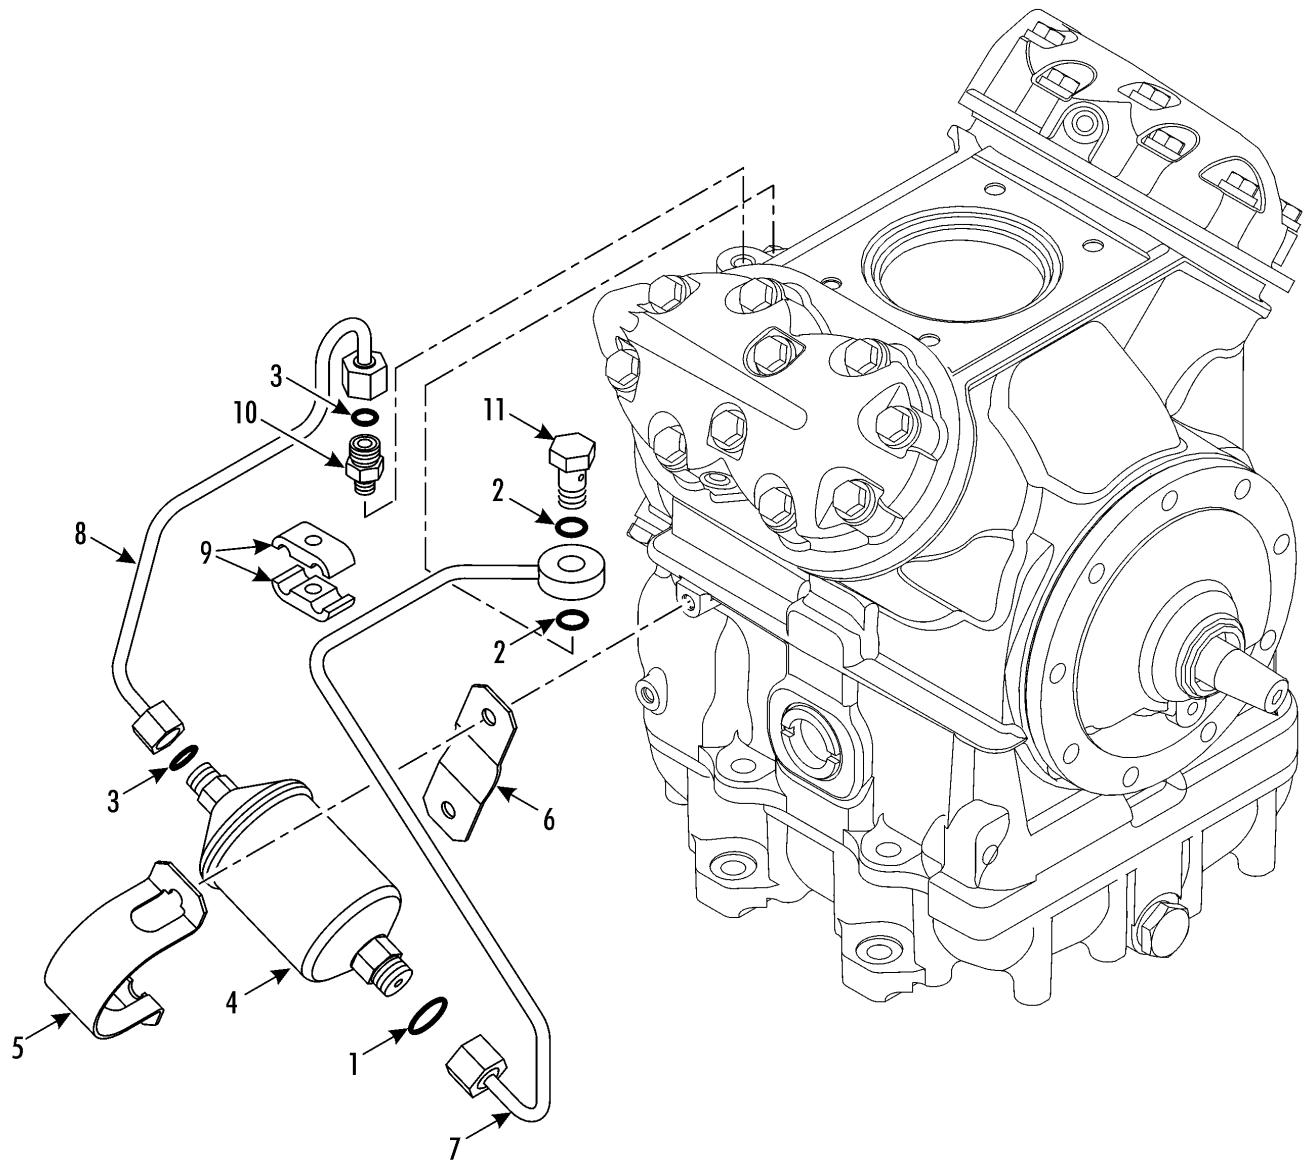

COMPRESSOR OIL FILTER KIT (20-184)

Revised
11/16/12




212B7

REF	PART NO.	DESCRIPTION	QTY
	20-184	KIT - compressor oil filter	1
1	33-1015	*O-RING (3/8)	1
2	33-1223	*O-RING (9/16)	2
3	33-1461	*O-RING (5/16)	2
4	66-7800	*FILTER - oil	1
5	92-1893	*BRACKET - filter clamp	1
	55-8848	*SCREW - bracket	2
	55-790	*LOCKWASHER	2
	55-371	*FLATWASHER	2
6	91-8080	*BRACKET - filter	1
7	61-1453	*TUBE - outlet	1
8	61-1454	*TUBE - inlet	1
9	55-7119	*CLAMP	2
	55-544	*SCREW - clamp	1
	55-411	*FLATWASHER	1
	55-4118	*NUT	1
10	66-8928	*ADAPTER - oil pump	1
11	66-8043	*PLUG - oil return	1

242D0  THERMO KING

COMPRESSOR OIL BOTTLE

Revised
12/13/13

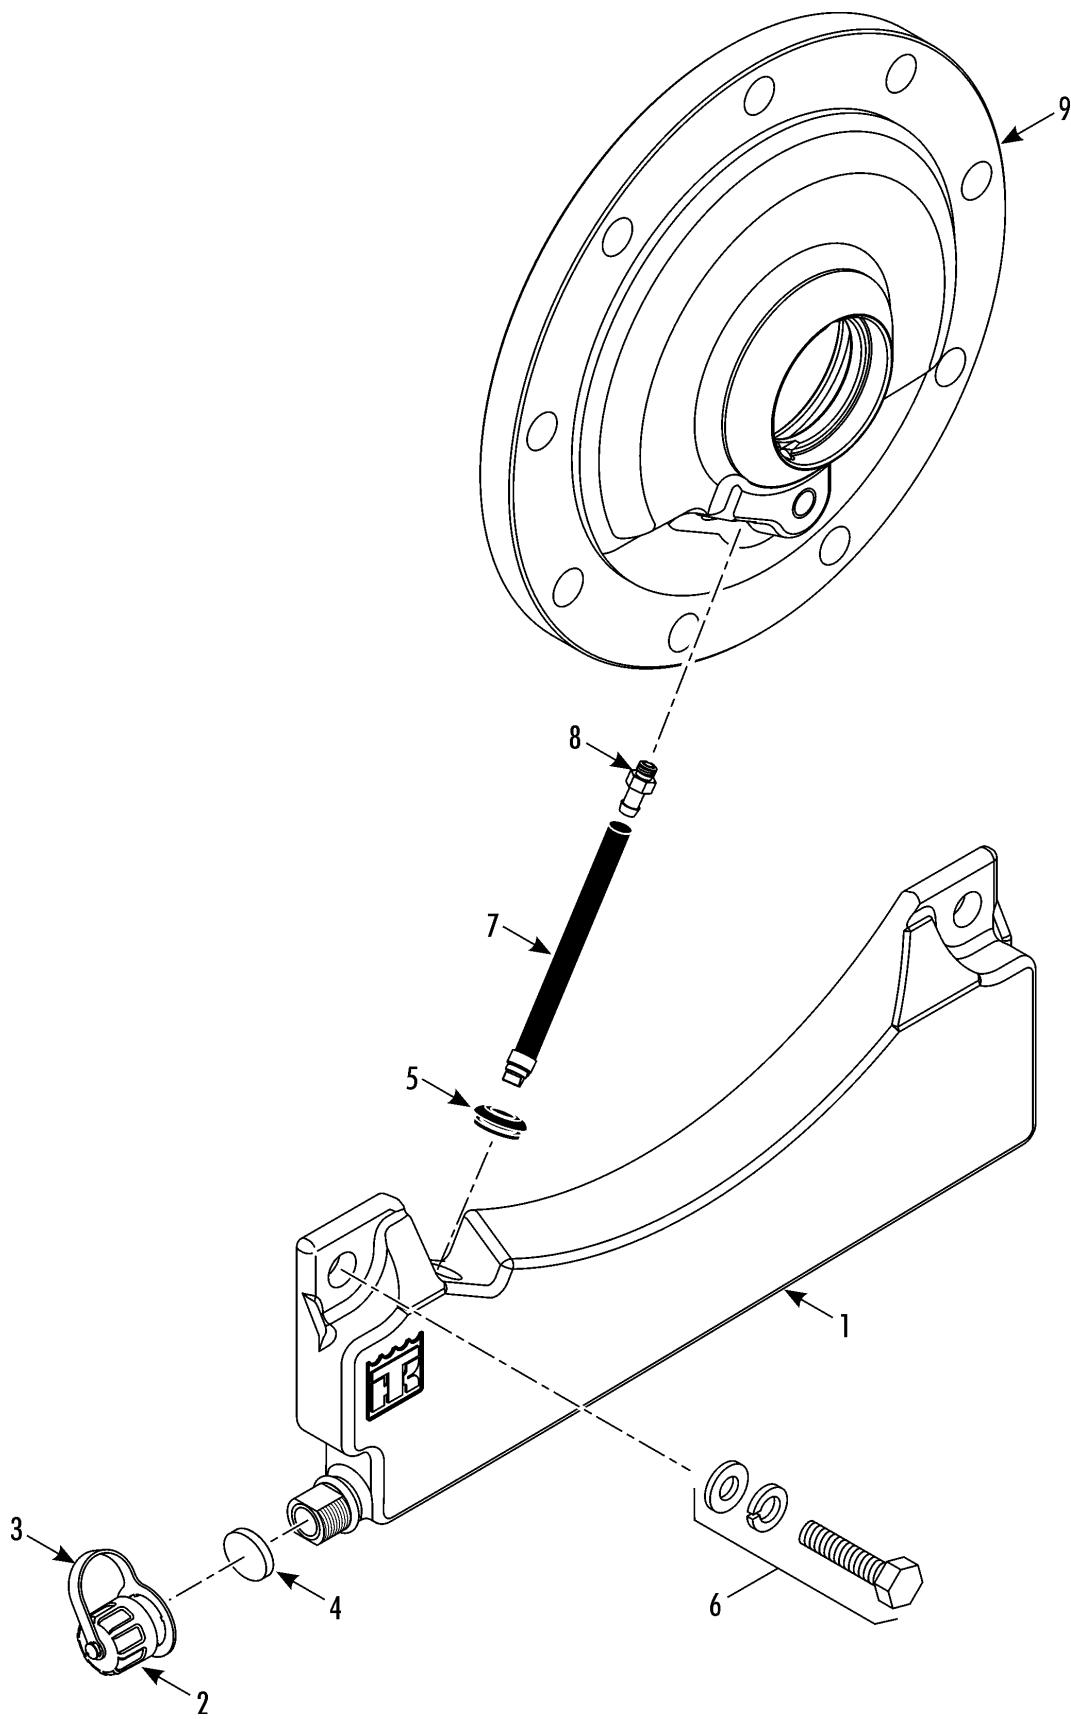


COMPRESSOR OIL BOTTLE



242D0

REF	PART NO.	DESCRIPTION	QTY
1	22-1315	BOTTLE - oil collection	1
2	22-1328	*CAP - bottle	1
3	51-2020	*TETHER - cap	1
4	51-2021	*WASHER - sealing	1
5	33-4631	*GROMMET	1
6	55-145	SCREW - tank	2
	55-411	FLATWASHER	2
	55-366	LOCKWASHER	2
7	22-1329	TUBE - oil	1
	22-1374	TUBE - oil (with check valve)	1
8	22-1042	FITTING - barb	1
9	22-1332	COVER - drive end (X430 LS, see 261A9)	1
10	12-1045	COVER - drive end (after 2/14, X430P)	1

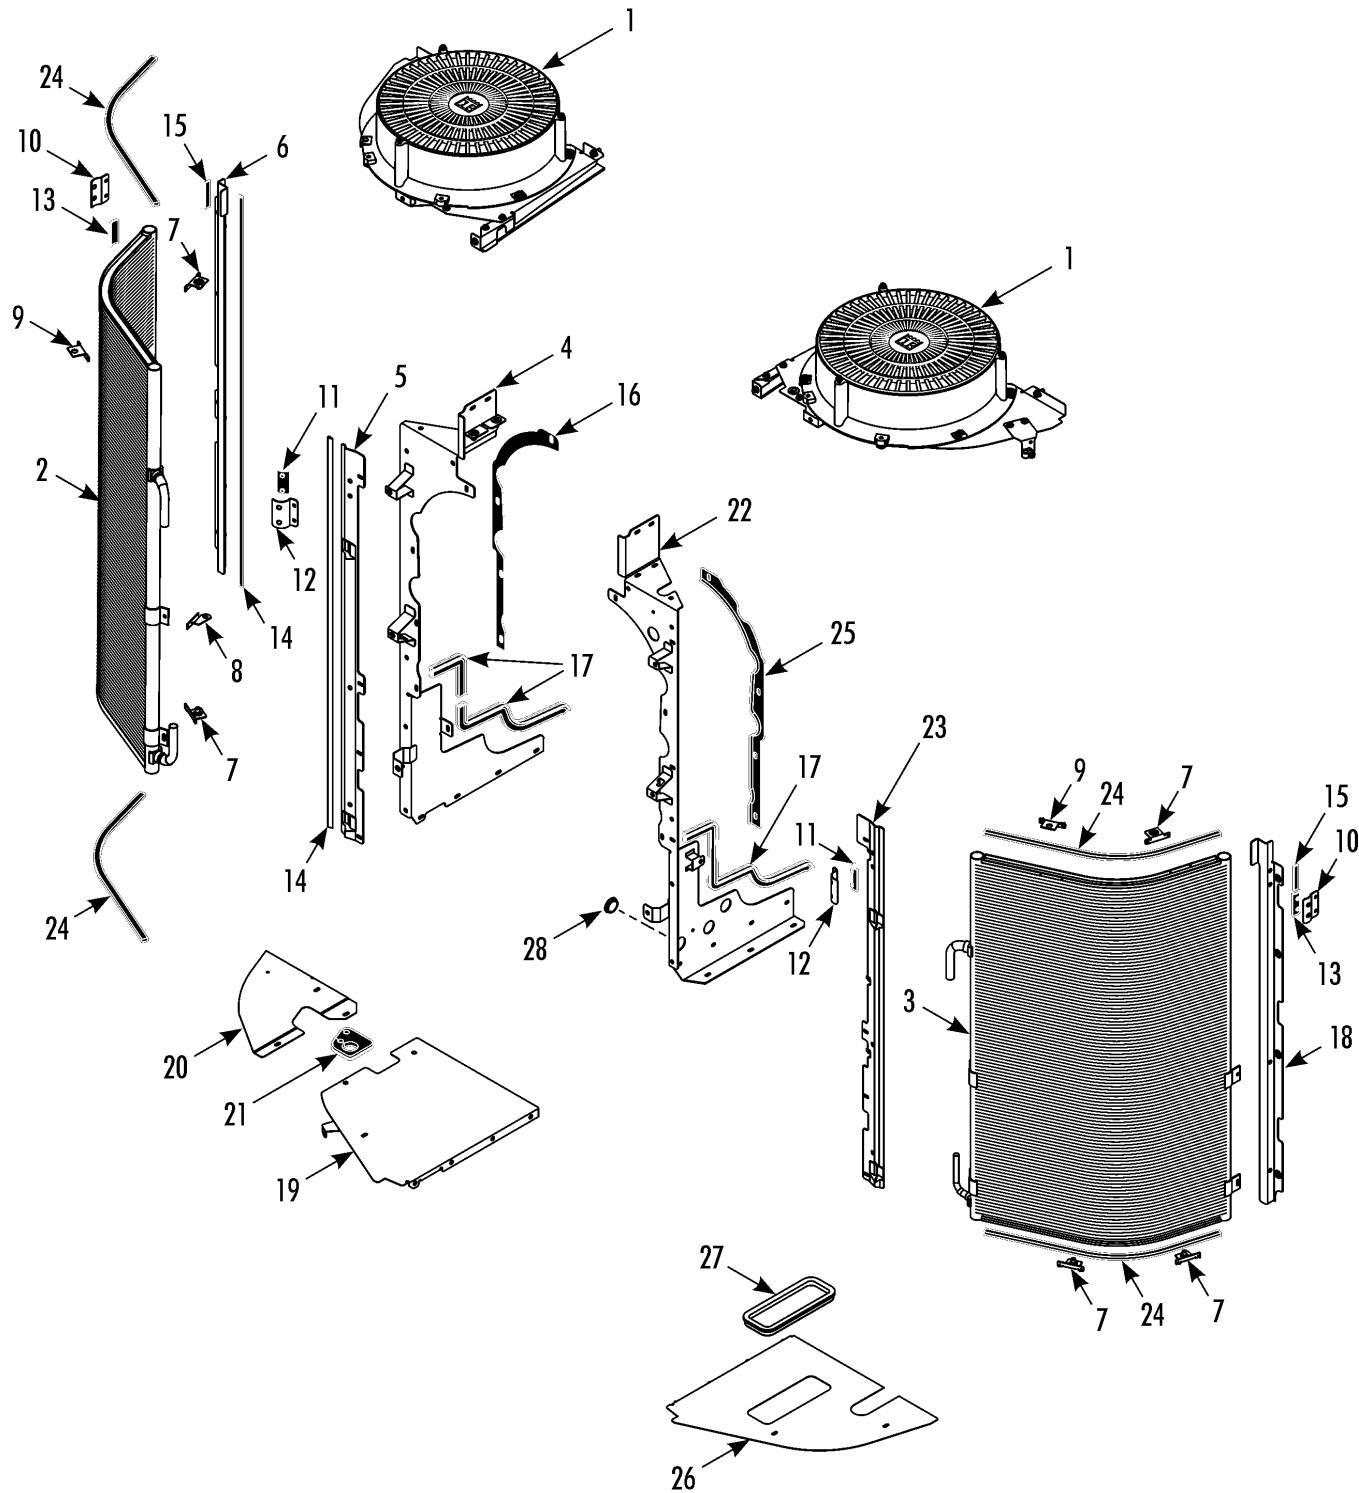


CONDENSER COIL MOUNTING

261B3

Revised
01/31/14

REF	PART NO.	DESCRIPTION	QTY
1	NSS	FAN - condenser (see 261A0)	2
2	67-2752	COIL - condenser (curbside)	1
3	67-2751	COIL - condenser (roadside)	1
4	98-9012	SUPPORT - coil (curbside)	1
5	92-9909	BRACKET - coil (curbside, center)	1
6	92-9856	BRACKET - coil (curbside, side)	1
	51-2758	SCREW - support & brackets	21
7	93-236	BRACKET - coil (top & bottom)	5
8	92-9843	BRACKET - coil (bottom)	1
9	92-9910	BRACKET - coil (top)	2
	55-3197	RIVET - bracket	8
10	92-9846	CLAMP - outside	2
11	33-4948	SUPPORT - rubber	5
12	92-9844	CLAMP - center	1
13	33-4947	SUPPORT - rubber	2
14	33-4950	SEAL - coil	2
15	33-5003	SEAL - coil	2
16	33-4973	SEAL - curbside	1
17	33-5063	EXTRUSION - rubber (25 ft, cut to length)	A/R
18	92-9855	BRACKET - coil (roadside)	1
19	93-237	PANEL - bottom (curbside, inside)	1
20	93-238	PANEL - bottom (curbside, outside)	1
	51-2758	SCREW - panel	8
21	33-4915	GROMMET - tube	1
22	98-9013	BRACKET - coil (roadside, center)	1
	51-2264	*INSERT - threaded (M6)	5
23	92-9854	SUPPORT - coil (roadside)	1
	51-2758	SCREW - support & brackets	36
24	33-5004	SEAL - coil (top & bottom)	4
25	33-4952	SEAL - roadside	1
26	92-9670	PANEL - bottom (roadside)	1
27	33-5005	SEAL - panel	1
28	51-1671	PLUG - button	1

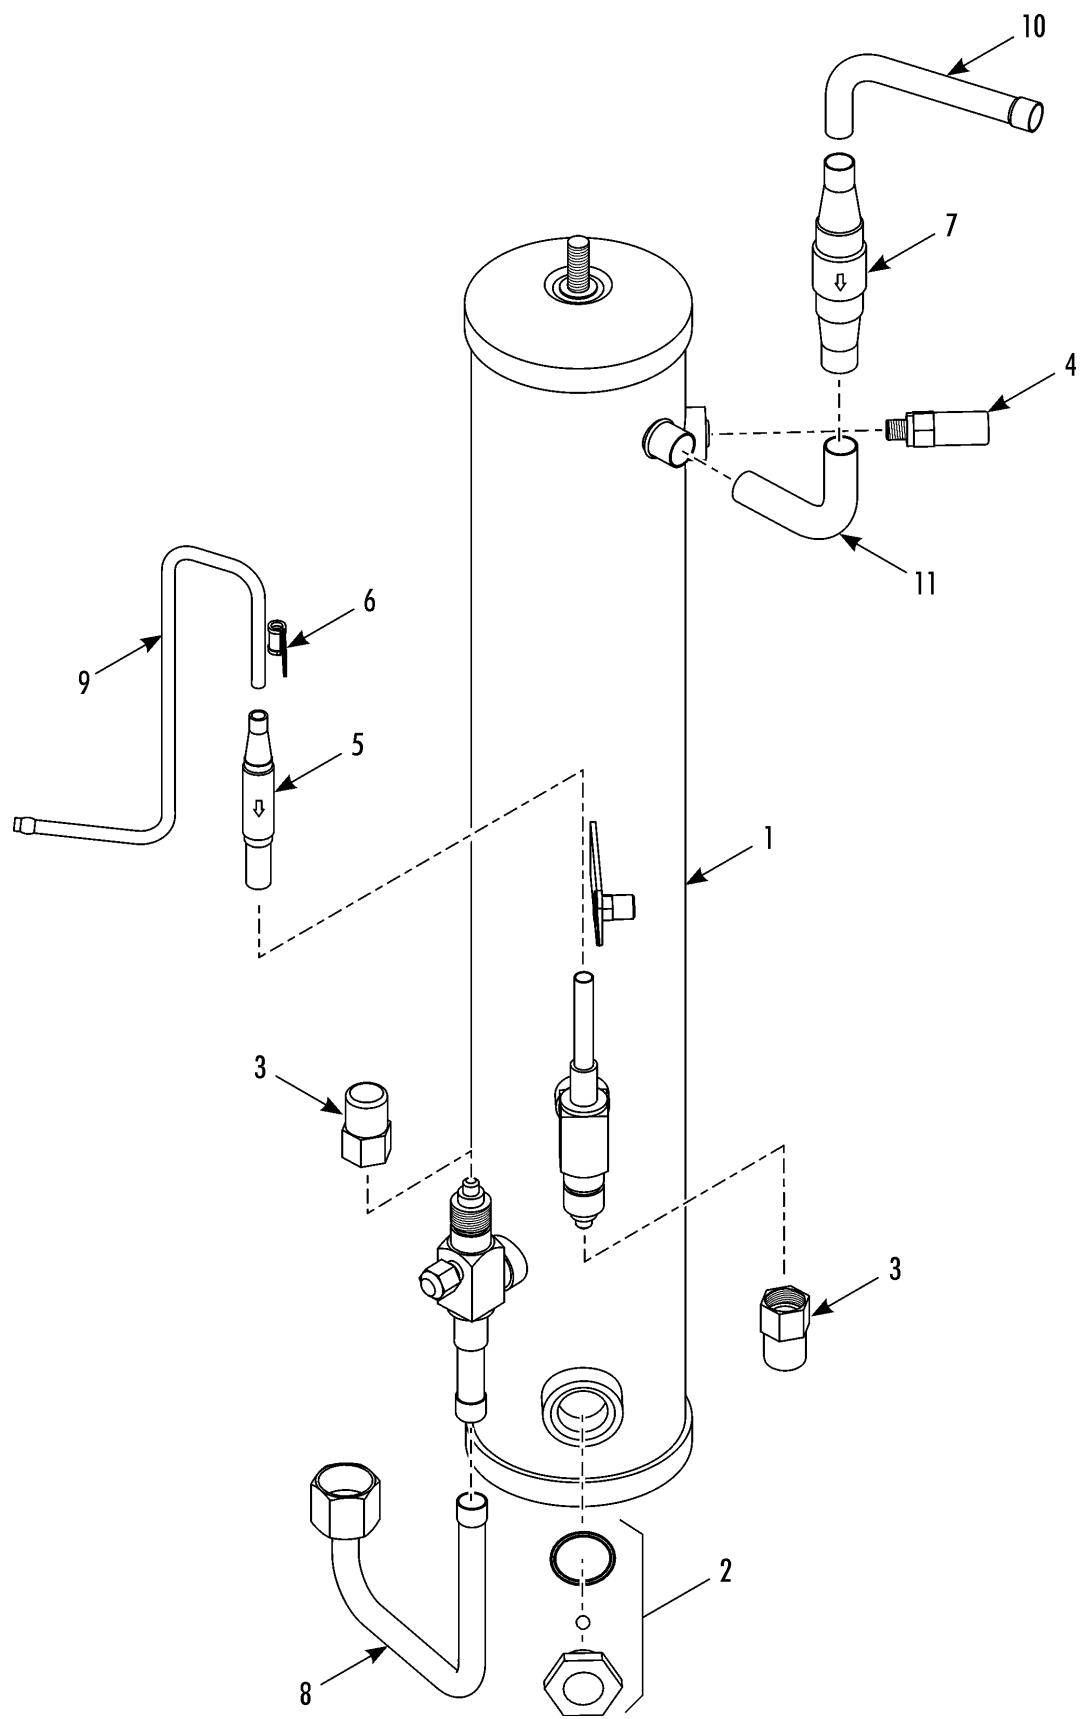


REF	PART NO.	DESCRIPTION	QTY
1	67-2687	TANK - receiver	1
2	67-2668	*INDICATOR - liquid	1
	66-9257	*BALL	1
	33-2419	*O-RING	1
3	66-343	*CAP - valve	2
	55-581	*WASHER - cap	2
4	66-7392	VALVE - relief	1
5	66-9369	VALVE - check	1
6	55-2536	CLAMP - tube	1
	51-2758	SCREW - clamp	1
7	66-5721	VALVE - check	1
8	61-5987	TUBE - receiver to dehydrator	1
9	61-5986	TUBE - valve to tube	1
10	61-5985	TUBE - coil to check valve	1
11	61-5984	TUBE - valve to receiver	1

261H1 

3-WAY VALVE ASSEMBLY

Revised
02/05/13

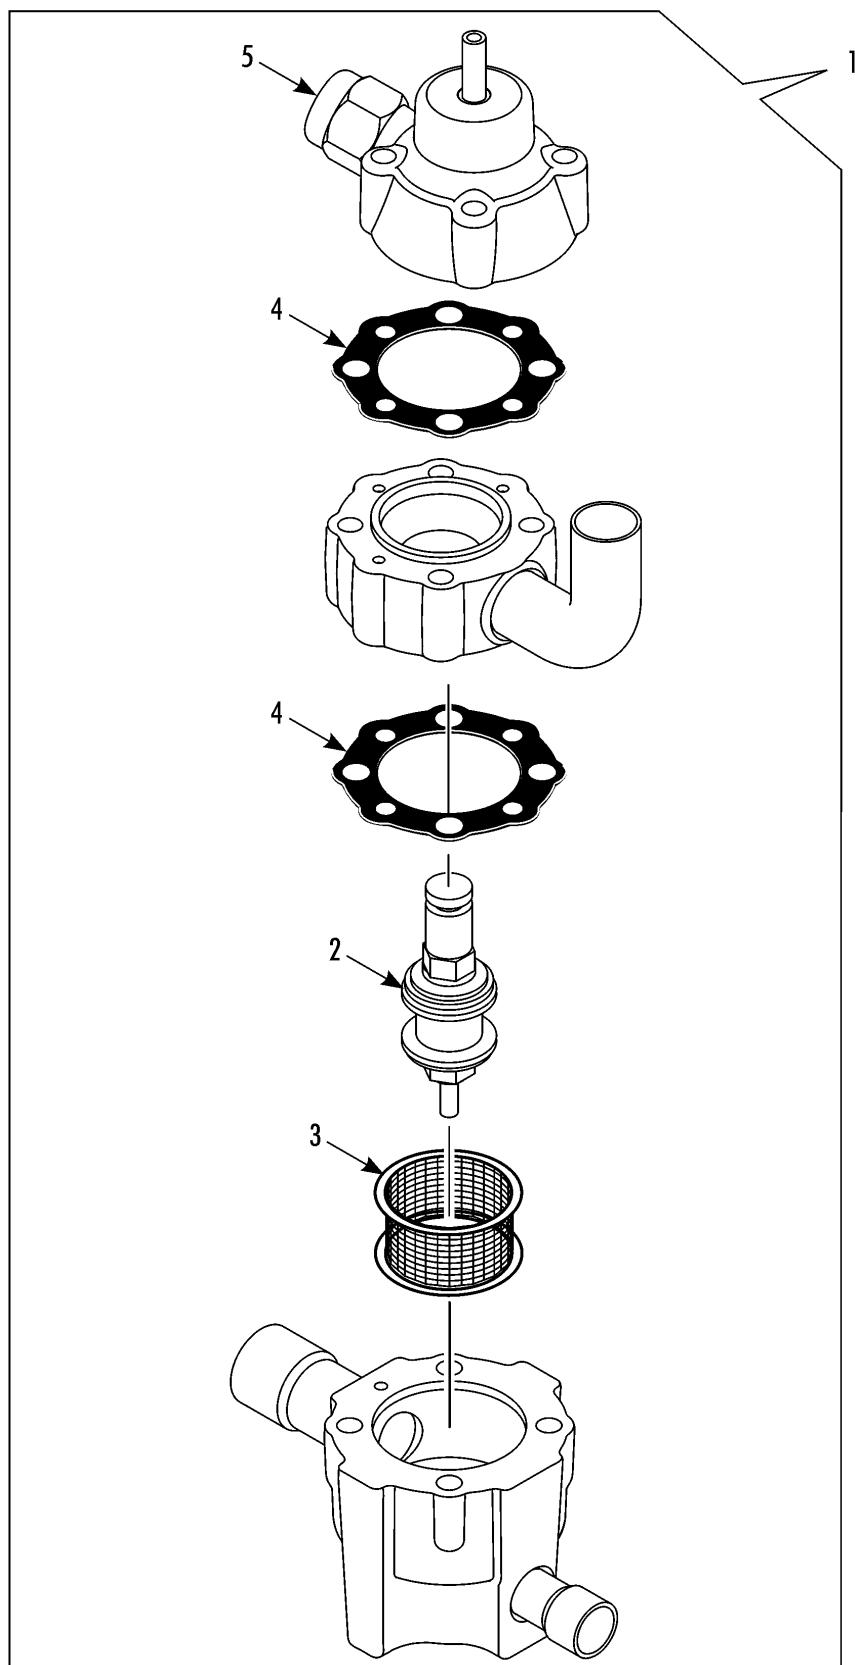


3-WAY VALVE ASSEMBLY



261H1

REF	PART NO.	DESCRIPTION	QTY
1	61-5978	VALVE - 3-way	1
2	60-300	*KIT - valve repair	1
3	60-147	**FILTER	1
4	33-3538	*GASKET	2
5	61-3597	*CAP - top (incl check valve)	1

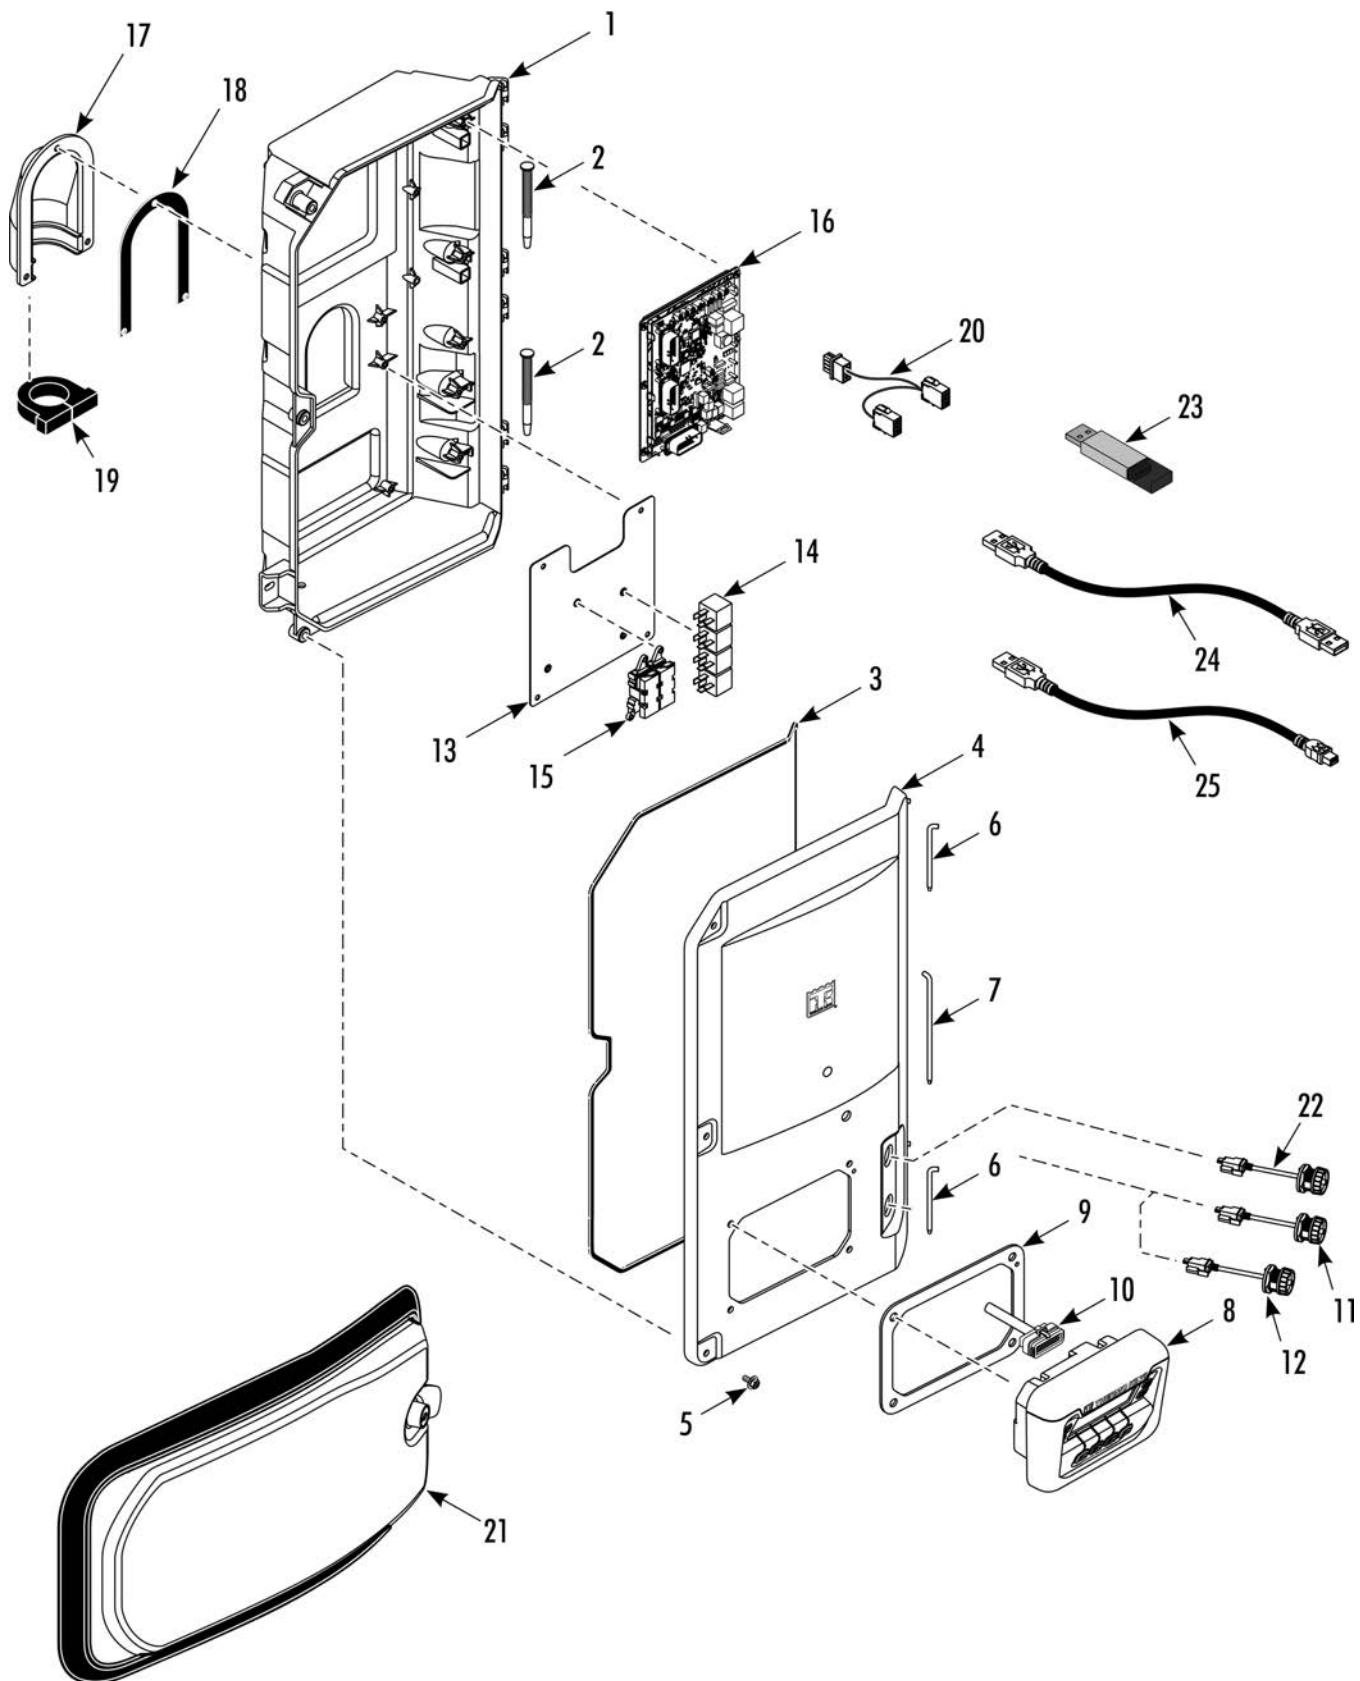


CONTROL BOX S-600

261C1

Revised
01/22/14

REF	PART NO.	DESCRIPTION	QTY
1	98-8848	HOUSING - control box	1
2	51-2256	*PIN - hinge	2
3	33-4918	GASKET - door	1
4	98-9238	DOOR - control box (with one USB hole, see note)	1
5	51-2758	SCREW - door	3
	55-8782	WASHER - special	3
6	51-2213	PIN - door hinge (short)	2
7	51-2214	PIN - door hinge (long)	1
8	45-2449	CONTROLLER - HMI SR-4	1
9	33-3628	*GASKET - HMI	1
	51-2760	SCREW - controller	4
10	42-446	HARNESS - HMI	1
11	42-1438	CABLE - USB (black, before 3/14)	1
12	42-434	CABLE - USB (black, 3/14 & after)	1
	51-2728	*NUT - USB cable	1
13	92-9668	PLATE - relay (before 5/13)	1
	51-2304	SCREW - plate	4
14	41-893	RELAY (before 5/13)	4
15	42-571	MODULE - fuse (before 5/13)	1
	41-8075	*FUSE - 30 amp	1
	41-9361	*FUSE - 40 amp	1
	51-2305	SCREW - relay & fuse module	4
16	45-2521	BOARD - controller SR-4	1
	51-2304	SCREW - board	6
17	92-9530	COVER - harness	1
	51-2758	SCREW - cover	3
18	33-4919	GASKET - cover	1
19	33-4920	SEAL - harness	1
20	41-8187	HARNESS - extension (CAN, optional)	1
21	93-310	DOOR - HMI (optional)	1
	55-7407	SCREW - door	6
	55-7033	FLATWASHER	12
	55-7034	NUT	6


See PB1502 for further information - installing an external USB port on current Precedent units.

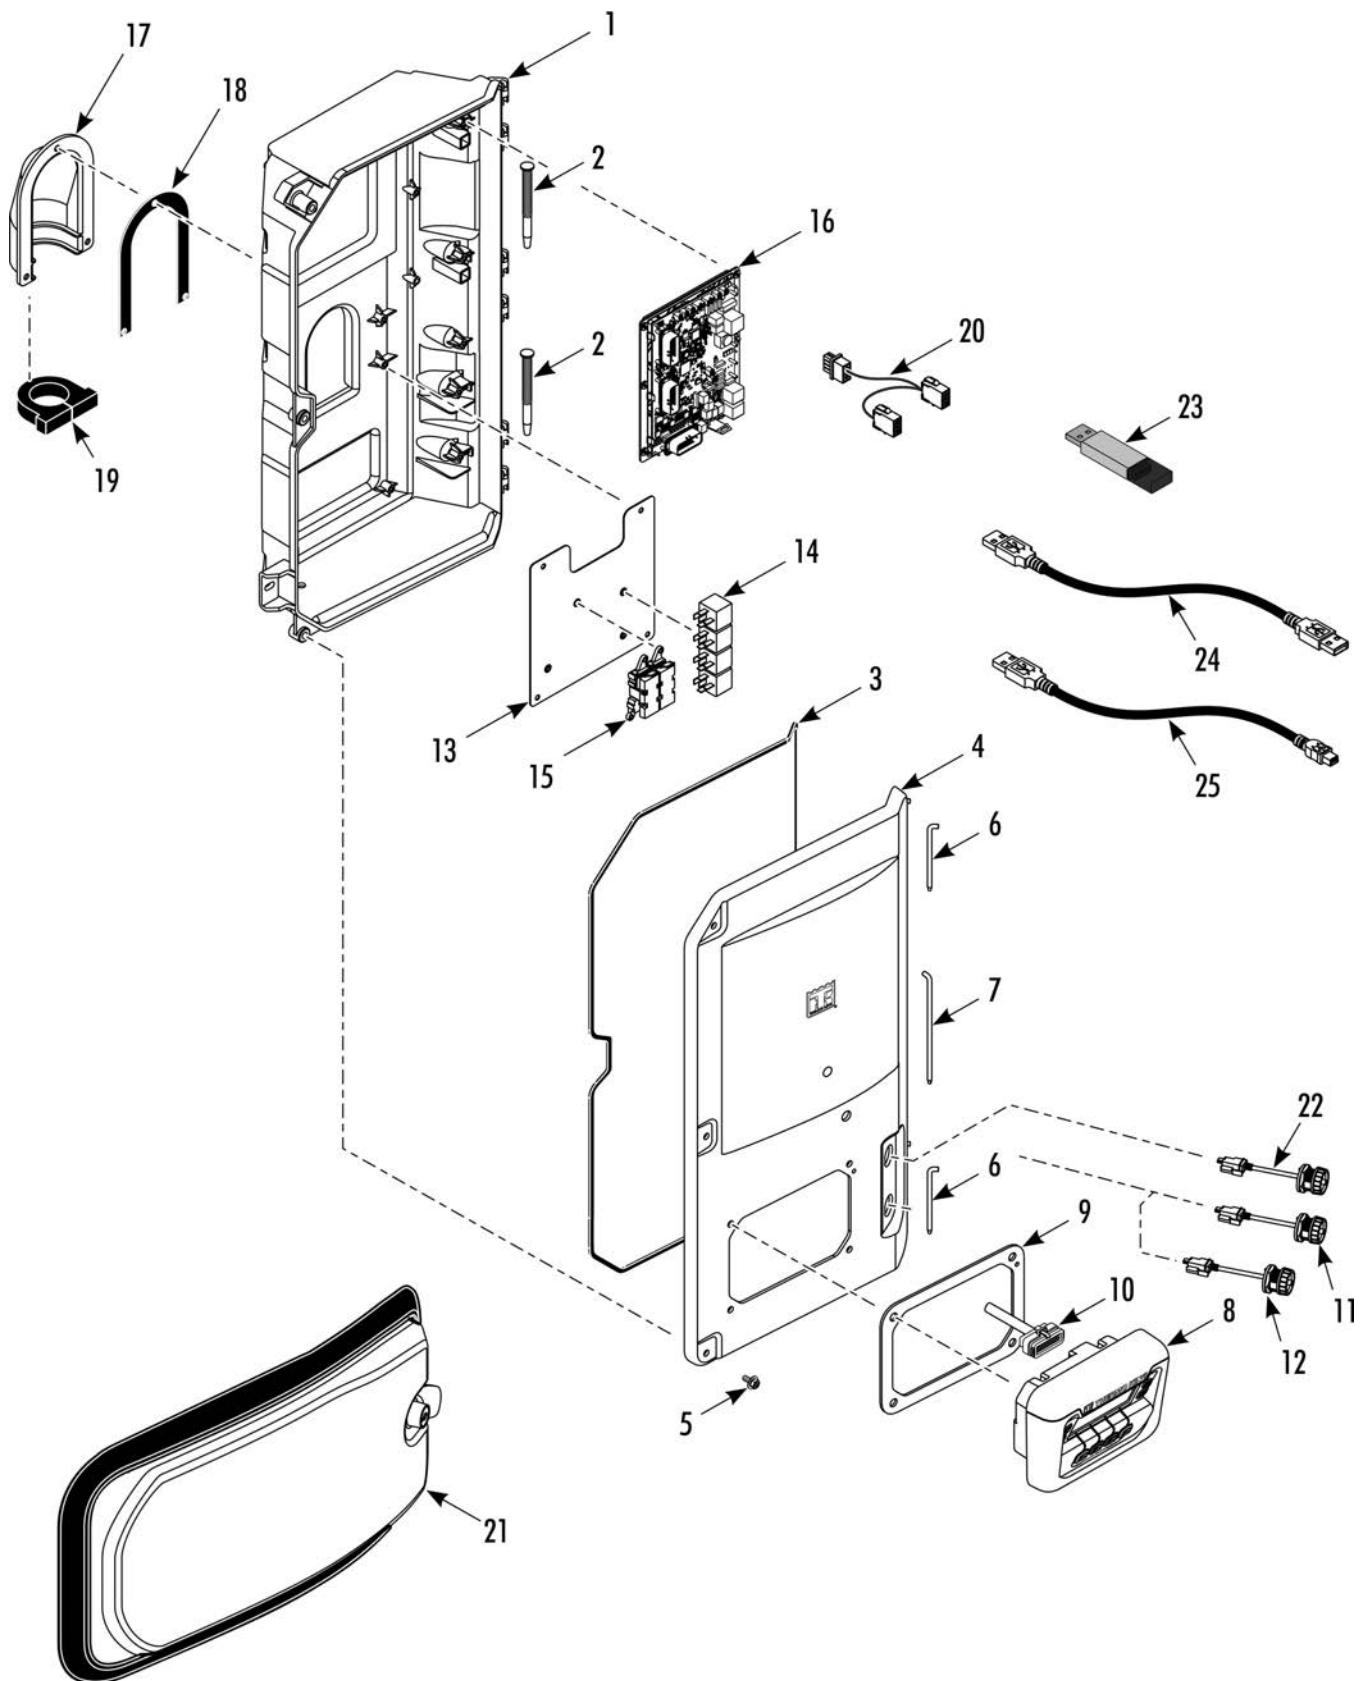




REF	PART NO.	DESCRIPTION	QTY
22	42-435	CABLE - USB (gray, see note)	1
23	204-2964	TOOL - ThermoServ (full version)	1
	204-2965	TOOL - ThermoServ (upgrade version)	1
24	204-1973	*CABLE - USB (3M)	1
25	204-2000	CABLE - USB to mini USB (16 ft, optional)	1

See PB1502 for further information - installing an external USB port on current Precedent units.

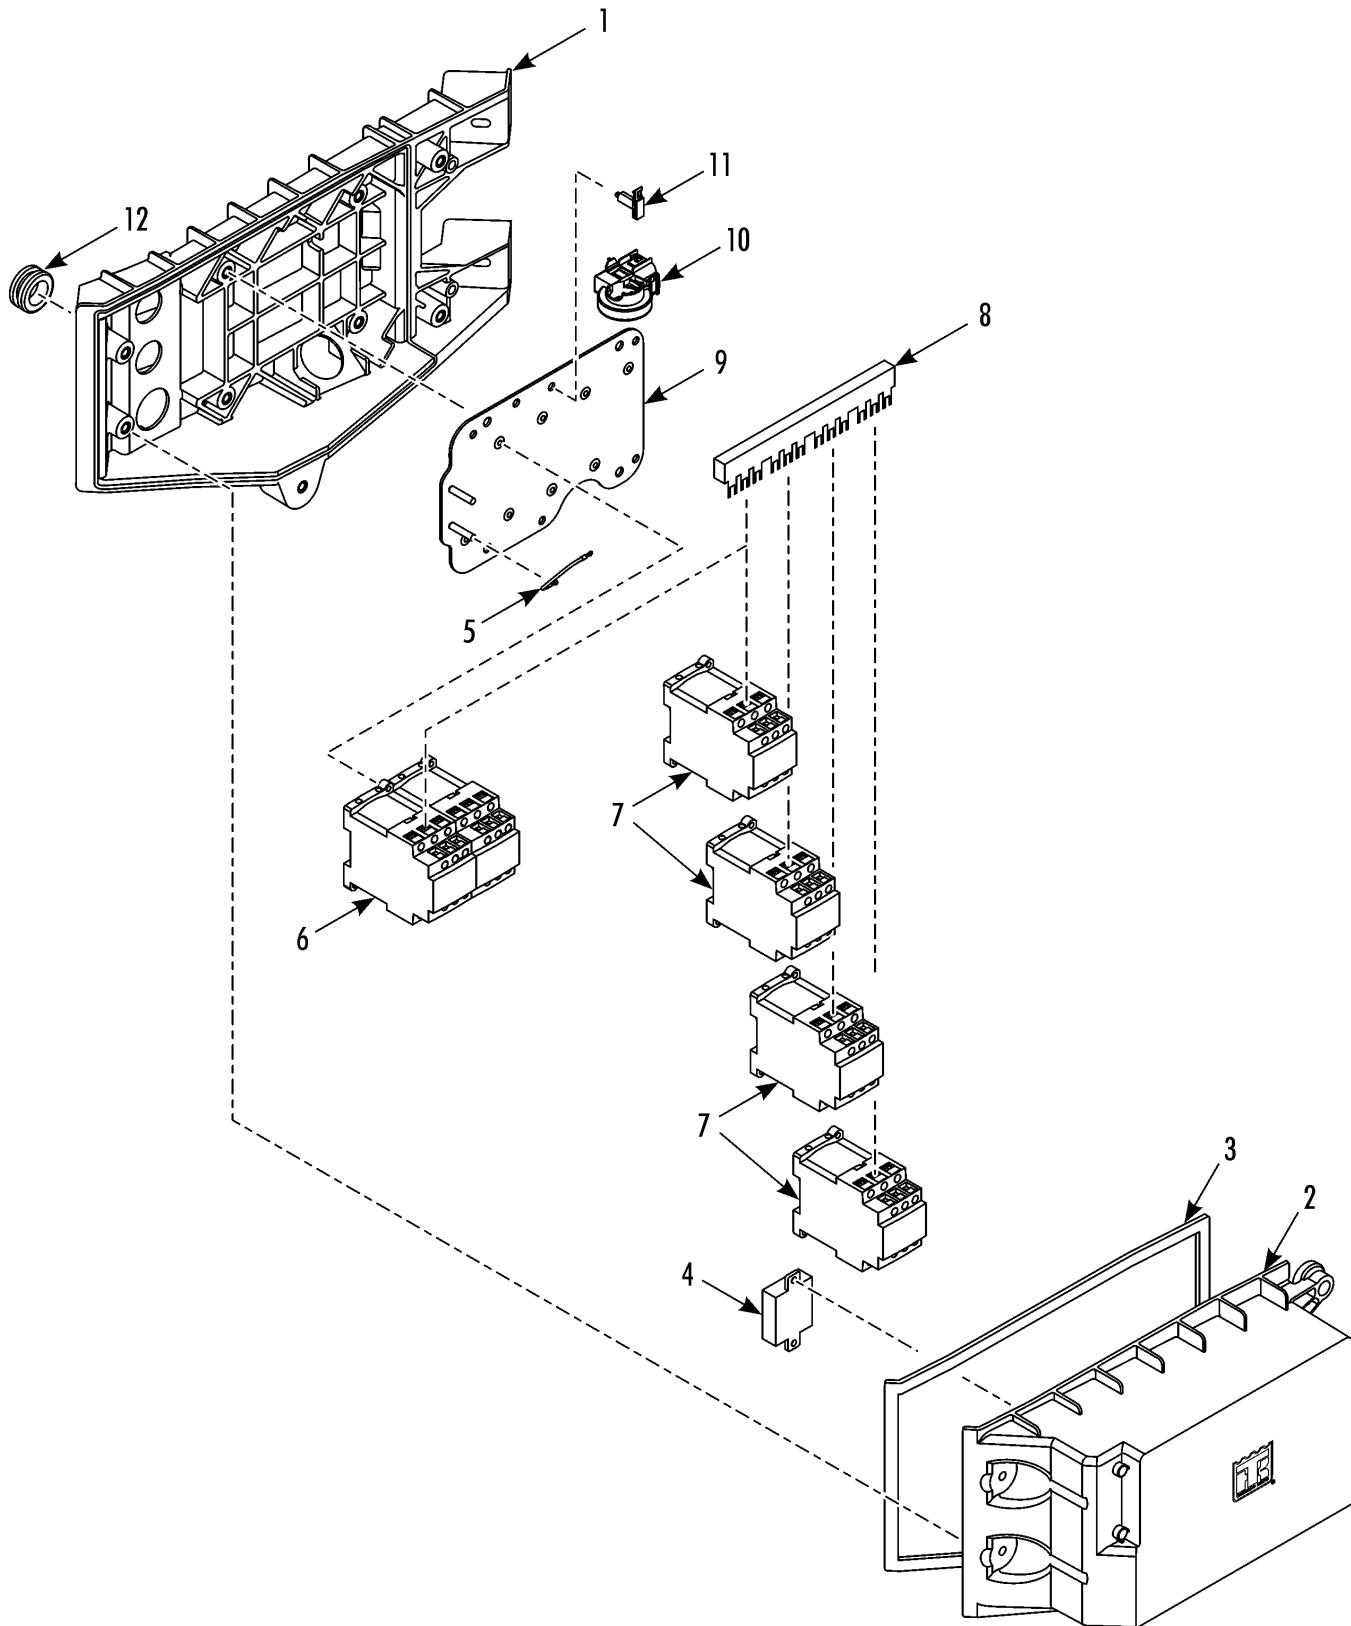

CONTROL BOX - BLOWER & FANSRevised
01/11/14**261B8**

REF	PART NO.	DESCRIPTION	QTY
1	98-8850	HOUSING - fan control box	1
	51-2768	SCREW - housing (M6 X 45)	2
	51-2769	SCREW - housing (M6 X 50)	2
	55-7075	FLATWASHER	2
	55-7007	NUT	2
2	98-8962	COVER - fan control box	1
	51-2758	SCREW - cover (M6 X 16)	2
	51-2760	SCREW - cover (M6 X 25)	2
	55-8782	WASHER - retainer	4
3	33-4917	GASKET - control box	1
4	42-237	RELAY - ground fault	1
	42-519	*CONNECTOR - 2-pin	1
	42-521	*TERMINAL - female	2
	44-9544	*RECEPTACLE - 3-pin	1
	51-2304	SCREW - relay	2
5	42-433	HARNESS - fan box	1
	55-7367	NUT - ground stud	2
	55-7034	NUT - ground stud (locking)	2
	51-1768	MOUNT - cable tie	5
6	42-430	CONTACTOR - evaporator motor (with interlock, before 5/13)	1
7	42-432	CONTACTOR - condenser motors (after 5/13, also used for evaporator)	4
	51-2305	SCREW - contactor	8
8	42-431	BUSBAR - 4 position	1
9	92-9857	PLATE - contactors	1
	51-2305	SCREW - plate	8
10	42-396	SENSOR - current (early units only)	1
11	42-709	CLIP - connector (early units only)	1
12	33-4916	GROMMET	1

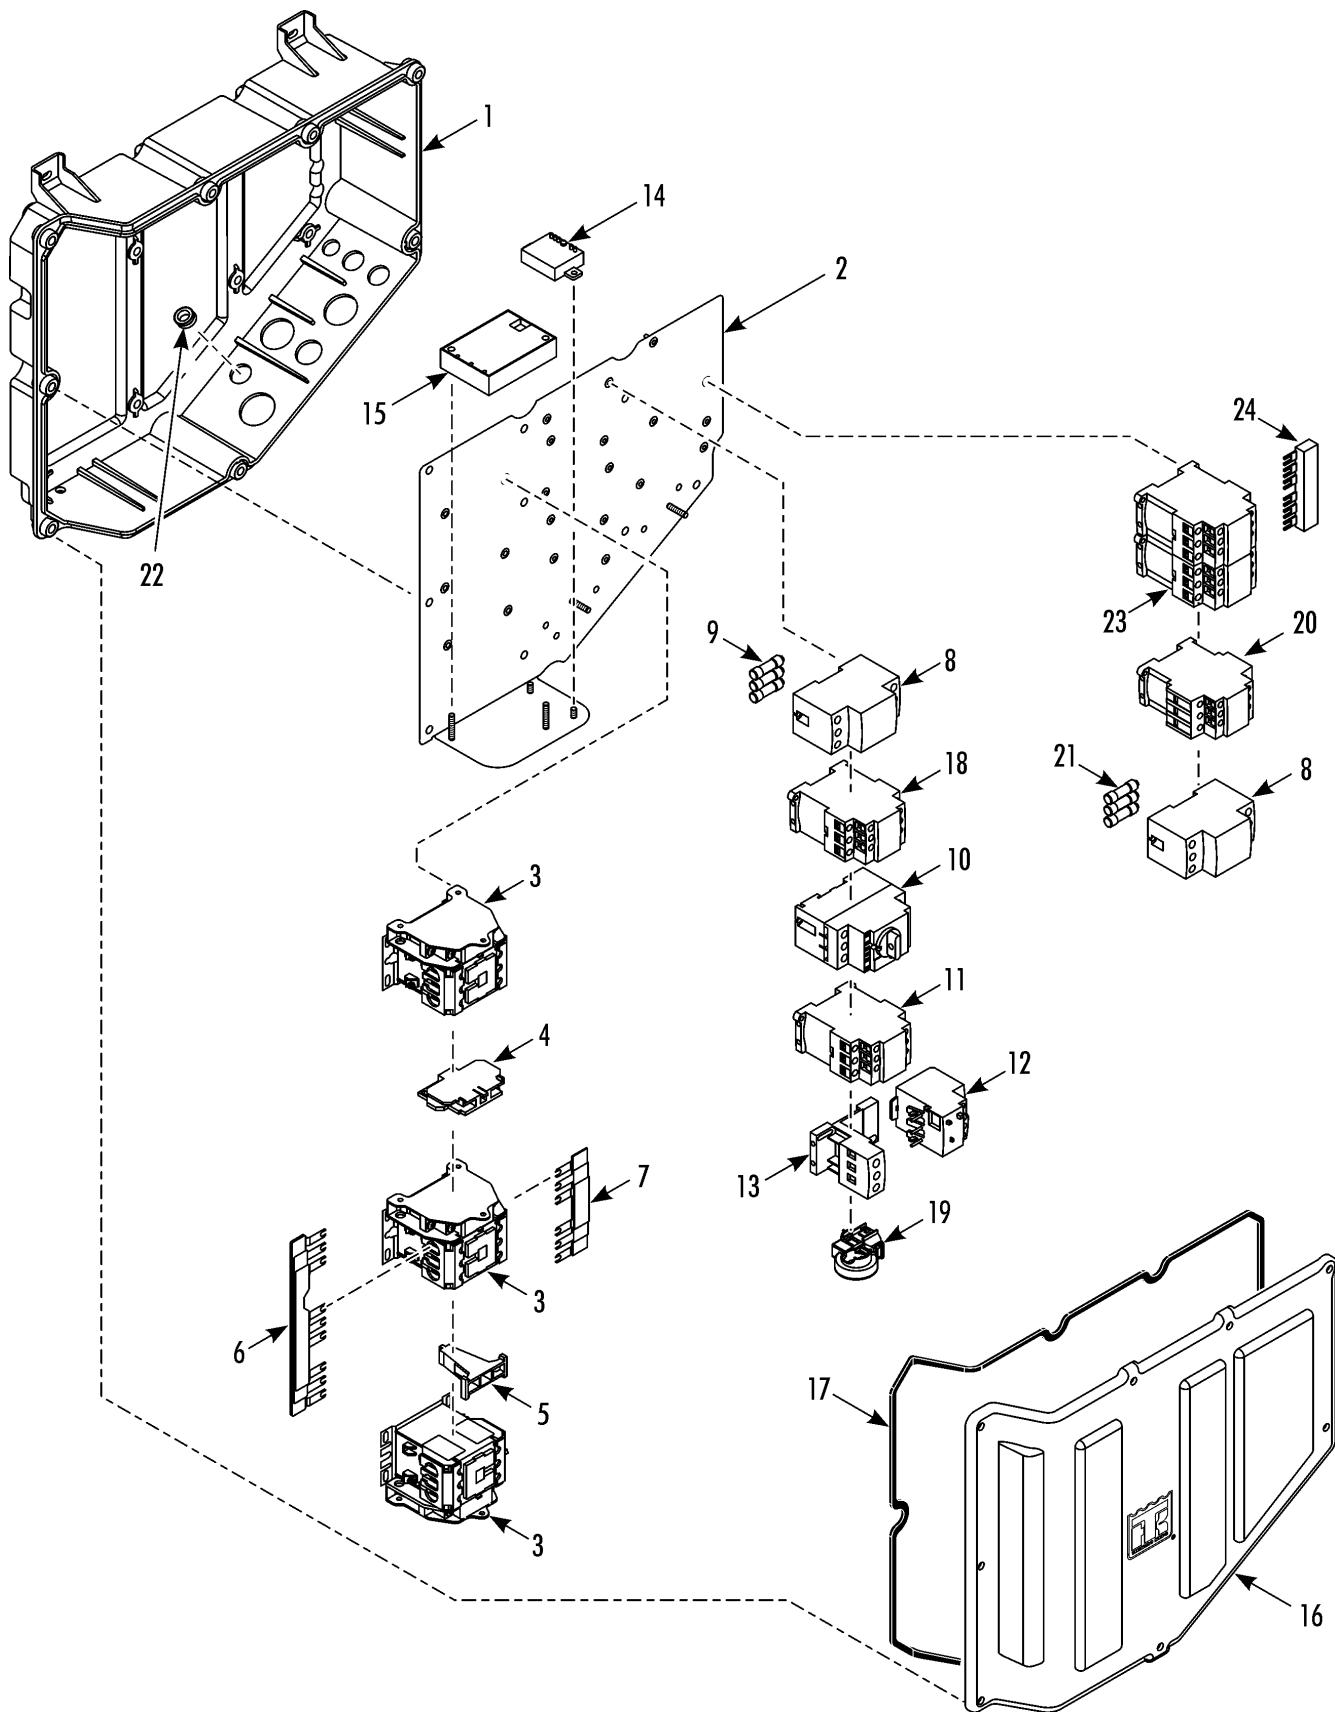




REF	PART NO.	DESCRIPTION	QTY
1	98-8852	HOUSING - high voltage box	1
2	93-771	PLATE - contactor	1
3	41-7934	CONTACTOR & TIMER (motor & phase correction)	3
	51-2199	SCREW - contactor	6
4	42-754	CONTACTOR - auxiliary	1
5	44-8813	INTERLOCK	1
6	42-548	BAR - bus (long)	1
7	42-547	BAR - bus (short)	1
8	42-545	FUSEHOLDER (3 pole)	2
9	42-546	FUSE (15 amp, 230 V w/ alternator, see note)	3
	42-866	FUSE (7 amp, 460 V w/ alternator)	3
	42-546	FUSE (15 amp, 230 V w/ battery charger)	3
	42-972	FUSE (12 amp, 460 V w/ battery charger)	3
10	42-544	RELAY - overload (heater)	1
11	41-5629	CONTACTOR - heater	1
12	41-9110	RELAY - overload (compressor, 230V)	1
	41-6094	RELAY - overload (compressor, 460V)	1
13	41-6096	ADAPTER - overload relay mount	1
	51-2305	SCREW - relays & contactor (items 8 - 13)	10
14	42-237	RELAY - ground fault	1
15	42-792	SELECTOR - phase	1
	51-717	NUT	8
16	98-8851	COVER - high voltage box	1
	51-2199	*SCREW - cover	7
	55-8782	*WASHER	7
17	33-4971	*GASKET - cover	1
18	42-432	CONTACTOR - generator	1
19	42-396	SENSOR - current (early units only)	1
20	41-9391	CONTACTOR - transformer	1
21	42-444	FUSE (10 amp, 460 V units)	3
22	33-4972	GROMMET - blind	1
23	42-430	CONTACTOR - reversing (460 V units)	1
24	42-974	BAR - bus	1

The 10 amp for 230 V units w/ alternator has changed to 15 amp fuse.

261B0  THERMO KING

CONTROL BOX - ECU S-600/S-700

Revised
01/30/14

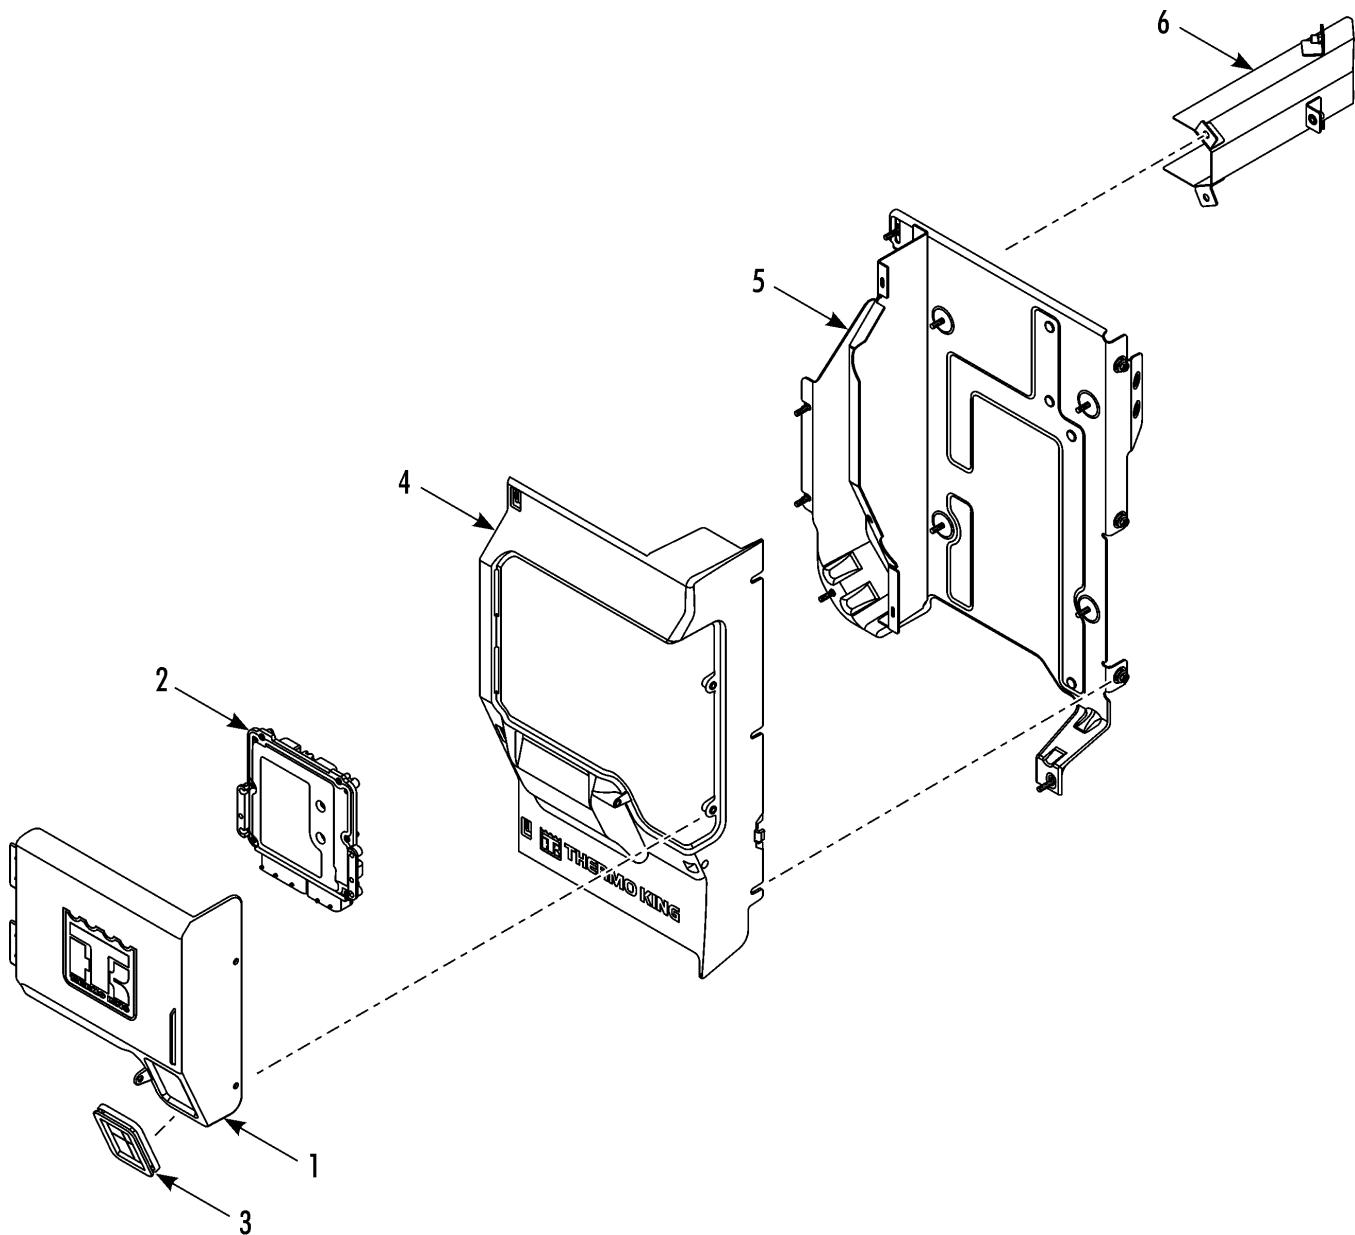


CONTROL BOX - ECU S-600/S-700




261B0

REF	PART NO.	DESCRIPTION	QTY
1	93-239	MOUNT - ECU	1
	51-2760	SCREW - mount	4
2	42-531	ECU - TIER 4 (Yanmar)	1
	51-2766	SCREW - ECU	4
3	33-5006	GROMMET - ECU	1
4	92-9664	COVER - ECU	1
	51-2760	SCREW - cover	4
5	92-9663	MOUNT - ECU	1
	51-2760	SCREW - box	4
6	93-240	SHIELD - heat	1
	51-2760	SCREW - heat shield	2

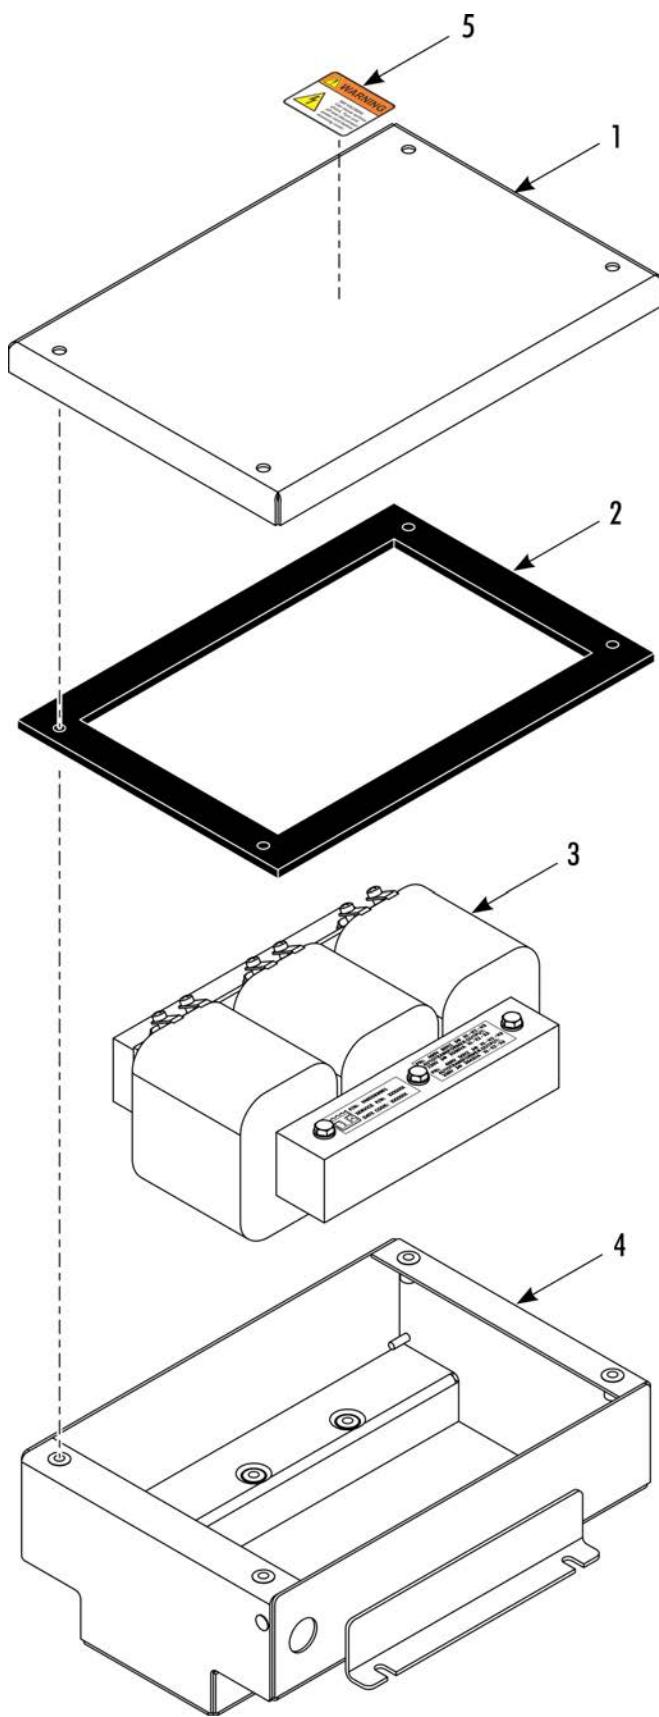

REF	PART NO.	DESCRIPTION	QTY
1	93-566	COVER - transformer box (before 8/13)	1
	93-1733	COVER - transformer box (8/13 & after)	6
	51-2758	SCREW - cover	4
2	33-5060	GASKET - cover (before 8/13)	1
	33-5240	GASKET - cover (8/13 & after)	3
3	45-2460	TRANSFORMER (460/230 V)	1
	55-7802	SCREW - transformer	6
	55-4638	FLATWASHER	6
4	93-565	BOX - transformer (before 8/13)	1
	93-1732	BOX - transformer (8/13 & after)	3
	51-2758	SCREW - box	4
5	92-9546	NAMEPLATE - warning	1

After August 2013, the box was shorted from 315 to 264mm long to provide more clearance for the fuel lines.

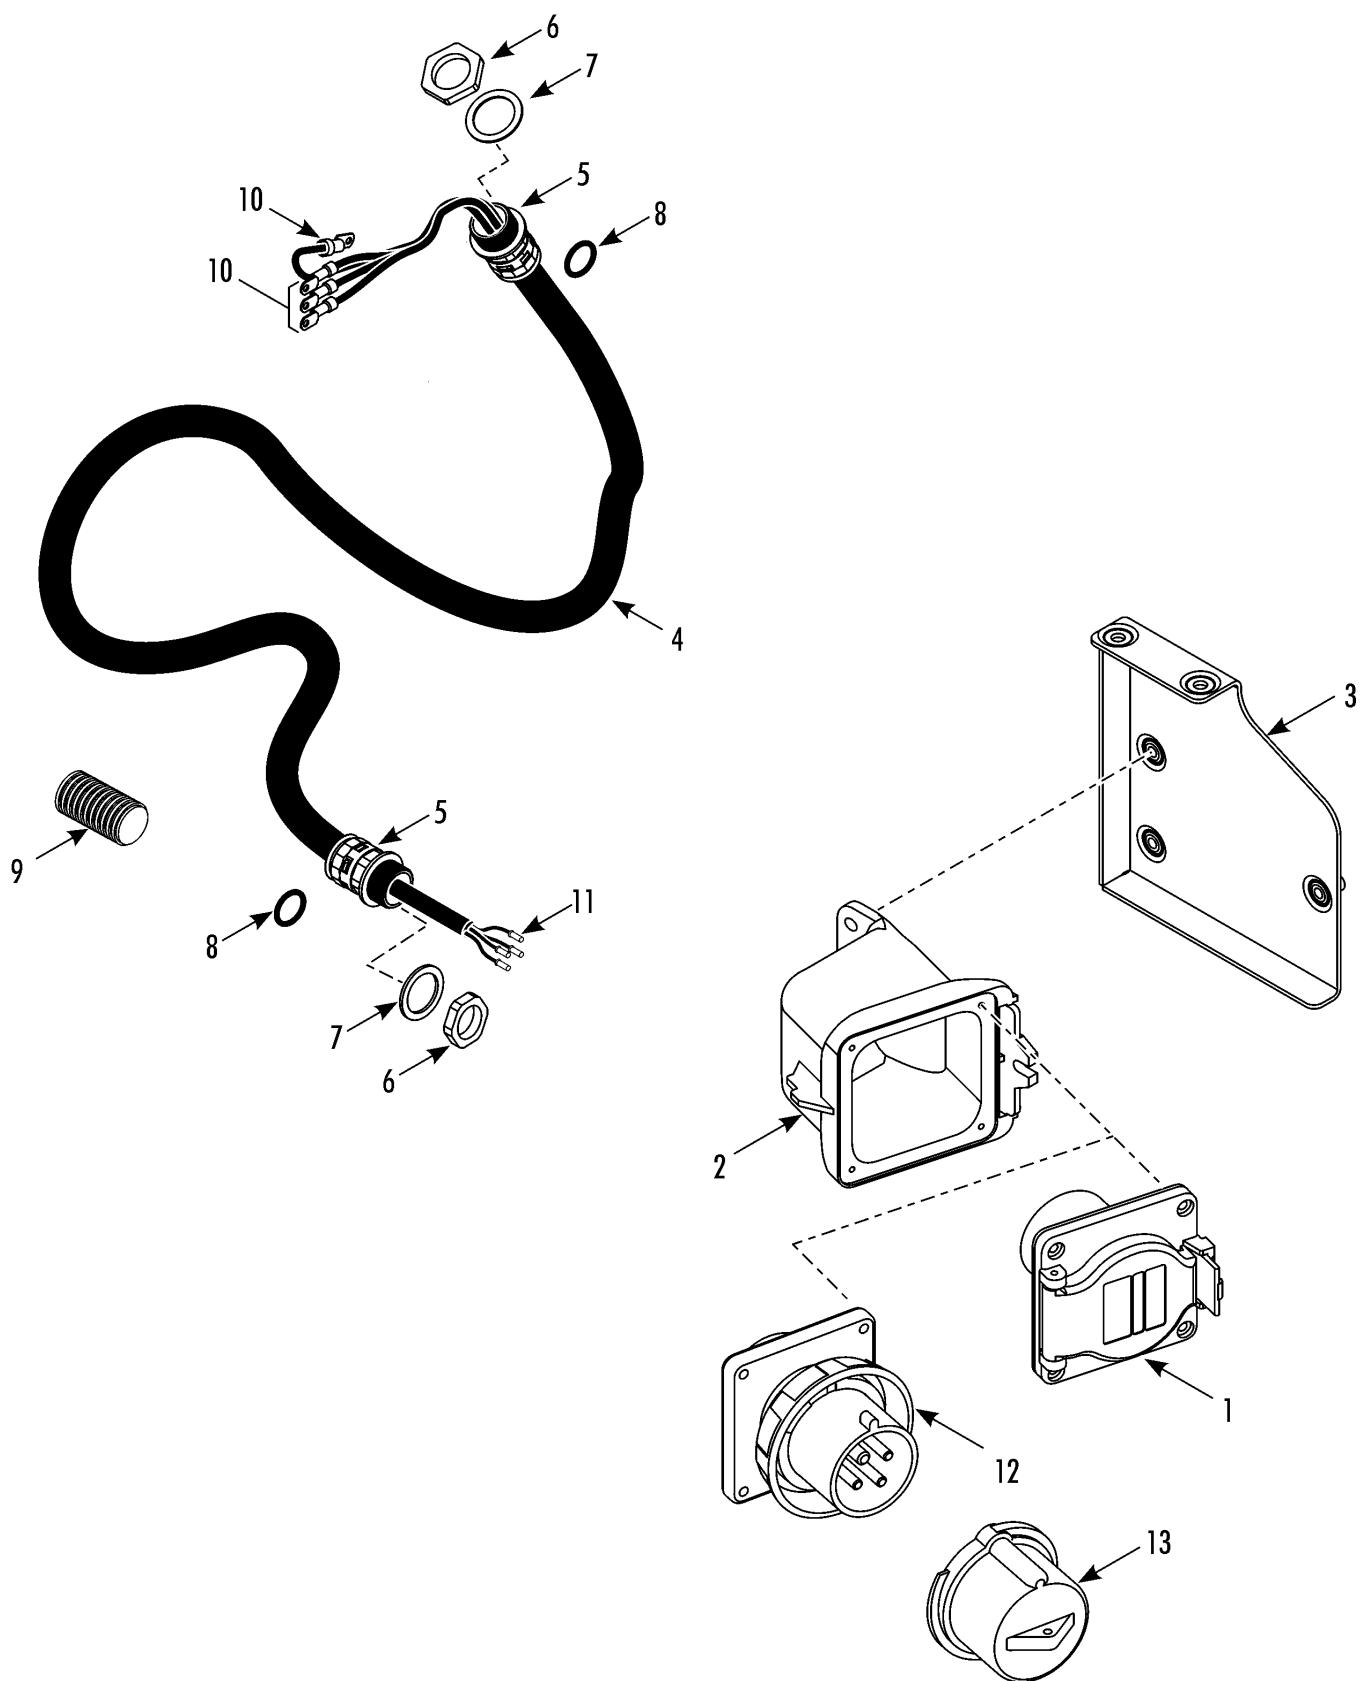


POWER RECEPTACLE BOX



261E2

REF	PART NO.	DESCRIPTION	QTY
1	41-8275	RECEPTACLE - power (230/3/60, 50 amp)	1
	41-8277	RECEPTACLE - power (460/3/60, 30 amp)	1
	41-8295	RECEPTACLE - power (460/3/60, 50 amp)	1
2	41-8292	BOX - power inlet	1
	51-2200	SCREW - box	3
3	93-369	PLATE - box	1
	51-2202	SCREW - plate	2
4	42-553	HARNESS - power (230V & 460 50 amp, 8 ga leads)	1
	42-832	HARNESS - power (460V 30 amp, 10 ga leads)	1
5	51-2247	FITTING - straight (NW23)	2
6	51-2251	NUT	2
7	51-2253	WASHER - sealing	2
8	33-4942	O-RING	2
9	42-729	CONDUIT (25 ft)	A/R
10	41-9115	TERMINAL - ring (230V, red, 6-8 ga)	4
	41-4468	TERMINAL - ring (460V, yellow, 10-12 ga)	4
11	41-4906	TERMINAL - wirepin (230V, 8 ga)	4
	44-9891	TERMINAL - wirepin ((460V, 10 ga)	4
12	42-833	RECEPTACLE - power (460/3/60, 30 amp)	1
13	42-834	CAP - receptacle	1

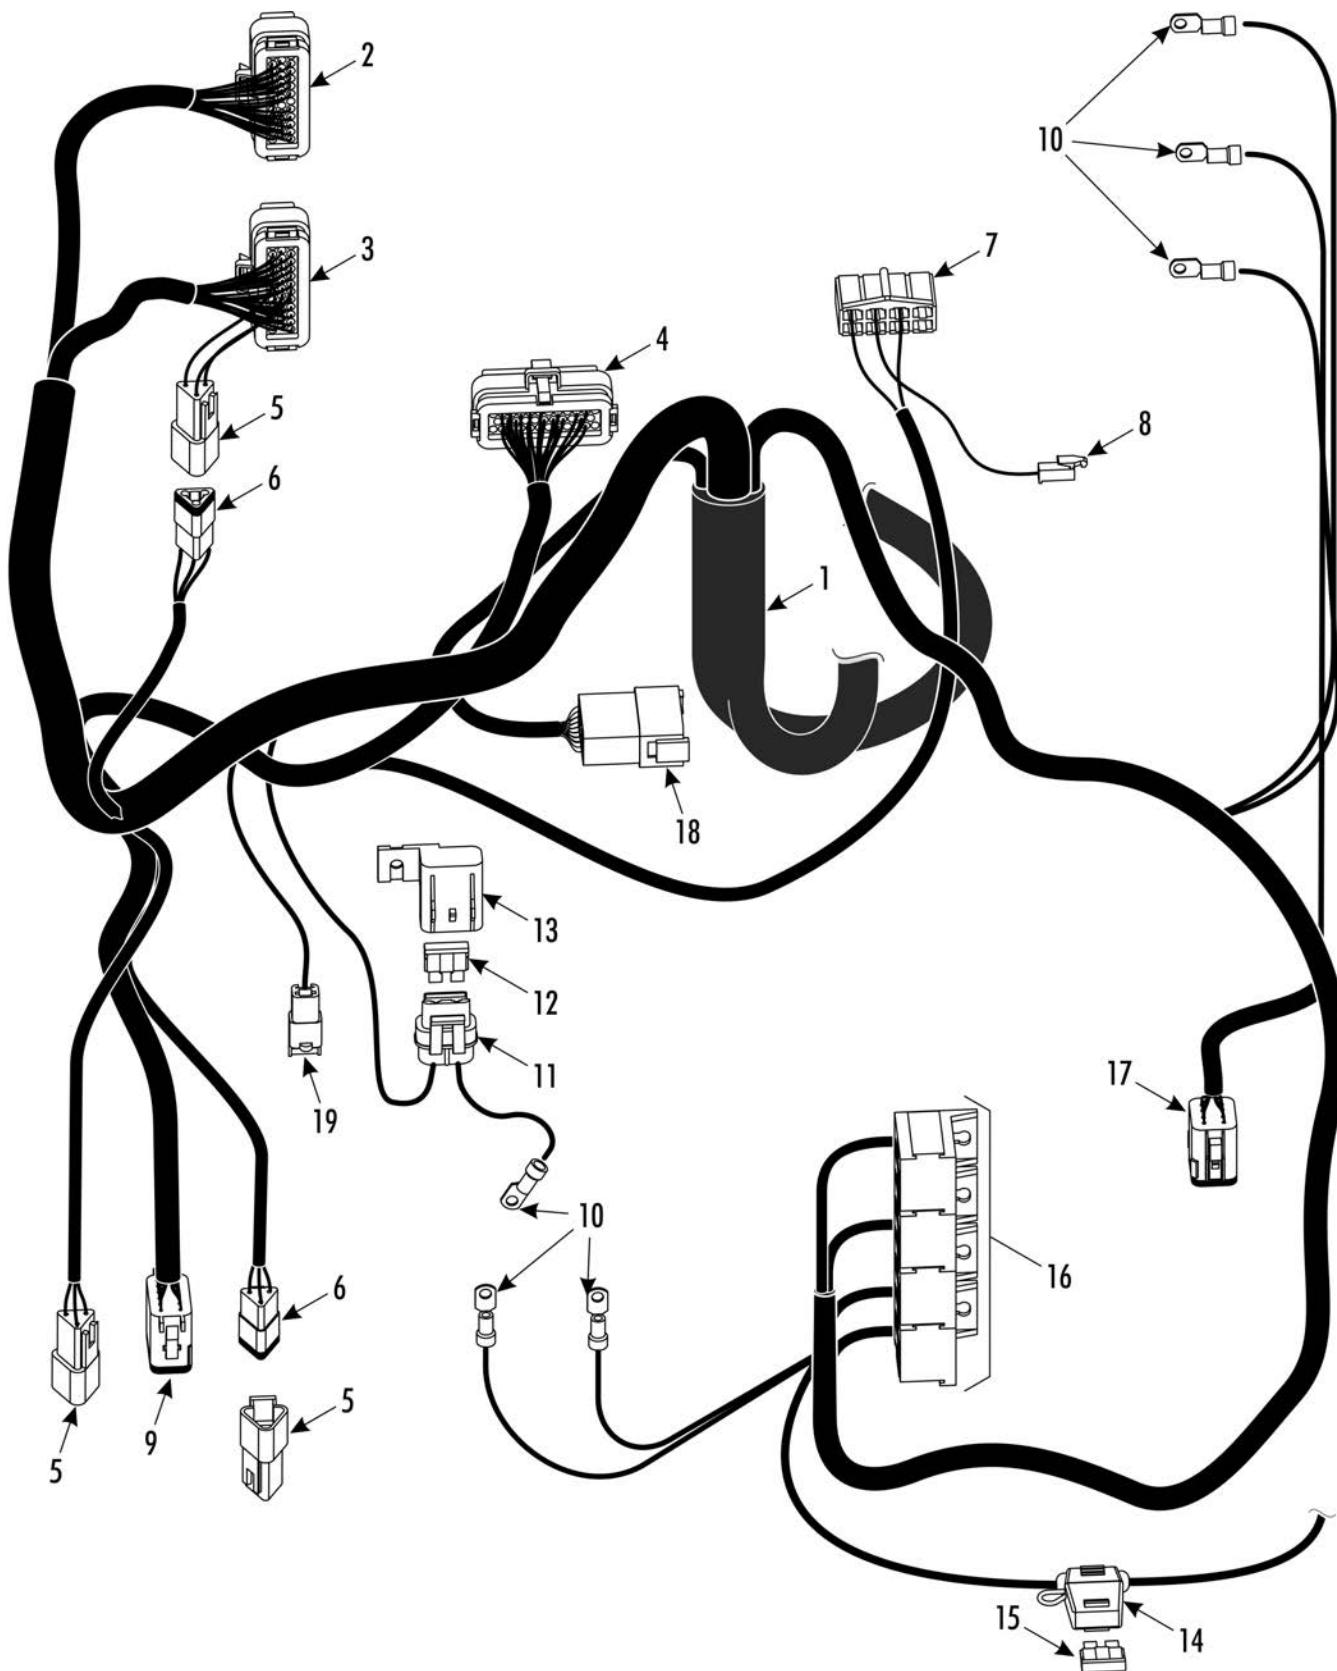

MAIN HARNESS S-600/S-700 (control box)

Revised
01/30/14



261G4


REF	PART NO.	DESCRIPTION	QTY
1	42-441	HARNESS - main (S-600, also see 261G5)	1
	42-1407	HARNESS - main (S-700, also see 261G5)	1
2	41-5190	*PLUG - J1 (35-pin, white)	1
3	41-2407	*PLUG - J3 (35-pin, black)	1
4	41-3359	*PLUG - J4 (35-pin, gray)	1
	41-2457	*TERMINAL - socket	55
5	44-9544	*RECEPTACLE - DS-INT, ALT (3-pin, alternator)	3
6	44-9631	*CONNECTOR - DS-INT-01, AFA (3-pin, w/ seal)	2
7	44-5719	*CONNECTOR - J16 (8-pin)	1
	44-5631	*TERMINAL - fingrip (18-20 ga)	3
8	41-6257	*CONNECTOR - 8D (1-pin)	1
9	44-9600	*PLUG - C_KIT (12-pin, w/ seal)	1
10	44-2792	*TERMINAL - ring (yellow #10)	6
11	42-443	*HOLDER - fuse	1
12	42-887	*FUSE (35 amp, see note)	1
13	41-1769	*COVER - fuse	1
14	41-4740	*HOLDER - fuse	1
15	41-2978	*FUSE - 20 amp	1
16	44-5537	*SOCKET - relay	4
	44-5066	*TERMINAL - fingrip (14-18 ga)	8
	55-7702	*TERMINAL - fingrip (16-18 ga)	3
	42-517	*TERMINAL - fingrip (12-14 ga)	5
17	44-9903	*PLUG - ECU-IF-01 (8-pin, w/ seal)	1
18	44-9904	*RECEPTACLE - EVAPS_HMI (12-pin)	1
19	44-6292	*CONNECTOR - FH-OPT (1-pin)	1

NOTE: When updating from a 37 amp to a 65 amp alternator, refer to Parts Bulletin PB1504 for harness and fuse modification.

261G5 


MAIN HARNESS S-600/S-700 (outside control box)

Revised
02/03/14

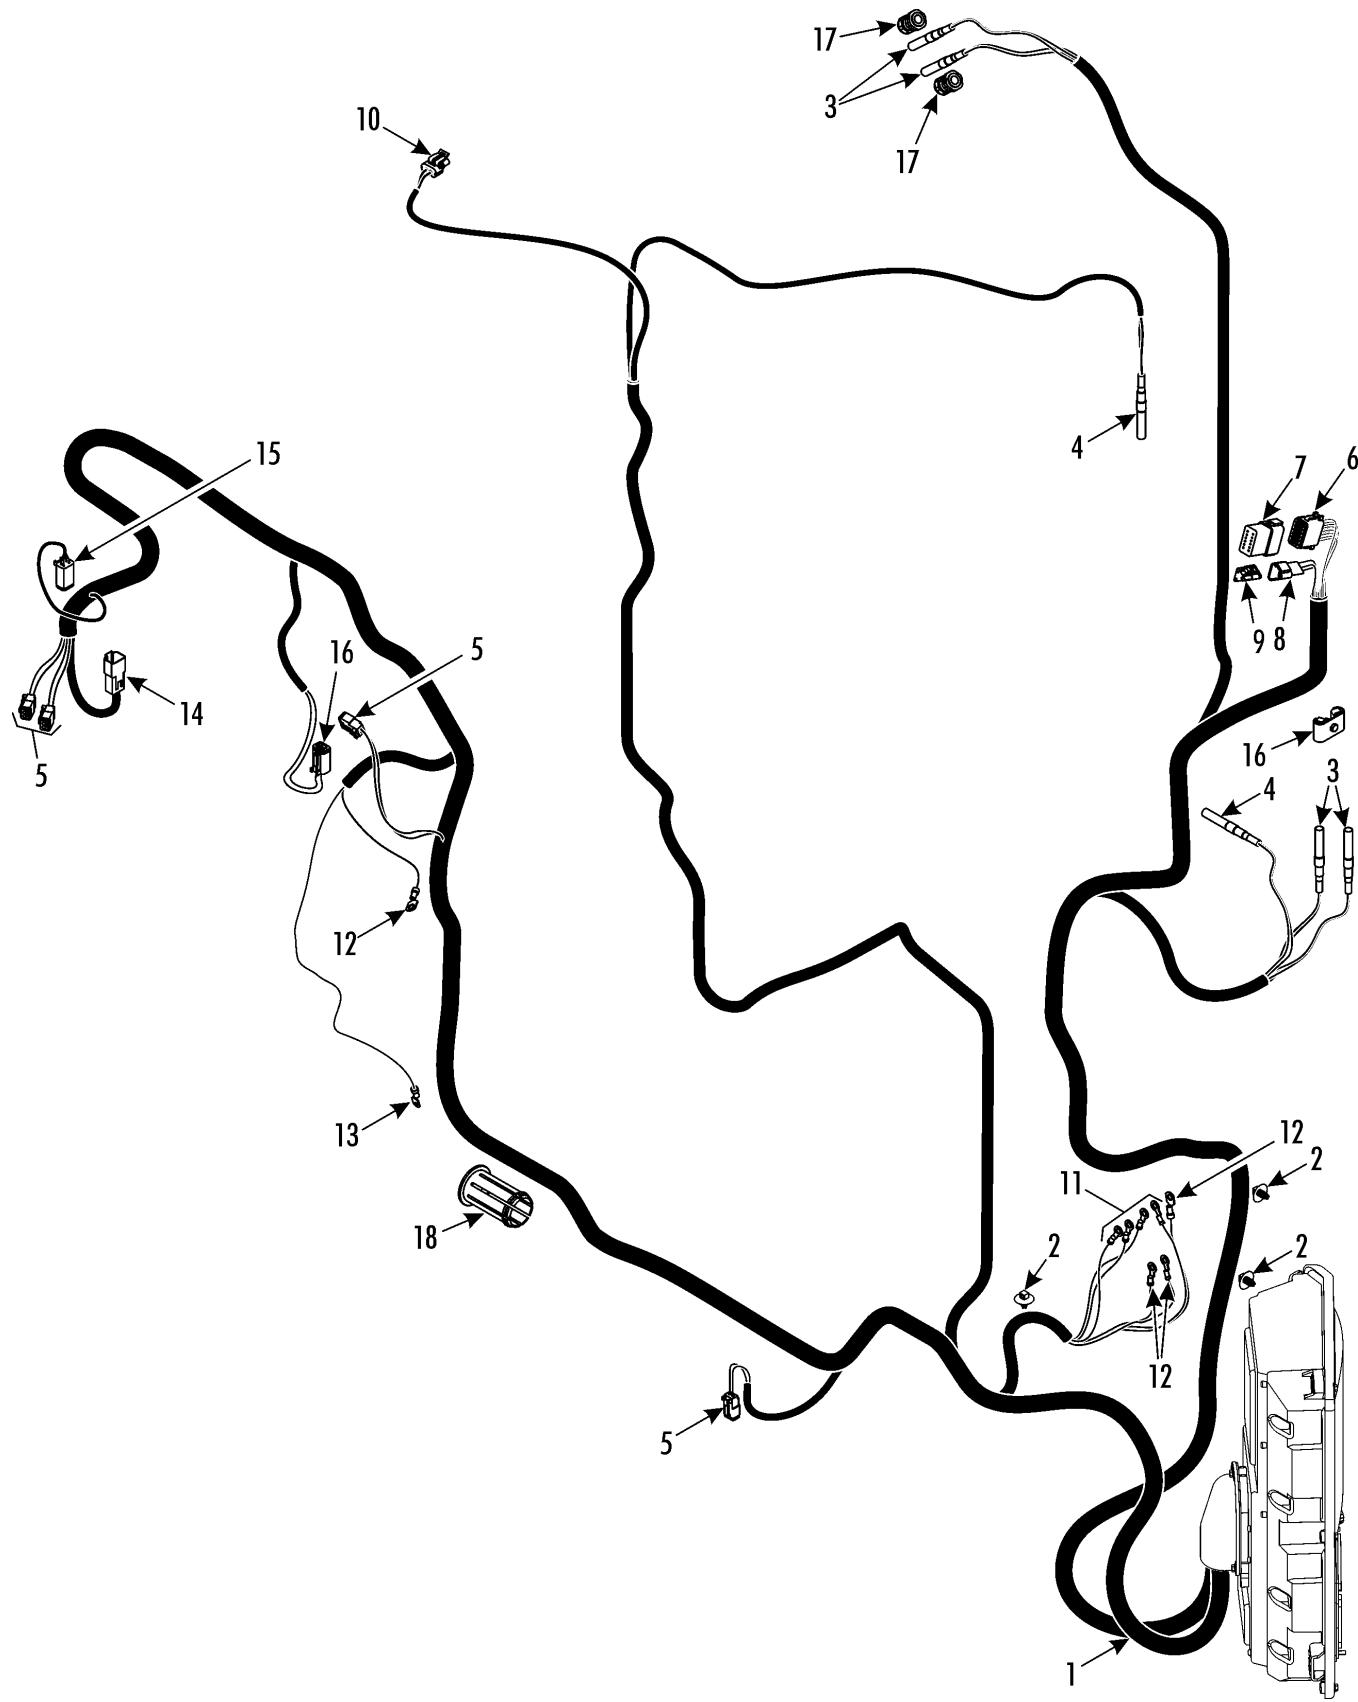


**MAIN HARNESS S-600/S-700 (outside control
box)**Revised
02/03/14**261G5**

REF	PART NO.	DESCRIPTION	QTY
1	42-441	HARNESS - main (S-600, also see 261G4)	1
	42-1407	HARNESS - main (S-700, also see 261G4)	1
2	51-1768	*MOUNT - cable tie	4
3	40-974	*SENSOR - graded	4
4	40-975	*SENSOR - ungraded	2
5	44-9585	*PLUG - CDM_RPM, LPCO, HGB, PS (2-pin, w/ seal)	4
6	44-9904	*RECEPTACLE - CW (12-pin)	1
7	44-9600	*PLUG - CW (12- pin)	1
8	44-9544	*RECEPTACLE - DS (3-pin)	1
9	44-9631	*PLUG - 3-pin, w/ seal	1
10	41-6573	*CONNECTOR - 2-pin (coolant level switch)	1
	41-6574	*LOCK - connector	1
	41-6575	*TERMINAL	2
	41-6576	*SEAL - terminal	2
11	44-2789	*TERMINAL - ring (blue 1/4, 14-16 ga)	6
12	44-2793	*TERMINAL - ring (yellow 1/4)	3
13	41-4468	*TERMINAL - ring (#8 yellow, 10-12 ga)	1
14	44-8915	*RECEPTACLE - SPT (4-pin)	1
15	44-8935	*PLUG - ETV & DPT (4-pin, w/ seal)	2
16	92-4612	RETAINER - sensor	1
17	55-5111	CONNECTOR - sensors grip	2
	33-4410	WASHER - sealing	2
18	93-561	GUIDE - harness	1

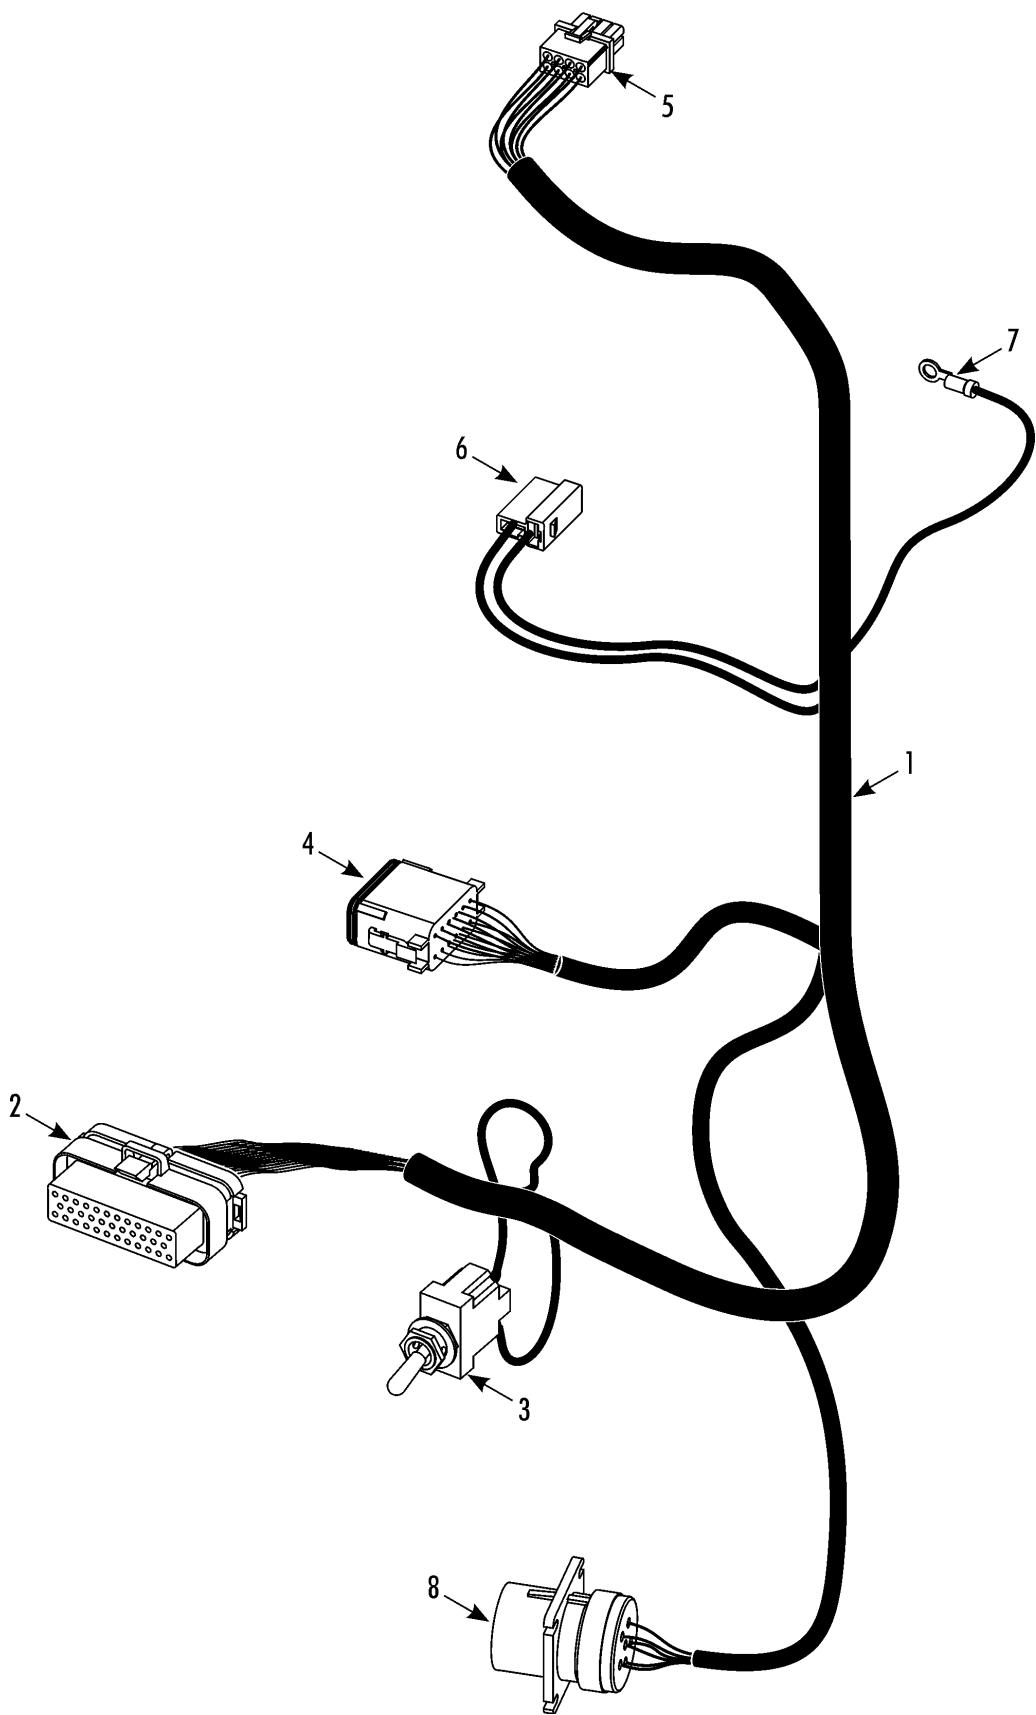



REF	PART NO.	DESCRIPTION	QTY
1	42-446	HARNESS HMI	1
2	41-5001	*CONNECTOR - HMI	1
	41-2457	*TERMINAL - socket	25
3	41-4163	*SWITCH	1
4	44-9600	*PLUG - evaporator (12-pin, w/ seal)	1
	44-9601	*WEDGE	1
	41-8816	*SOCKET - gold (18 ga)	12
5	41-5709	*CONNECTOR - sealed (8-pin)	1
	33-3908	*GASKET (8-pin, plug)	1
	41-5719	*SOCKET (20-16 gauge)	8
	41-6256	*SEAL - wire	8
6	44-5219	*CONNECTOR - tower (2-pin)	1
	44-5630	*TERMINAL - fingrip	2
7	44-7245	*TERMINAL - ring (#10 red, 16-22 ga)	1
8	44-8329	*RECEPTACLE (6-pin)	1
	44-9591	*TERMINAL - pin (16-18 ga)	6

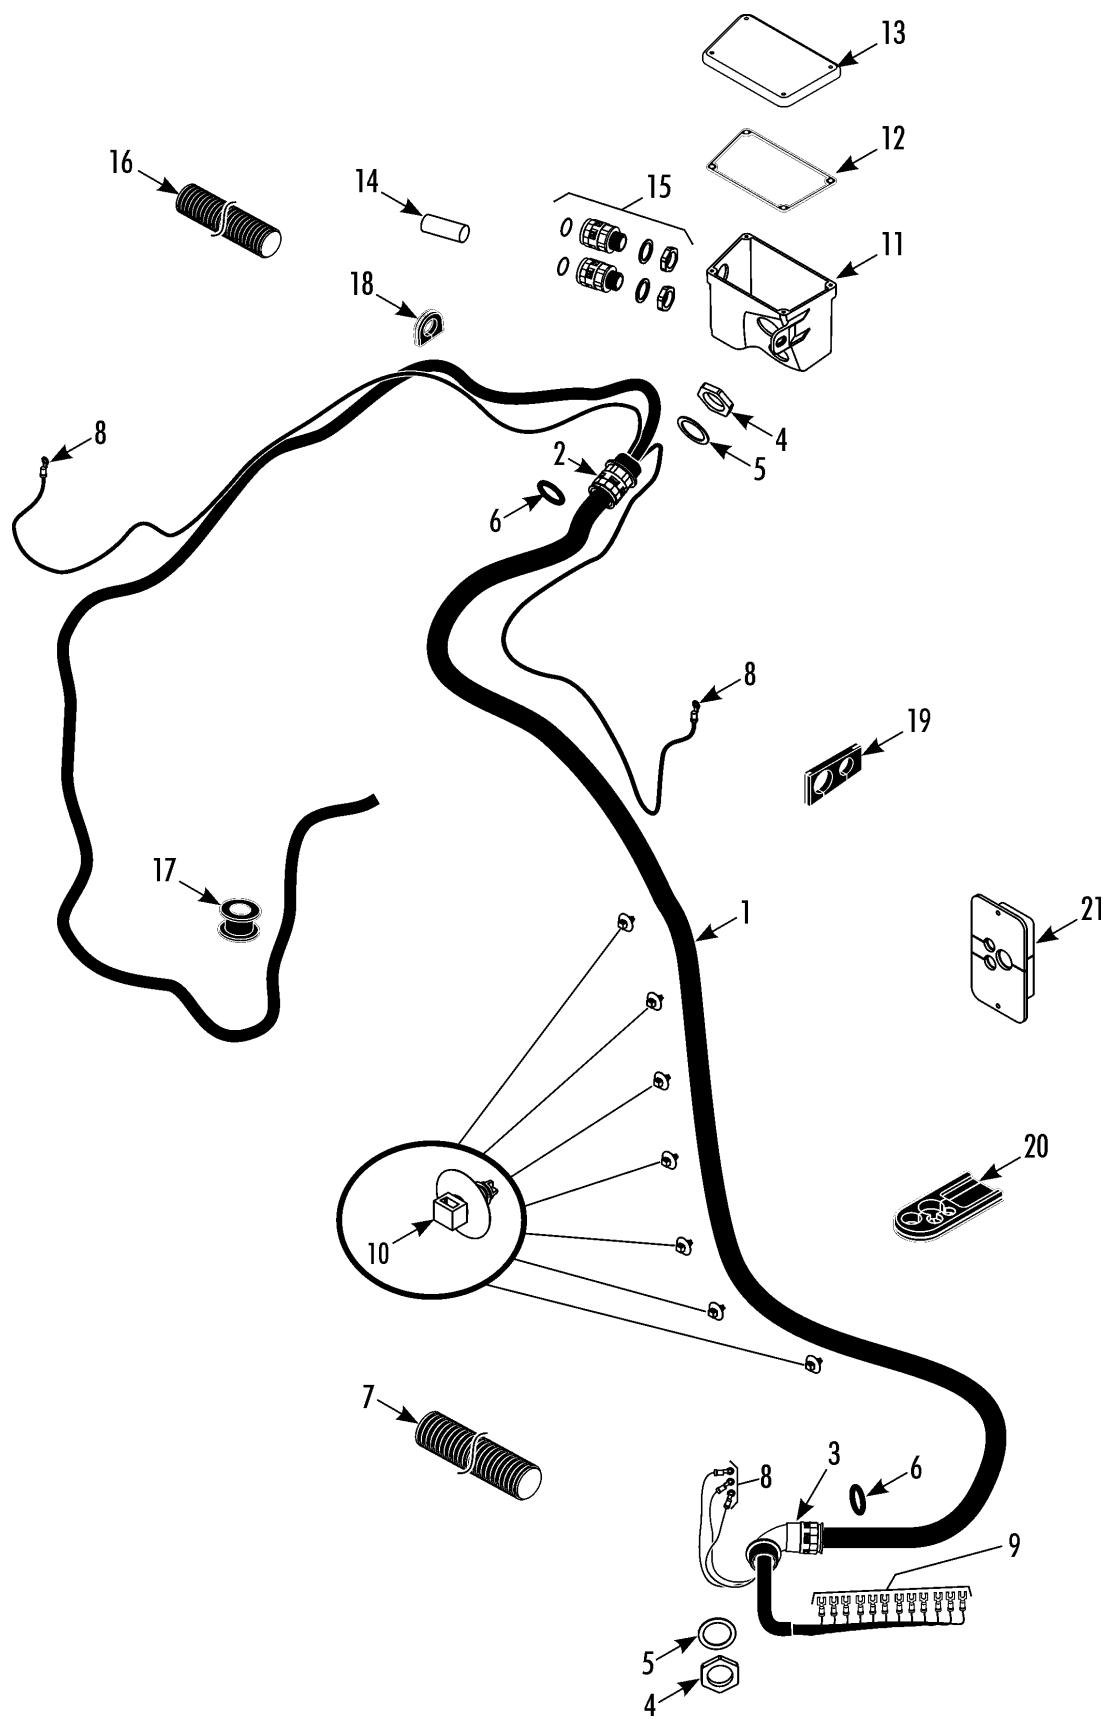

HARNESS - FANS & BLOWER

Revised
12/15/13




261EO

REF	PART NO.	DESCRIPTION	QTY
1	42-440	HARNESS - condenser fans & evaporator blower	1
2	51-2247	*FITTING - straight	1
3	51-2249	*FITTING - elbow	1
4	51-2251	*NUT	2
5	51-2253	*WASHER - sealing	2
6	33-4942	*O-RING	2
7	42-729	*CONDUIT - harness	1
8	44-2791	*TERMINAL - ring (#10 blue, 16-14 ga)	5
9	42-525	*TERMINAL - fork (#8 blue, 16-14 ga)	12
10	51-1768	MOUNT - cable tie	7
11	98-8853	BOX - distribution	1
12	33-4927	GASKET - cover	1
13	92-9406	COVER - box	1
	51-2229	SCREW - cover	4
	55-7697	FLATWASHER	4
14	92-9852	SLEEVING - heat resistance	1
15	51-2226	FITTING - straight	6
	51-2227	NUT	6
	51-2228	WASHER - sealing	6
	33-4926	O-RING	6
16	42-568	CONDUIT - harness (25 ft)	A/R
17	33-4930	GROMMET - evaporator harness	1
18	33-4928	GROMMET - condenser harness (single harness)	1
19	33-4929	GROMMET - condenser harness (double harness)	1
20	33-4931	GROMMET - harness (double harness)	1
21	33-4932	PLUG - bulkhead (S-600)	1
	33-5152	PLUG - bulkhead (S-600M)	1
	51-321	RIVET - plug	2

261F1 

HARNESS - CONTROL 30

Revised
11/26/13

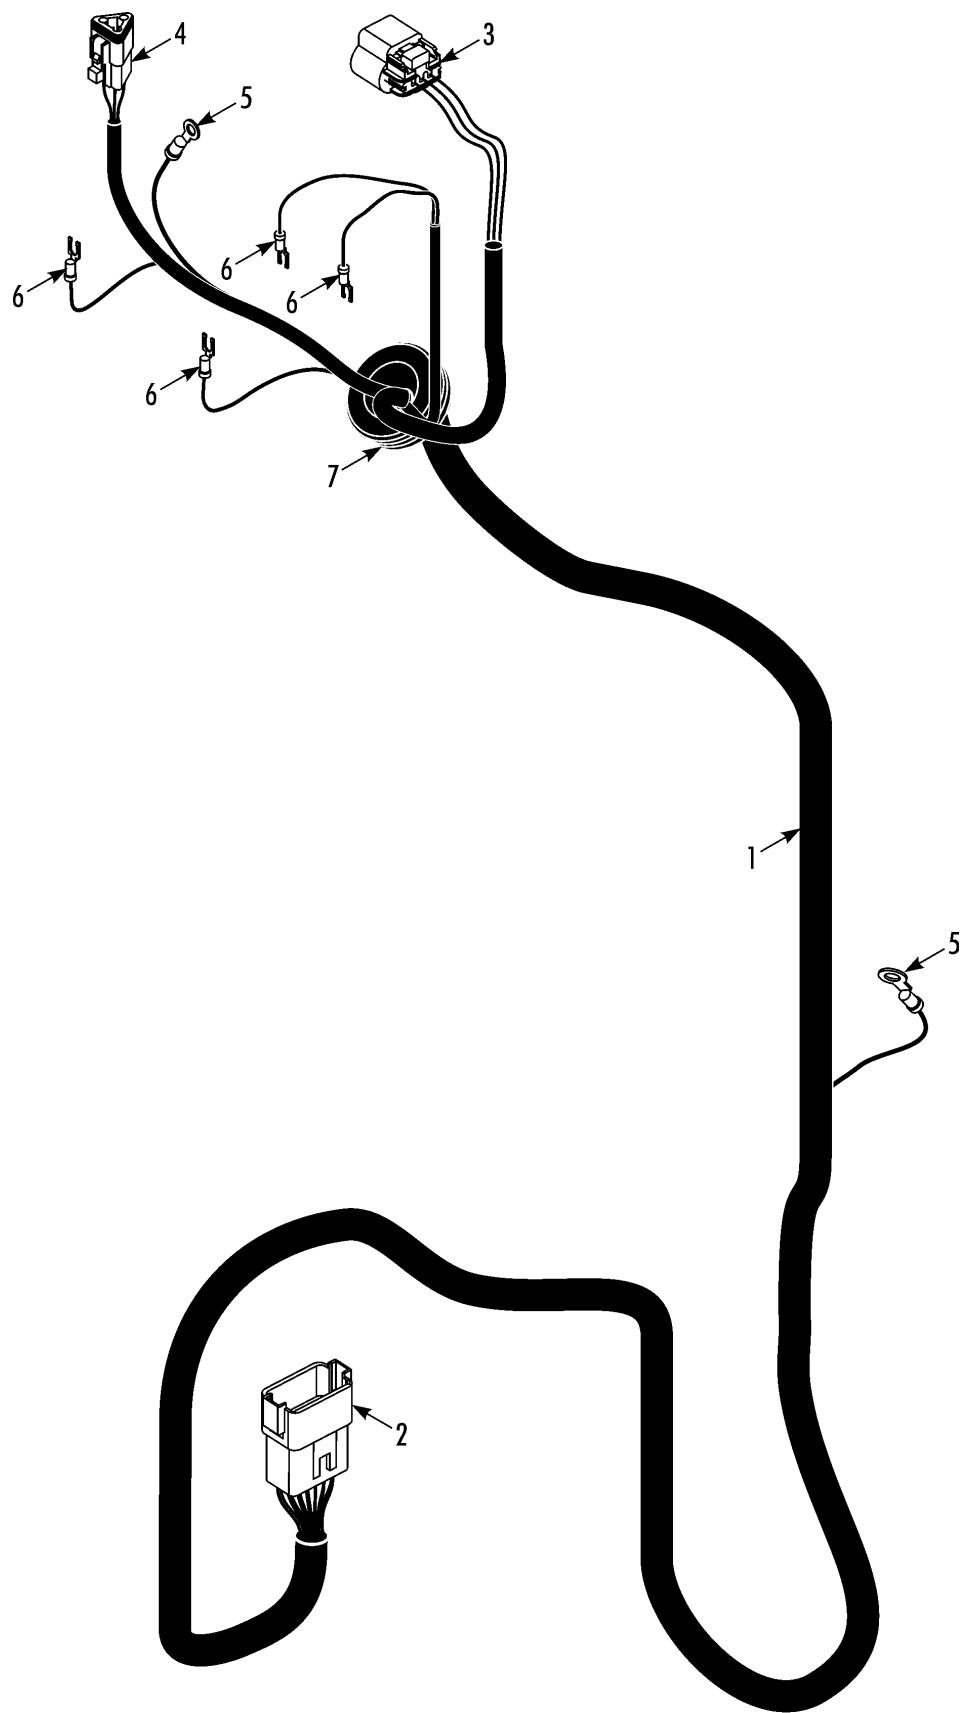




REF	PART NO.	DESCRIPTION	QTY
1	42-555	HARNESS - 30 control	1
2	44-9904	*RECEPTACLE - 12-pin	1
3	42-855	*CONNECTOR - 2-pin	1
	42-856	*WEDGE - 2-pin	1
4	44-9631	*PLUG - 3 pin	1
5	44-2789	*TERMINAL - ring (blue 1/4, 16-14 ga)	2
6	42-524	*TERMINAL - fork (red #6, 22-16 ga)	4
7	33-2110	*GROMMET	1

261G6  THERMO KING

HARNESS - CONTROL 50

Revised
11/17/12

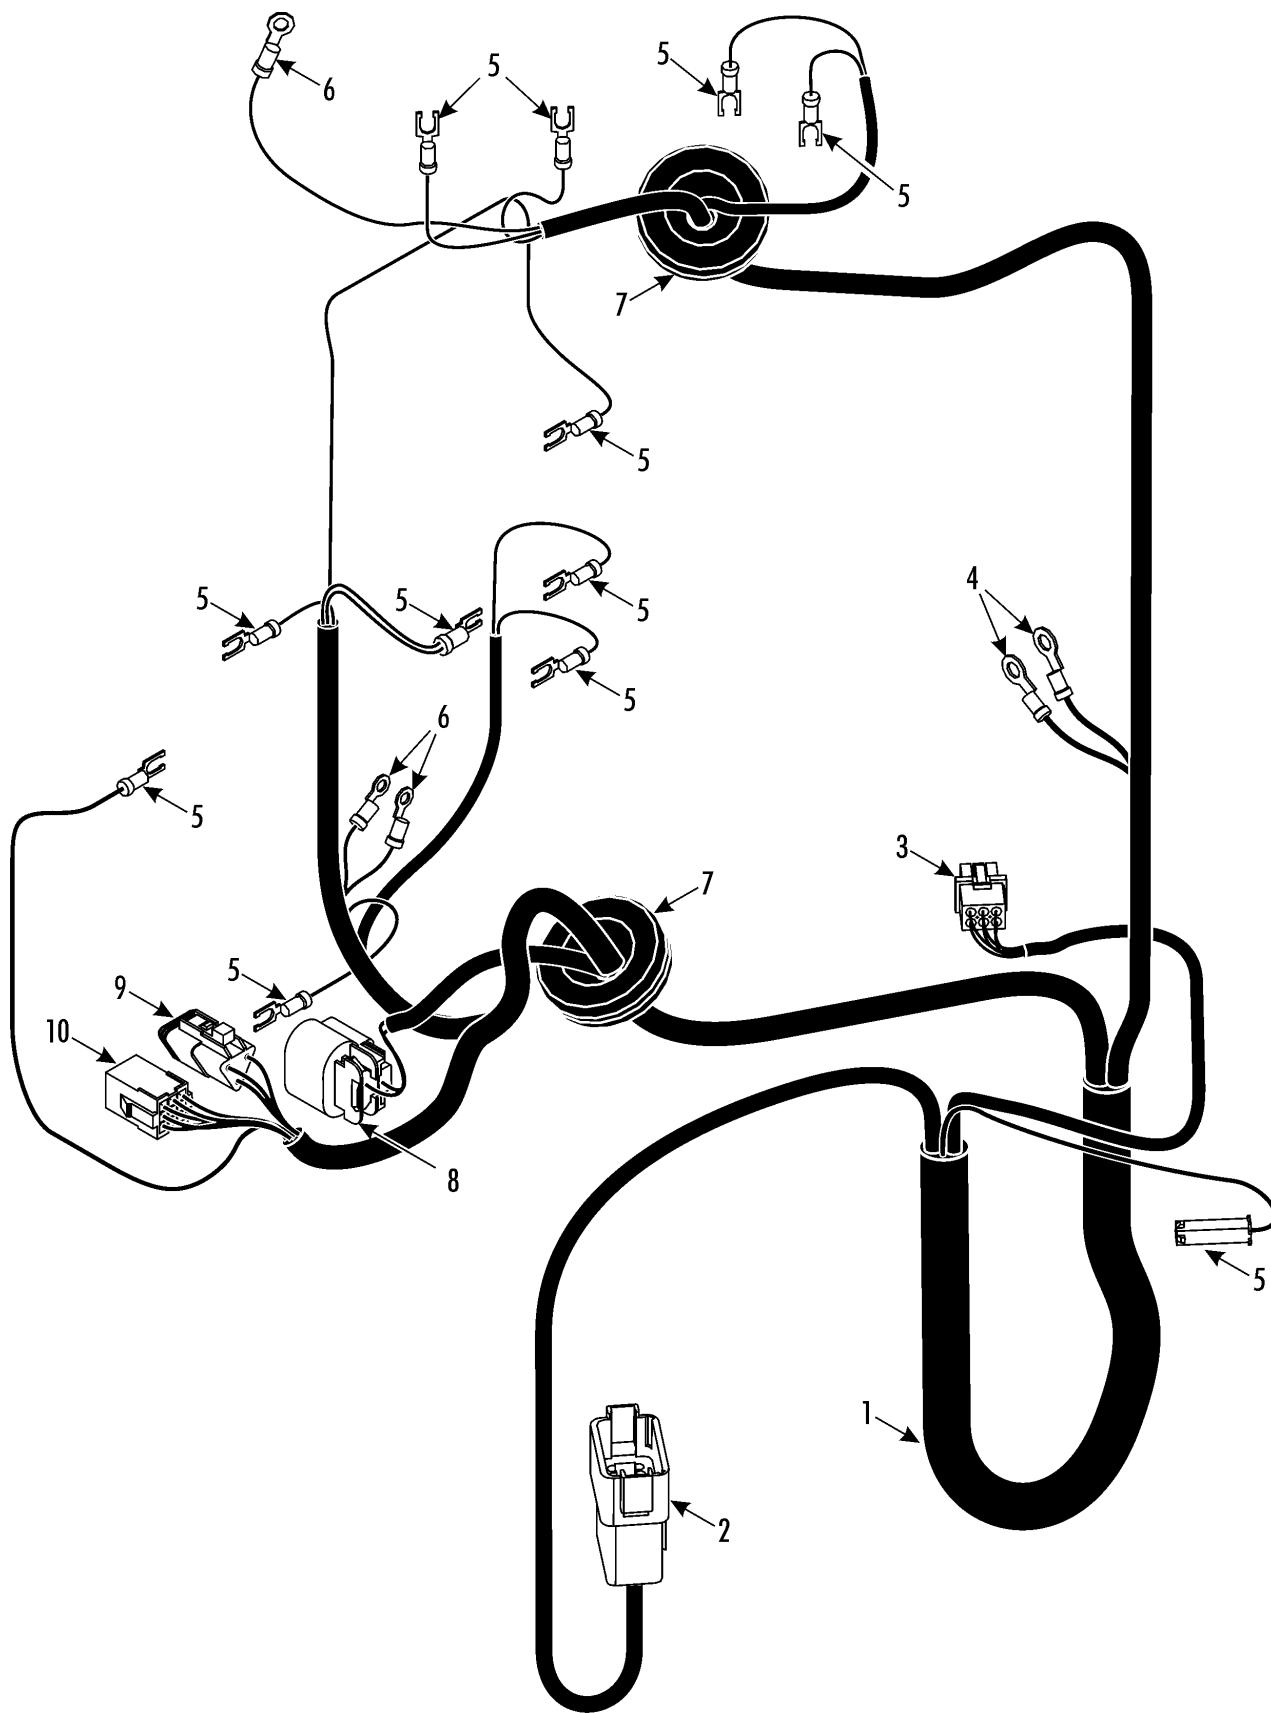




REF	PART NO.	DESCRIPTION	QTY
1	42-757	HARNESS - control 50	1
2	44-9904	*RECEPTACLE - C MAIN (12-pin)	1
3	41-5745	*CONNECTOR - J6 (sealed, 6-pin)	1
4	44-2789	*TERMINAL - ring (blue 1/4, 16-14 ga)	2
5	42-524	*TERMINAL - fork (red #6, 22-16 ga)	11
6	44-2791	*TERMINAL - ring (blue #10, 16-14 ga)	3
7	33-2110	*GROMMET	2
8	42-855	*CONNECTOR - 2-pin	1
	42-856	*WEDGE - 2-pin	1
	42-857	*TERMINAL - female	3
9	44-9631	*PLUG - GFD (3-pin)	1
10	41-7510	*RECEPTACLE - PSM (9-pin)	1
	41-7511	*TERMINAL	7

261F4




HARNESS - GENERATOR

Revised
05/14/13

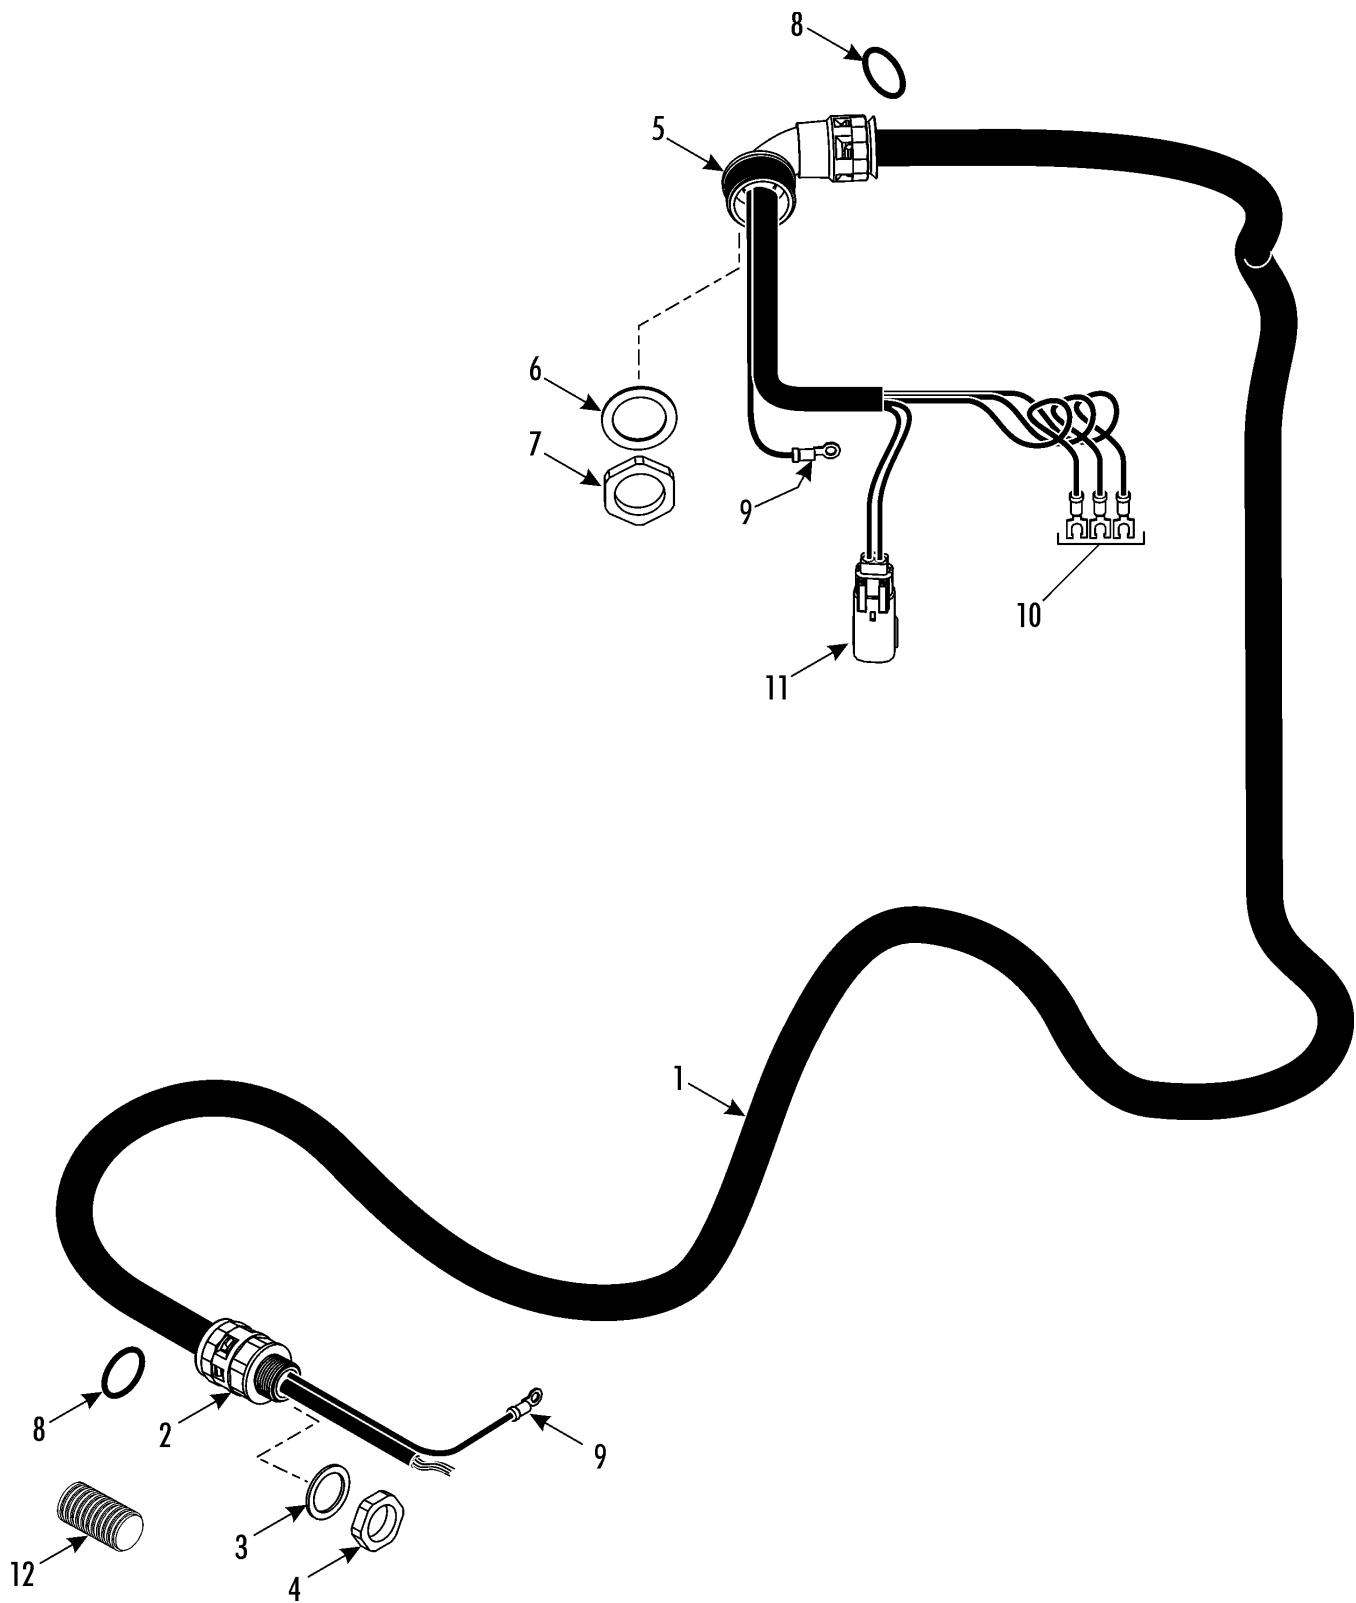

REF	PART NO.	DESCRIPTION	QTY
1	42-755	HARNESS - generator	1
2	51-2226	*FITTING - harness (straight)	1
3	51-2228	*WASHER - sealing	1
4	51-2227	*NUT - fitting	1
5	51-2248	*FITTING - harness (elbow)	1
6	51-2252	*WASHER - sealing	1
7	51-2250	*NUT - fitting	1
8	33-4926	*O-RING	2
9	44-2791	*TERMINAL - ring (blue # 10, 16-14 ga)	2
10	42-525	*TERMINAL - fork (blue # 10, 16-14 ga)	3
11	42-550	*CONNECTOR - 2-pin	1
	42-520	*TERMINAL - male	2
12	42-568	*CONDUIT - harness (25 ft)	A/R

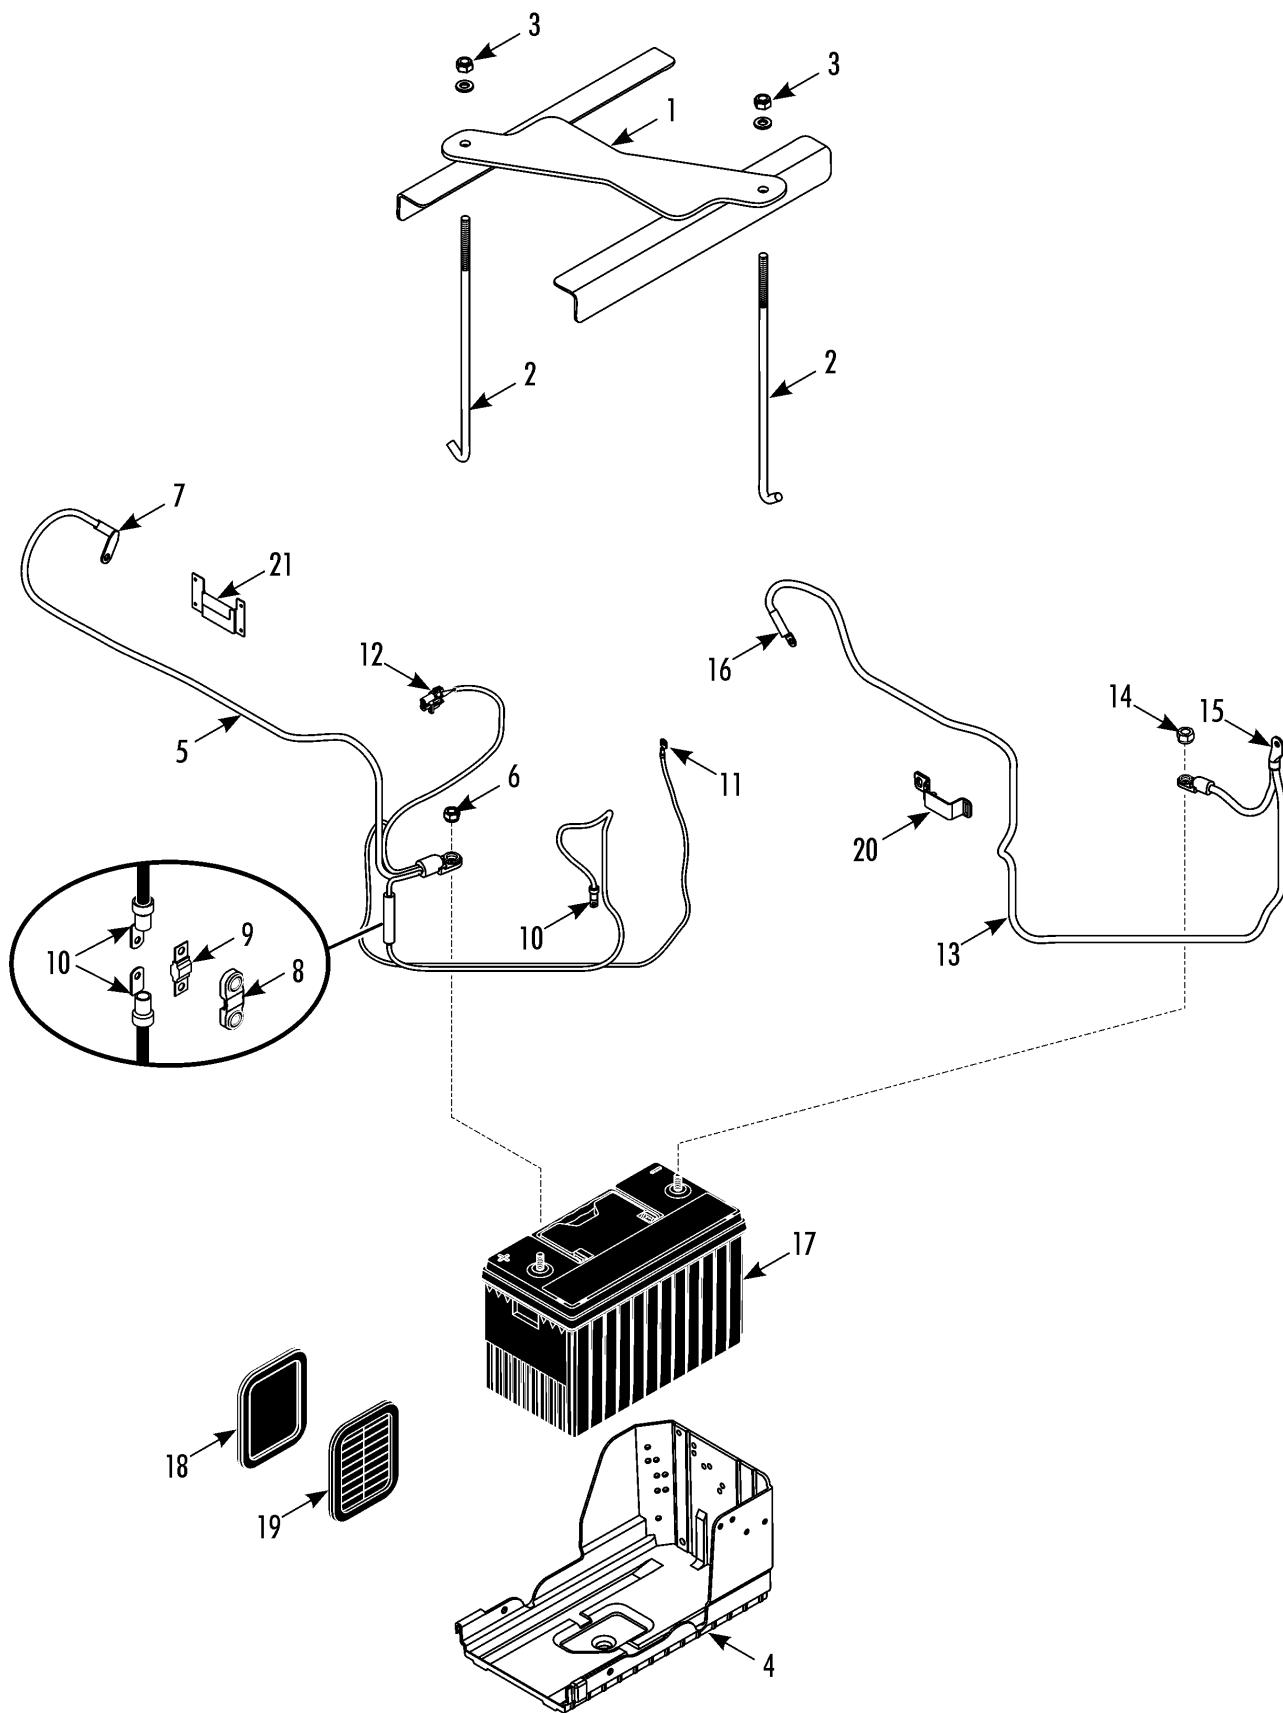




REF	PART NO.	DESCRIPTION	QTY
1	92-9681	HOLDDOWN - battery	1
2	92-9682	ROD - holddown	2
3	55-7008	NUT	2
	55-7075	FLATWASHER	2
4	93-241	TRAY - battery	1
	51-2403	FASTENER - tray	4
5	42-447	HARNESS - battery (positive, threaded post)	1
	42-835	HARNESS - battery (positive, smooth post)	1
6	55-4436	*NUT - battery	1
7	42-518	*TERMINAL - starter	1
8	41-8076	*FUSEHOLDER	1
9	41-8074	*FUSE - 70 amp	1
10	41-9539	*TERMINAL - ring (blue #8-10, 6 ga)	3
11	44-2793	*TERMINAL - ring (yellow 1/4)	1
12	44-9688	*CONNECTOR - female	1
	44-8488	*LOCK - secondary	1
13	42-448	HARNESS - battery (negative, threaded post)	1
	42-836	HARNESS - battery (negative, smooth post)	1
14	55-4436	*NUT - battery	1
15	42-797	*TERMINAL - lug (3/8 4/0 ga)	1
16	44-232	*TERMINAL - lug (3/8 1/0 ga)	1
17	203-550	BATTERY - EON (1150 CCA, threaded)	1
	203-551	BATTERY - EON (1150 CCA, post)	1
	203-733	BATTERY - Reliamax (925 CCA, threaded)	1
	203-732	BATTERY - Reliamax (925 CCA, post)	1
18	33-5059	GROMMET - battery cable	1
19	33-5058	GROMMET - battery cable	1
20	93-1193	BRACKET - harness	1
	51-2758	SCREW - bracket	1
21	92-3994	BRACKET - cable (starter)	1

261D8 


EVAPORATOR HEATERS

Revised
03/26/13

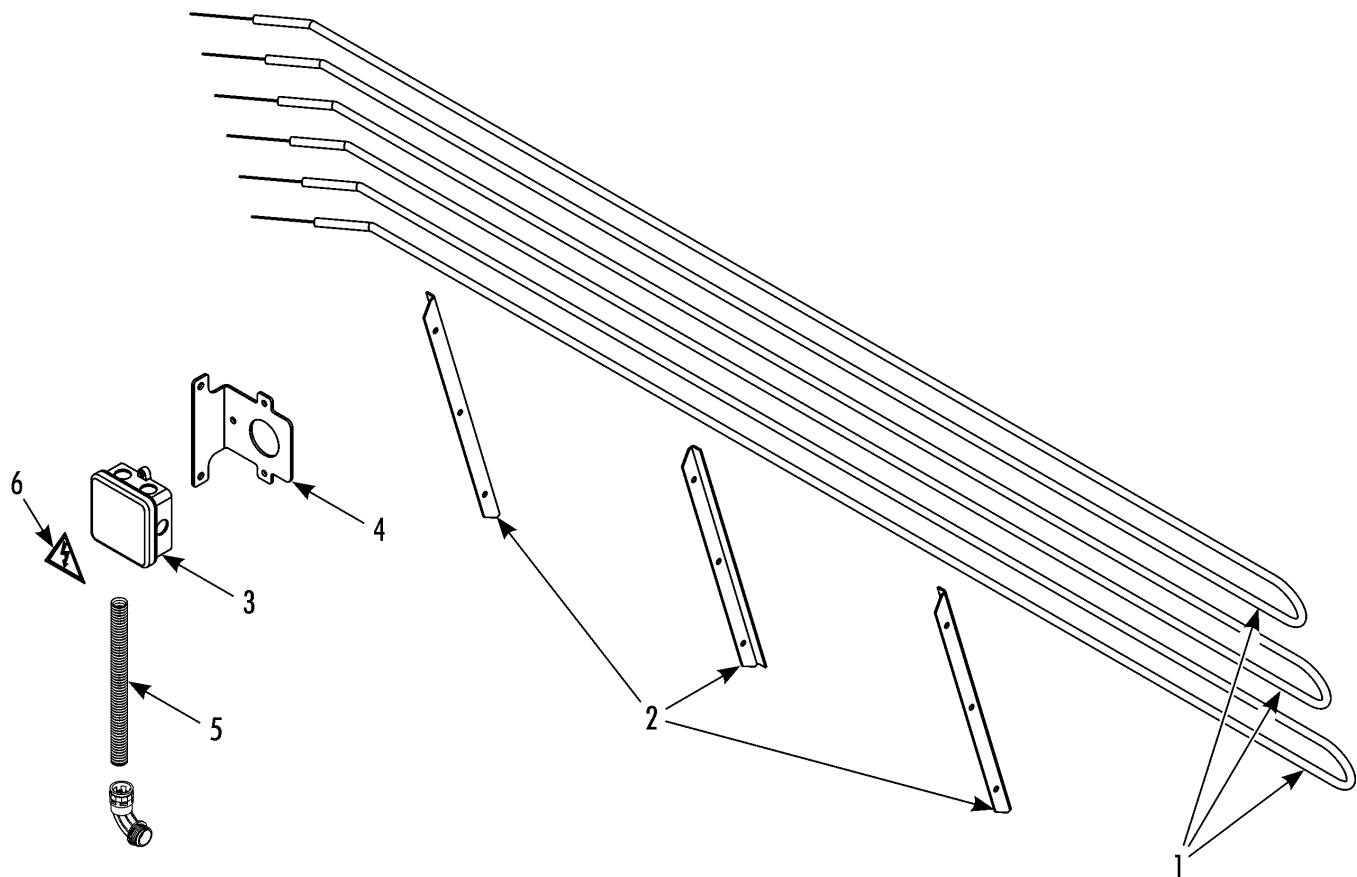



REF	PART NO.	DESCRIPTION	QTY
1	45-2536	HEATER - evaporator	3
	44-9888	TERMINAL	6
2	92-9883	BRACKET - heater	3
	55-5639	SCREW - bracket	9
3	44-7354	BOX - junction	1
	55-7407	SCREW - junction box	2
4	92-9884	BRACKET - junction box	1
	51-2200	SCREW - bracket	2
	55-7089	FLATWASHER	2
	55-7034	NUT	2
5	42-549	HARNESS - heater	1
6	99-7834	NAMEPLATE - Caution	1

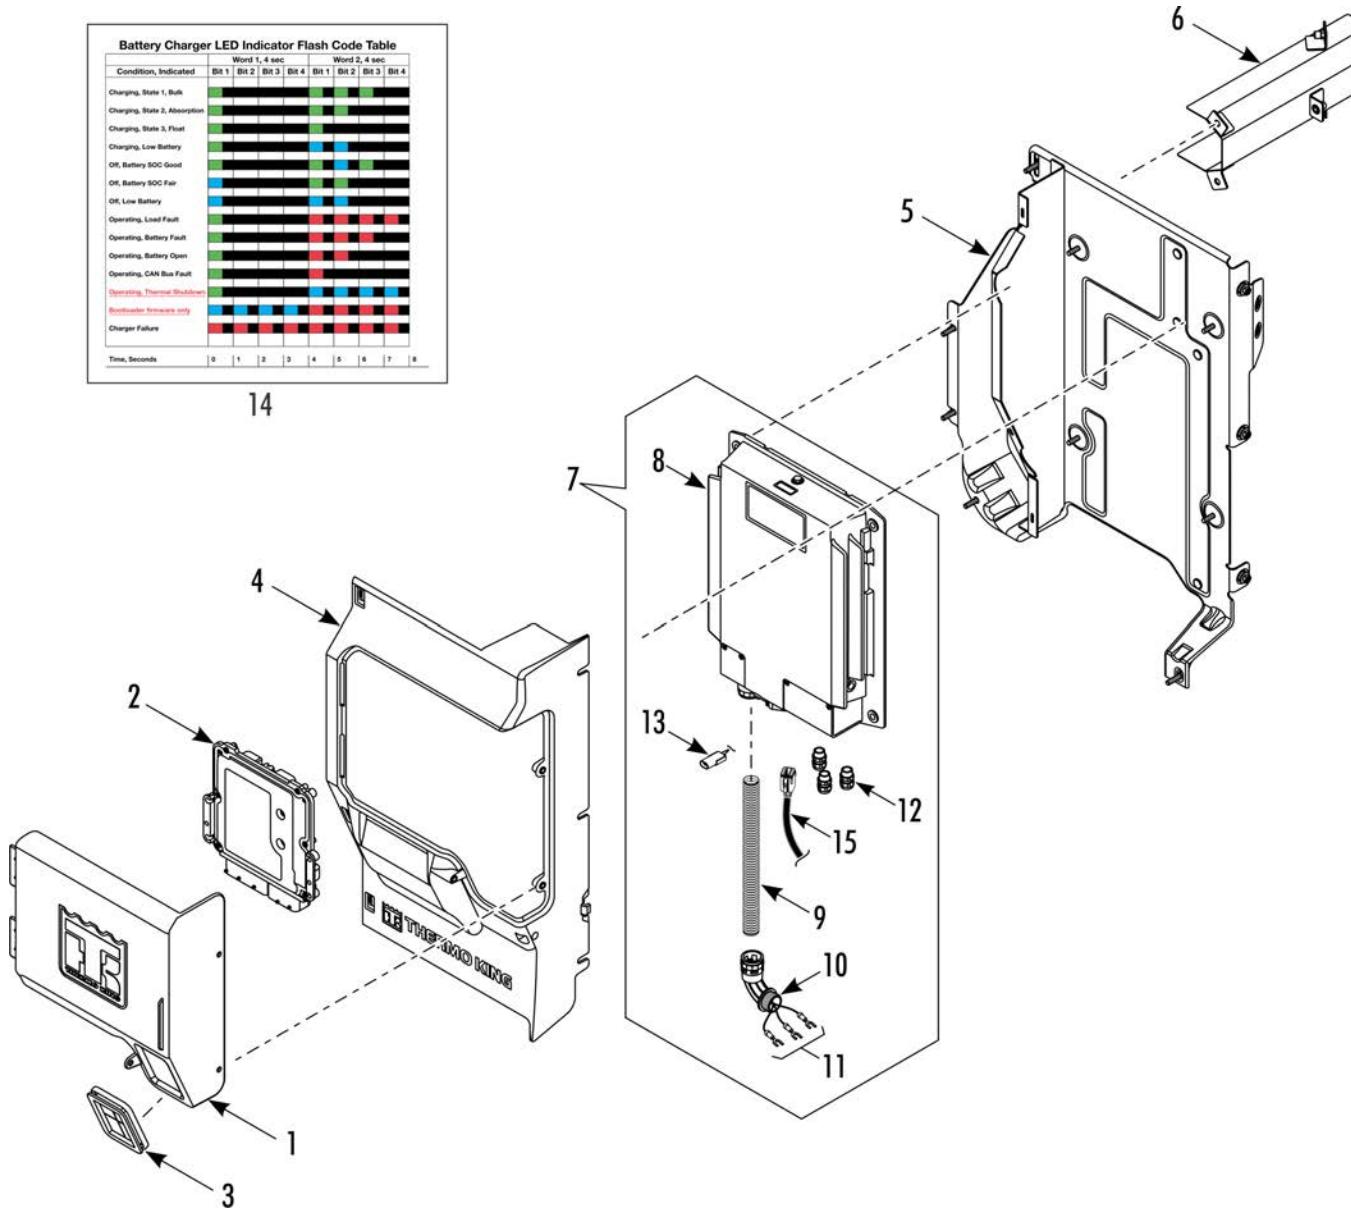

BATTERY CHARGER, S-600/S-700 (OPTIONAL)

Revised
02/05/14



261D7


REF	PART NO.	DESCRIPTION	QTY
1	93-239	MOUNT - ECU	1
	51-2760	SCREW - mount	4
2	42-531	ECU - TIER 4 (Yanmar)	1
	51-2766	SCREW - ECU	4
3	33-5006	GROMMET - ECU	1
4	92-9664	COVER - battery charger	1
	51-2264	*INSERT - threaded (M6)	7
	51-2760	SCREW - cover	4
5	92-9663	BOX - battery charger	1
	51-2760	SCREW - box	4
6	93-240	SHIELD - heat	1
	51-2760	SCREW - heat shield	2
7	40-1208	KIT - battery charger (30 amp)	1
8	41-9900	*CHARGER - battery (30 amp)	1
	55-7007	*NUT - charger	4
	51-2171	*WASHER - nylon	4
	55-7075	*FLATWASHER	4
9	42-568	*CONDUIT - harness	1
10	51-2248	*FITTING - conduit (elbow)	1
	51-2250	*NUT - fitting	1
	51-2252	*WASHER - sealing	1
	33-4926	*O-RING	2
11	44-2789	*TERMINAL - ring (blue 1/4, 16-14 ga)	1
	41-9022	*TERMINAL - ring (blue #8, 16-14 ga)	3
12	42-569	*FITTING - conduit (1 wire)	2
	42-570	*FITTING - conduit (2 wire)	1
13	42-971	*HARNESS - ECU power	1
14	93-283	*NAMEPLATE - Battery Charger	1
15	45-2520	*HARNESS - battery charger (see 267F9)	1

267F9



HARNESS - BATTERY CHARGER (OPTIONAL)

Revised
10/26/13

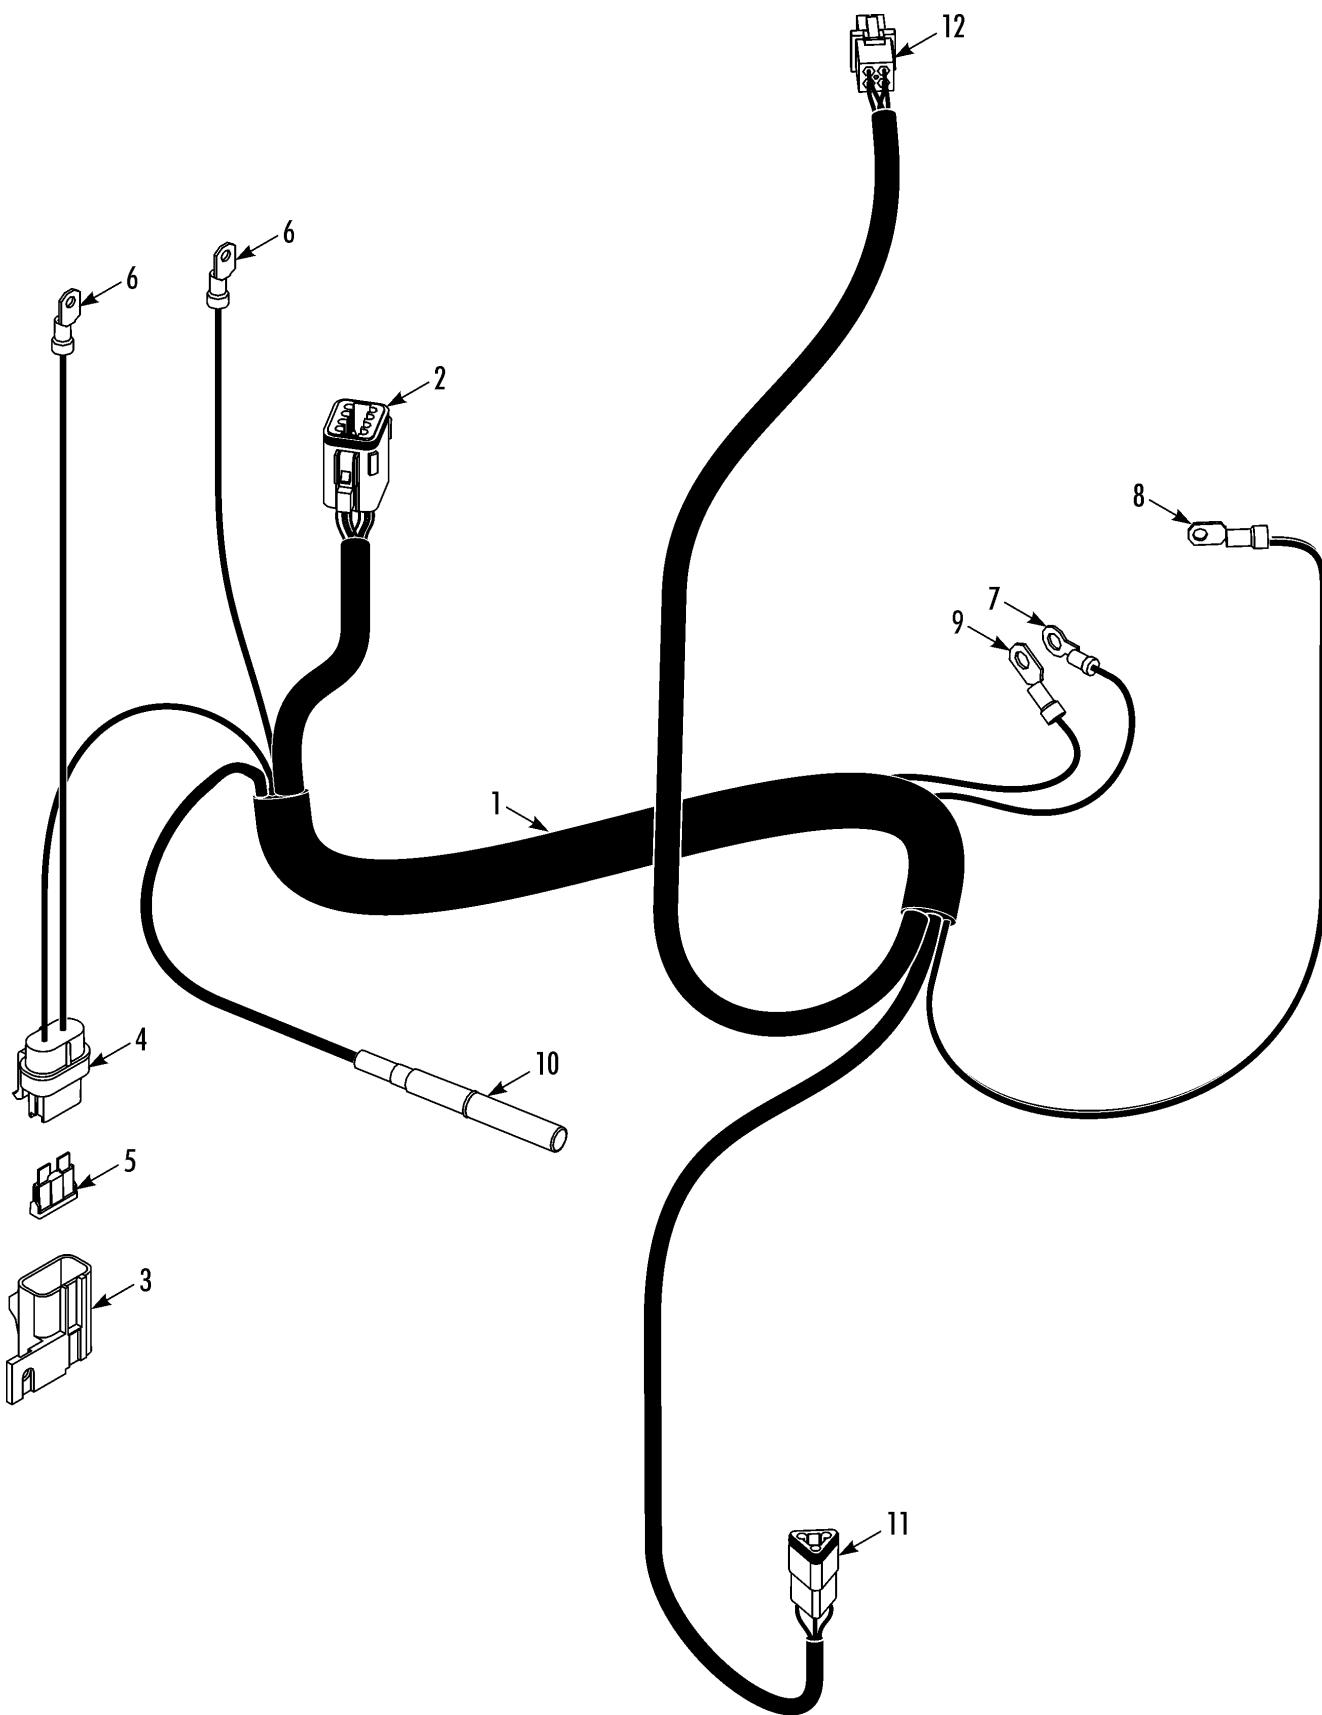


HARNESS - BATTERY CHARGER (OPTIONAL)

Revised
10/26/13



267F9

REF	PART NO.	DESCRIPTION	QTY
1	45-2520	HARNESS - battery charger	1
2	44-9903	*PLUG - 8-pin (w/ seal)	1
	41-8816	*SOCKET - gold (18 ga)	7
	44-9602	*PIN - sealing	1
3	41-1769	*COVER - fuse	1
4	42-443	*HOLDER - fuse	1
5	41-2978	*FUSE - 20 amp	1
6	41-4468	*TERMINAL - ring (#8 yellow, 10-12 ga)	2
7	44-2789	*TERMINAL - ring (blue 1/4, 14-16 ga)	1
8	44-2792	*TERMINAL - ring (yellow #10)	1
9	44-2793	*TERMINAL - ring (yellow 1/4)	1
10	40-975	*SENSOR - ungraded	1
11	44-9631	*CONNECTOR - 3-pin (w/ seal)	1
	44-9587	*TERMINAL - socket	1
	44-9602	*PIN - sealing	2
12	41-5710	*CONNECTOR - sealed (4-pin)	1
	41-5719	*SOCKET (20-16 gauge)	4

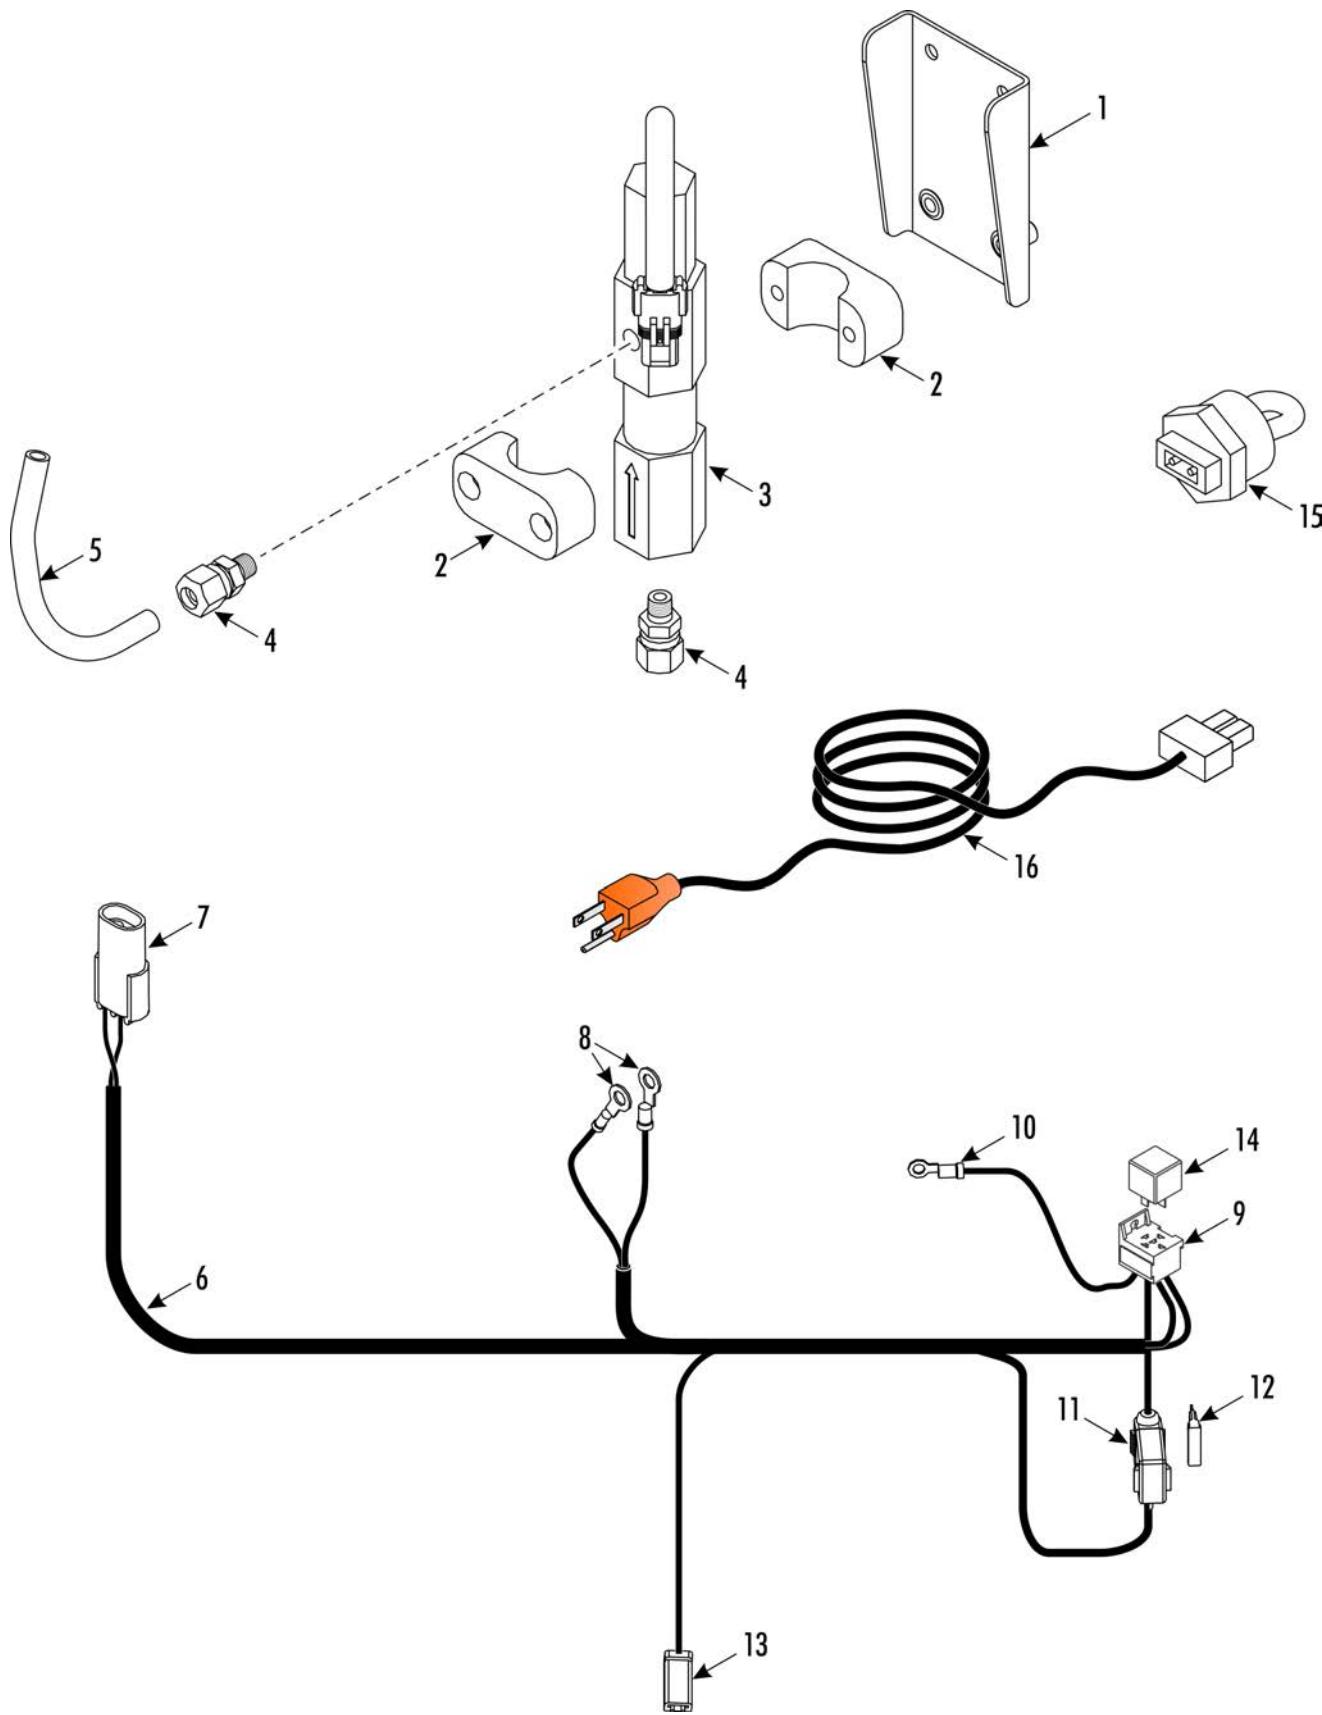

FUEL HEATER & BLOCK HEATER (OPTIONAL)

Revised
01/30/14




261G2

REF	PART NO.	DESCRIPTION	QTY
1	93-427	BRACKET - fuel heater	1
2	91-2473	CLAMP - heater	2
	51-2332	SCREW - clamp	2
3	42-273	HEATER - fuel	1
4	13-1223	CONNECTOR - fuel line (3/8)	2
	10-242	KIT - sleeve & eyelet	2
	11-4941	NUT - connector	2
5	11-4372	HOSE (3/8 od x 35 ft)	A/R
6	42-829	HARNESS - fuel heater	1
7	44-5835	*CONNECTOR - shroud (black, 2-pin)	1
8	44-2789	*TERMINAL - ring (blue 1/4, 16-14 ga)	2
9	44-5537	*SOCKET - relay	1
	44-5066	*TERMINAL - fingrip (18-14 ga)	4
10	44-2791	*TERMINAL - ring (blue #10, 16-14 ga)	1
11	41-4740	*HOLDER - fuse	1
12	41-2978	*FUSE - 20 amp	1
13	44-6451	*CONNECTOR - 1-pin (female)	1
	44-5631	*TERMINAL - fingrip (20 gauge)	1
14	41-895	RELAY	1
15	41-2317	HEATER - frost plug	1
16	42-1322	CORD - power	1

267G9 

DOOR SWITCH TRAILER (CargoLink)

Revised
05/06/13

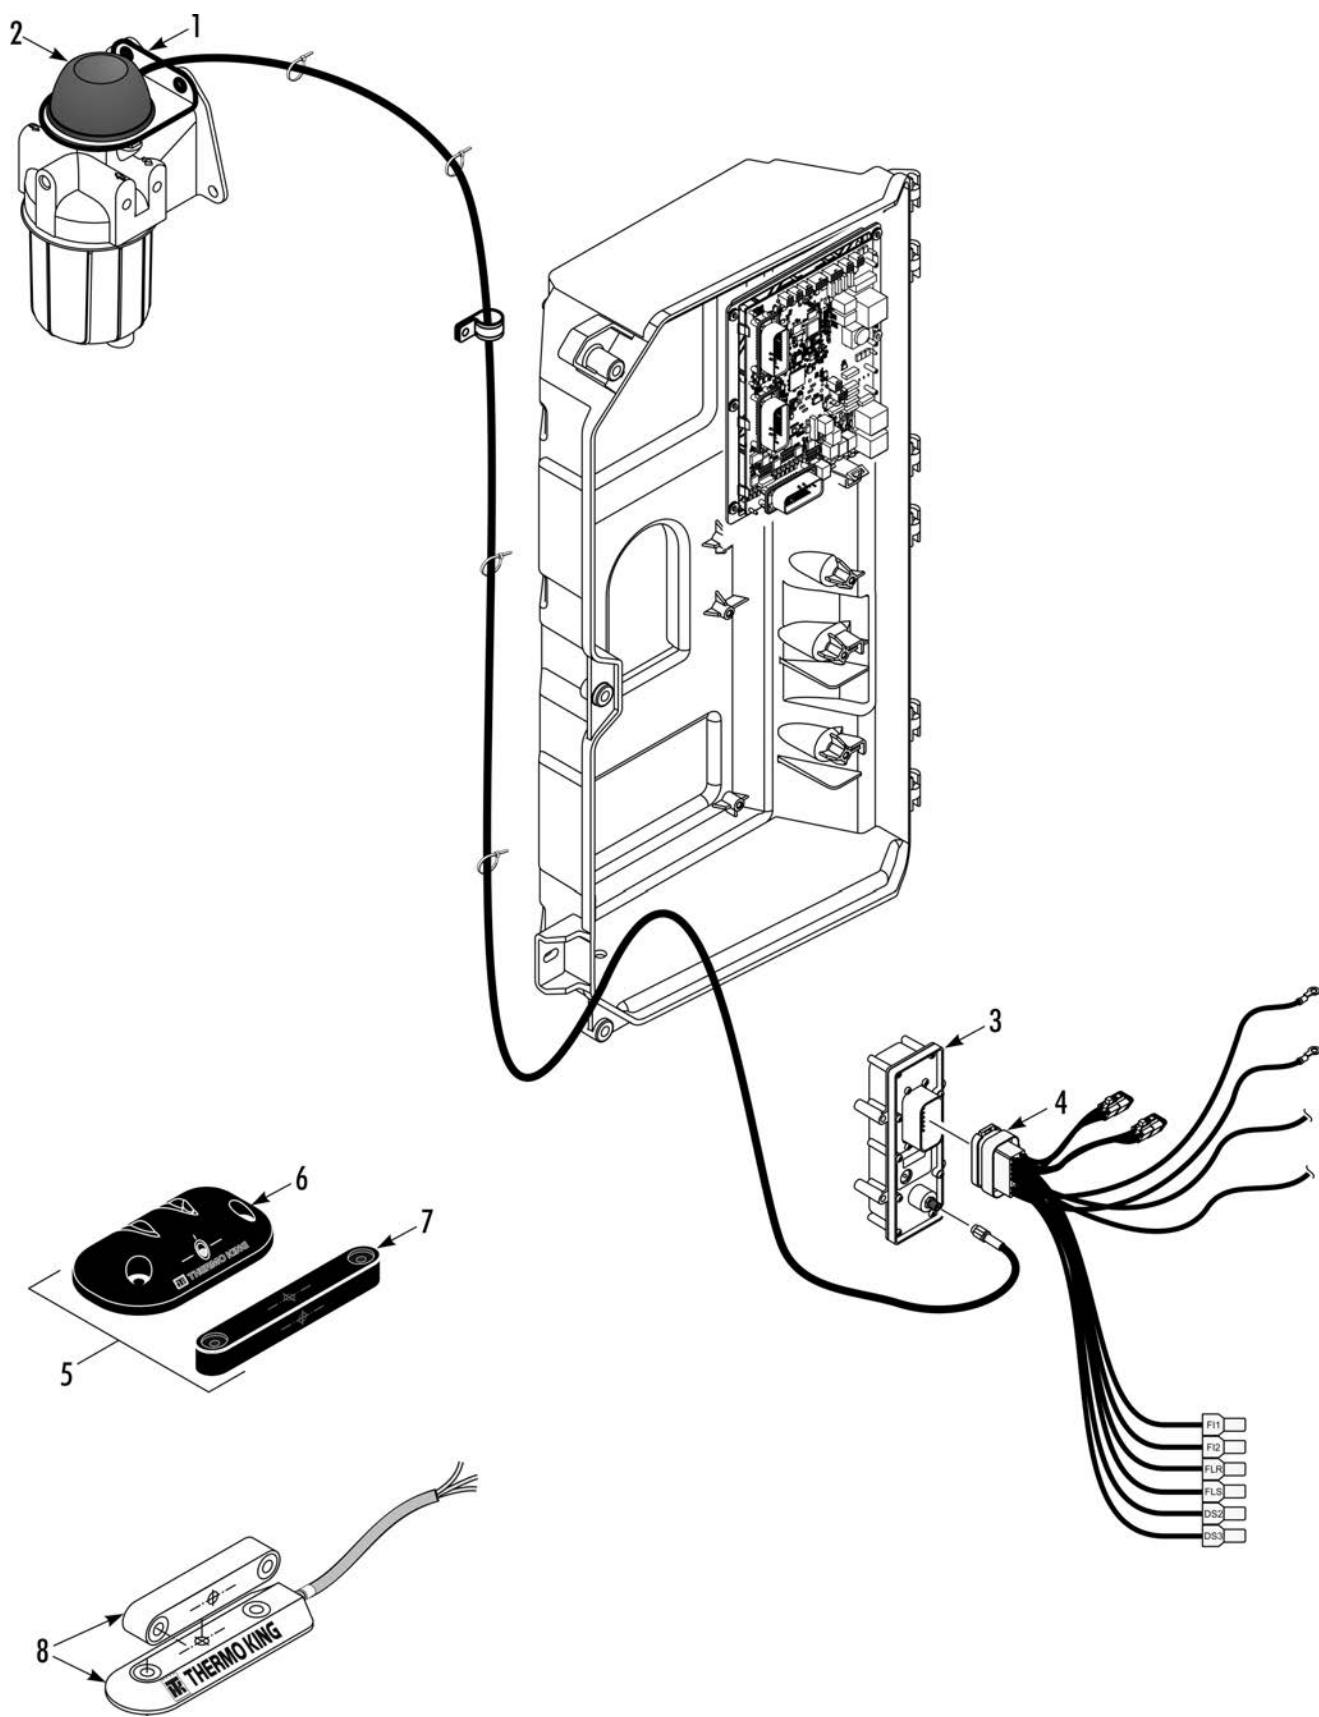


REF	PART NO.	DESCRIPTION	QTY
1	93-860	BRACKET - antenna	1
	55-736	SCREW - bracket	2
	55-1511	LOCKWASHER	2
	55-2001	FLATWASHER	2
	55-7062	INSERT - threaded	2
2	42-239	ANTENNA	1
3	42-228	CONTROLLER - coordinator	1
	55-5754	NUT - controller	2
	55-3013	FLATWASHER	2
4	42-240	HARNESS - interface	1
	41-9350	*CONNECTOR - 23-pin	1
	41-2457	*TERMINAL - socket	8
	41-9694	*PIN - sealing	15
5	40-1143	KIT - door switch	A/R
6	42-229	*SENSOR - door	1
7	NSS	*MAGNET	1
	51-1321	*SCREW - 3/4 in	2
	55-8421	*SCREW - 1.0 in	2
	55-2001	*FLATWASHER	4
8	40-1135	KIT - door switch (3 wire)	1

226E6 


**STATUS/TEMPERATURE/FUEL LEVEL
DISPLAYS**

Revised
11/21/13

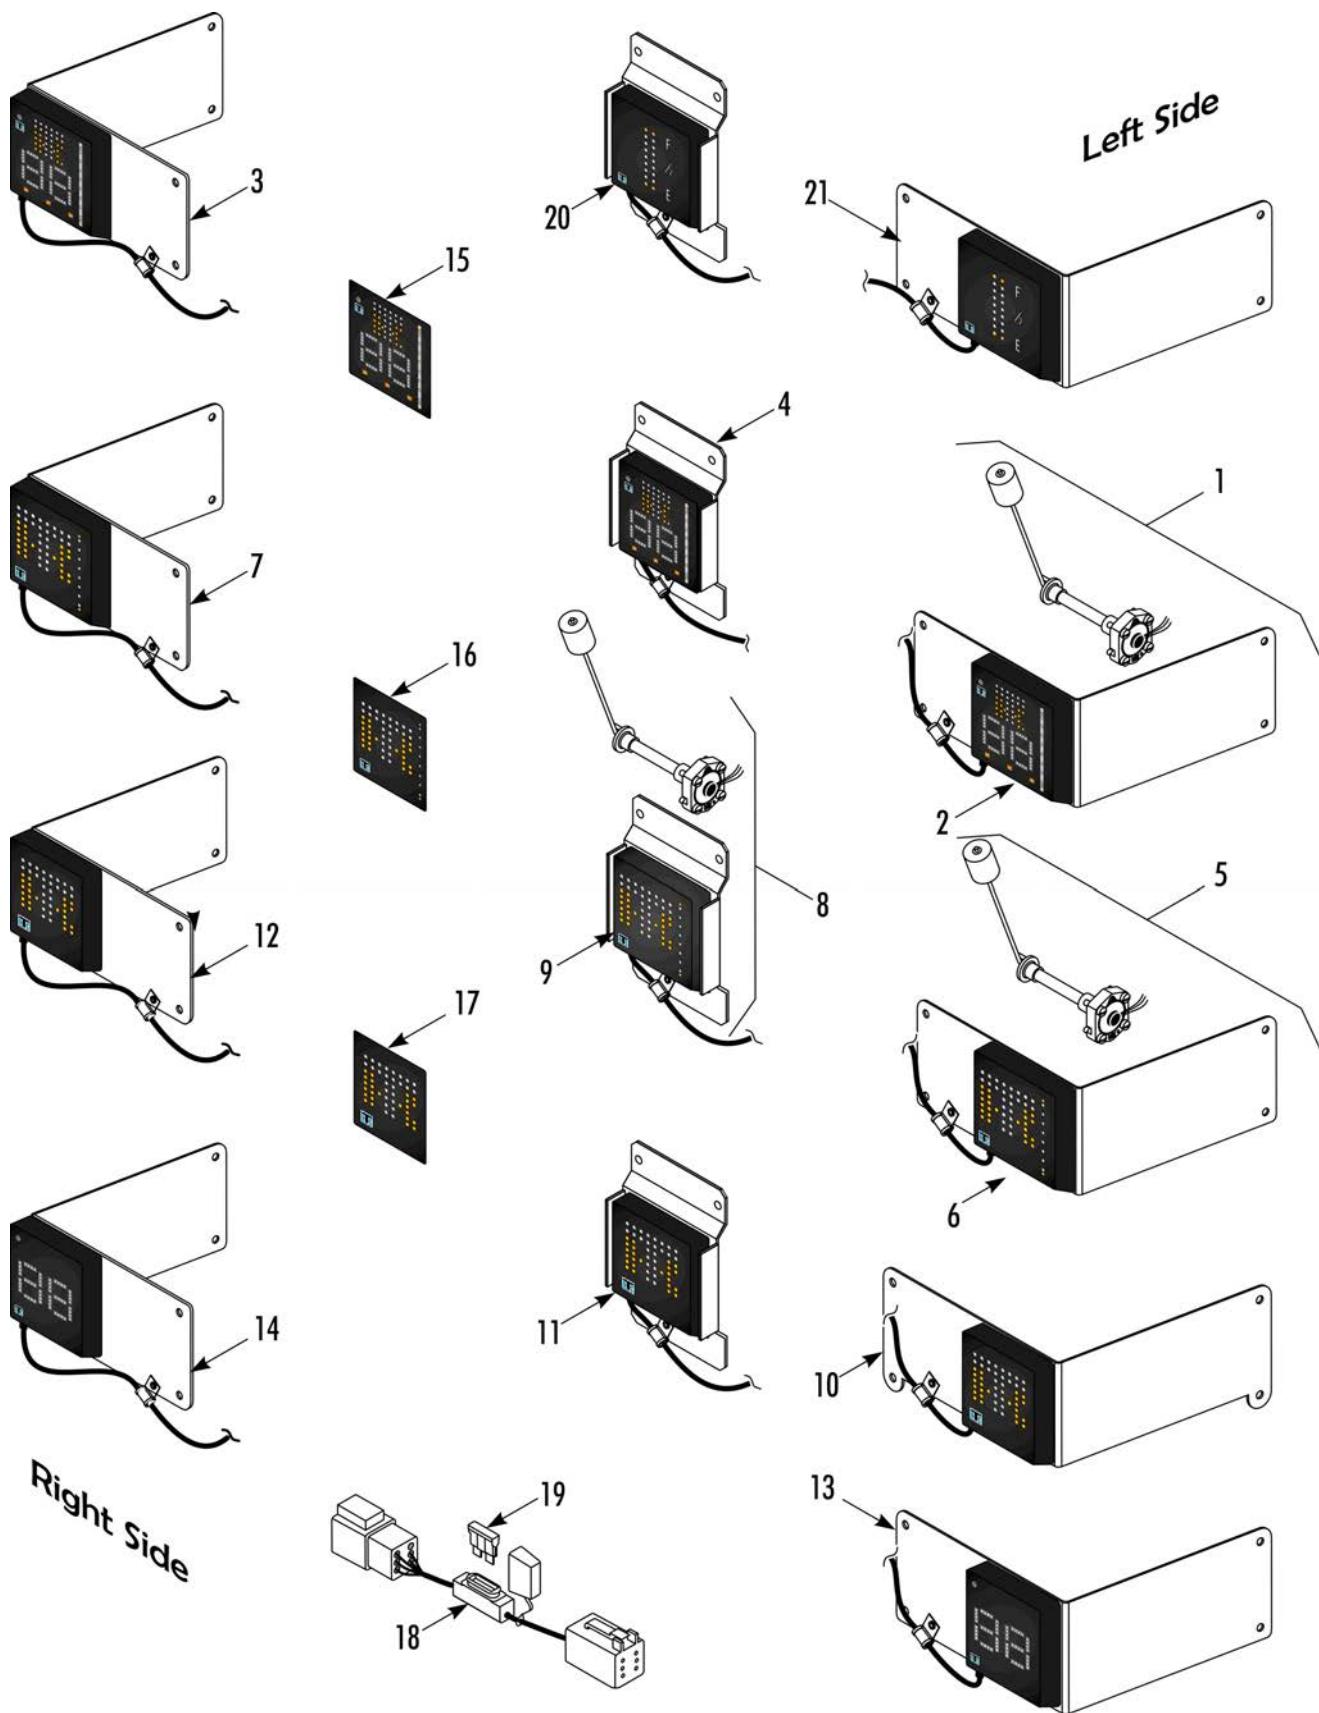

**STATUS/TEMPERATURE/FUEL LEVEL
DISPLAYS****226E6**

REF	PART NO.	DESCRIPTION	QTY
1	40-1109	KIT - status/temp/fuel level display (left side, w/fuel gauge)	1
2	40-1110	KIT - status/temperature/fuel level display (left side)	1
3	40-1111	KIT - status/temperature/fuel level display (right side)	1
4	40-1112	KIT - status/temperature/fuel level display (flush mount)	1
5	40-1070	KIT - status/fuel level display (left side, w/fuel gauge)	1
6	40-1068	KIT - status/fuel level display (left side)	1
7	40-1069	KIT - status/fuel level display (right side)	1
8	40-1071	KIT - status/fuel level display (flush mount, w/fuel gauge)	1
9	40-1067	KIT - status/fuel level display (flush mount)	1
10	40-980	KIT - status display (left side, SB)	1
	40-984	KIT - status display (left side, SLX, Precedent, T-Series Truck after 11/11)	1
	350-4665	KIT - status display (Carrier units only)	1
11	40-981	KIT - status display (flush mount, SB)	1
	40-989	KIT - status display (flush mount, SLX, Precedent)	1
12	40-996	KIT - status display (right mount, SB Australia)	1
	40-985	KIT - status display (right side, SLX, Precedent)	1
13	40-1119	KIT - temperature display (left side, degrees F, 12V only)	1
	40-1120	KIT - temperature display (left side, degrees C, 12V only)	1
14	40-1121	KIT - temperature display (right side, degrees C, 12V only)	1
15	41-9024	DISPLAY - face plate decal (status/temp/fuel level display)	1
16	41-9025	DISPLAY - face plate decal (status/fuel level display)	1
17	41-9023	DISPLAY - face plate decal (status display)	1
18	41-6742	HARNESS - fuse (multi temp units)	1
19	41-1932	FUSE (1 amp)	1
20	40-1160	KIT - fuel level (flushmount)	1
21	40-1165	KIT - fuel level (left side)	1

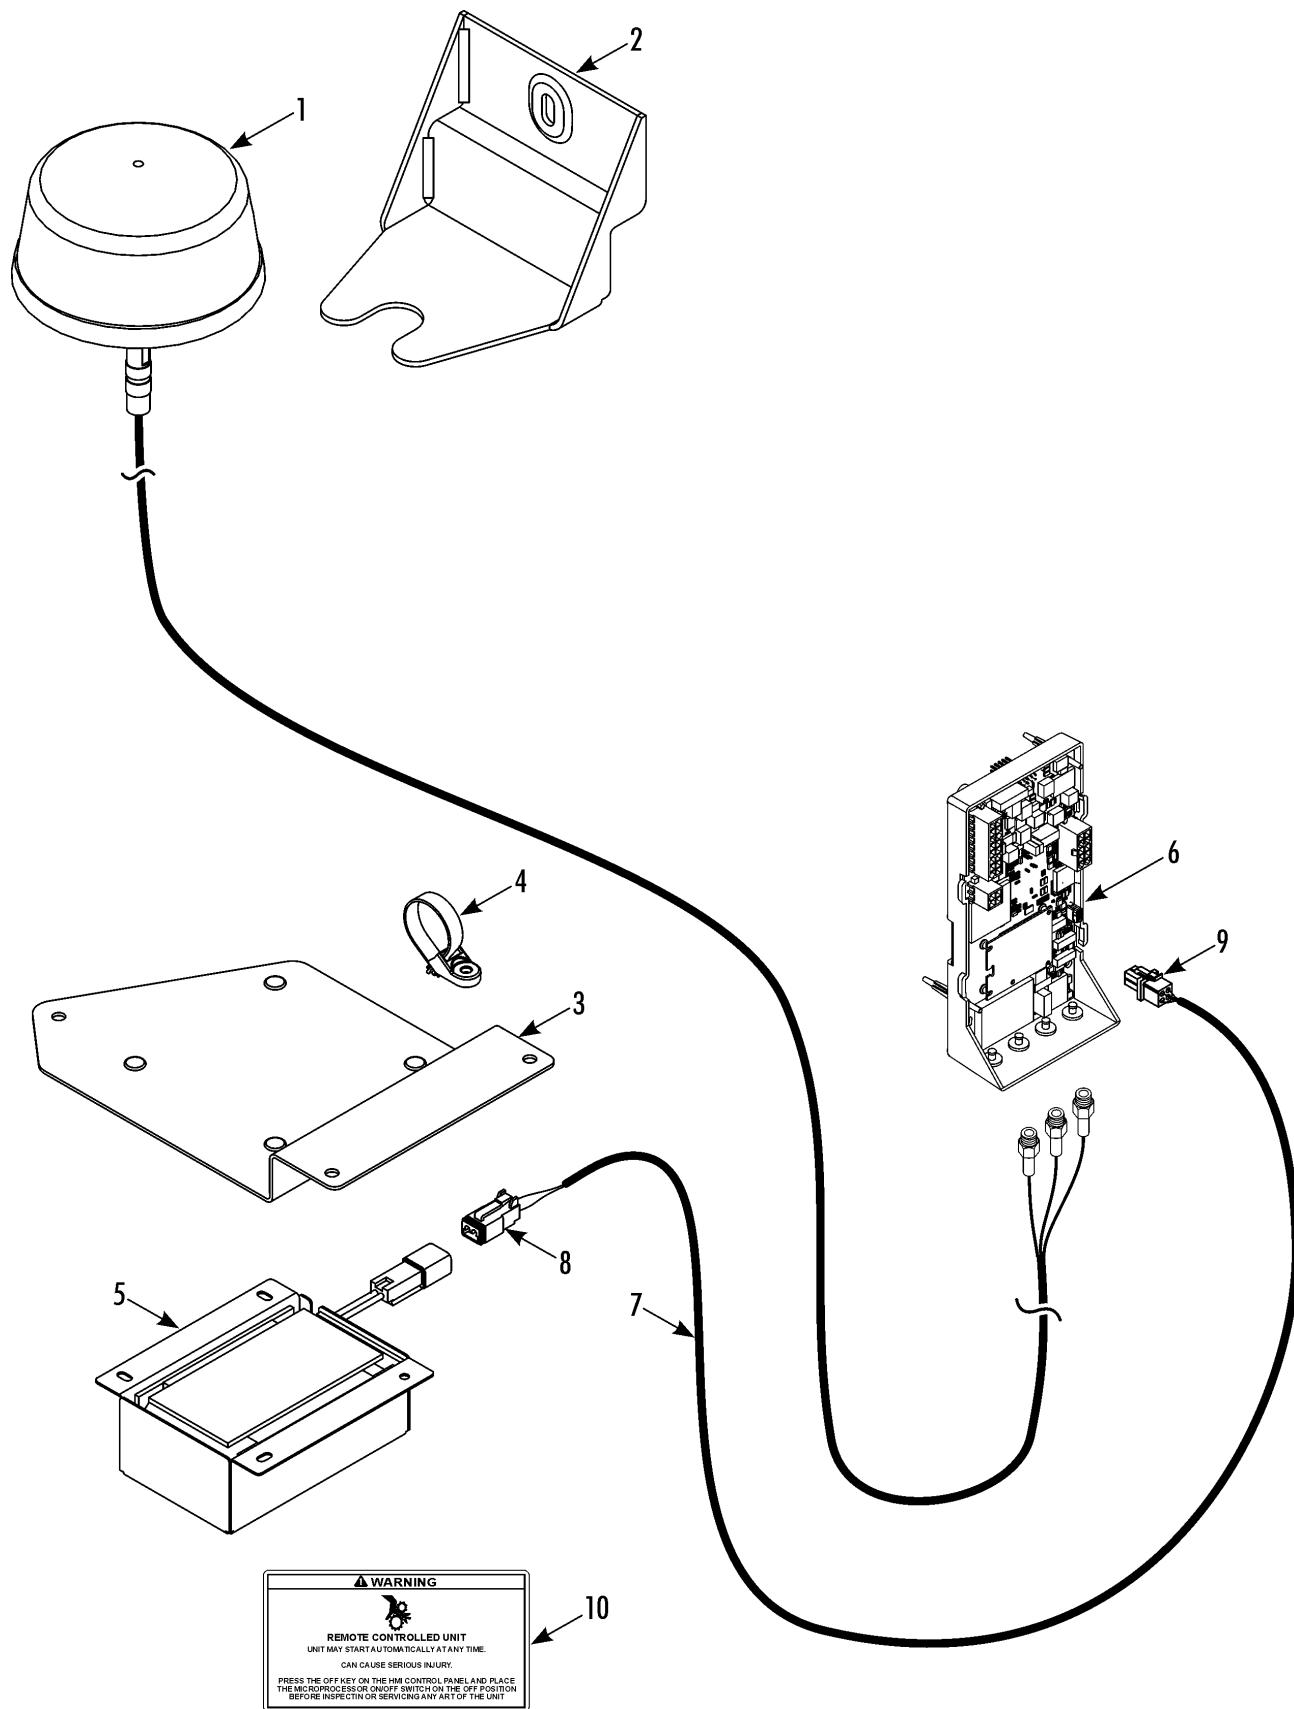


REB ANTENNA & BATTERY



261G7

Revised
11/15/13

REF	PART NO.	DESCRIPTION	QTY
1	41-9806	ANTENNA - cellular, WIFI, GPS	1
2	93-1447	BRACKET - antenna	1
	51-2758	SCREW - bracket	1
3	93-429	BRACKET - battery box	1
	51-2132	SCREW - bracket (16mm)	2
	51-2760	SCREW - bracket (25mm)	1
4	51-2038	MOUNT - bandwrap	1
	51-2220	BANDWRAP	1
5	203-788	BATTERY	1
	55-7089	FLATWASHER	4
	55-7011	NUT - battery box	4
6	45-2387	REB (RADIO EXPANSION BOARD) - iBox + 3rd Party 2-Way	1
	45-2388	REB - iBox + GPS + cellular	1
	45-2465	REB - iBox + T-Mobile	1
	45-2466	REB - iBox + cellular + WIFI + PAN	1
	45-2444	REB - GPS + WIFI + T-Mobile	1
	45-2445	REB - GPS + WIFI + cellular	1
	44-9524	*FUSE (3 amp)	1
7	42-838	HARNESS - REB to battery	1
8	44-9585	*PLUG - 2-pin (w/ seal)	1
9	41-5710	*CONNECTOR - sealed (4-pin)	1
10	92-7100	NAMEPLATE - Warning Remote Control	1

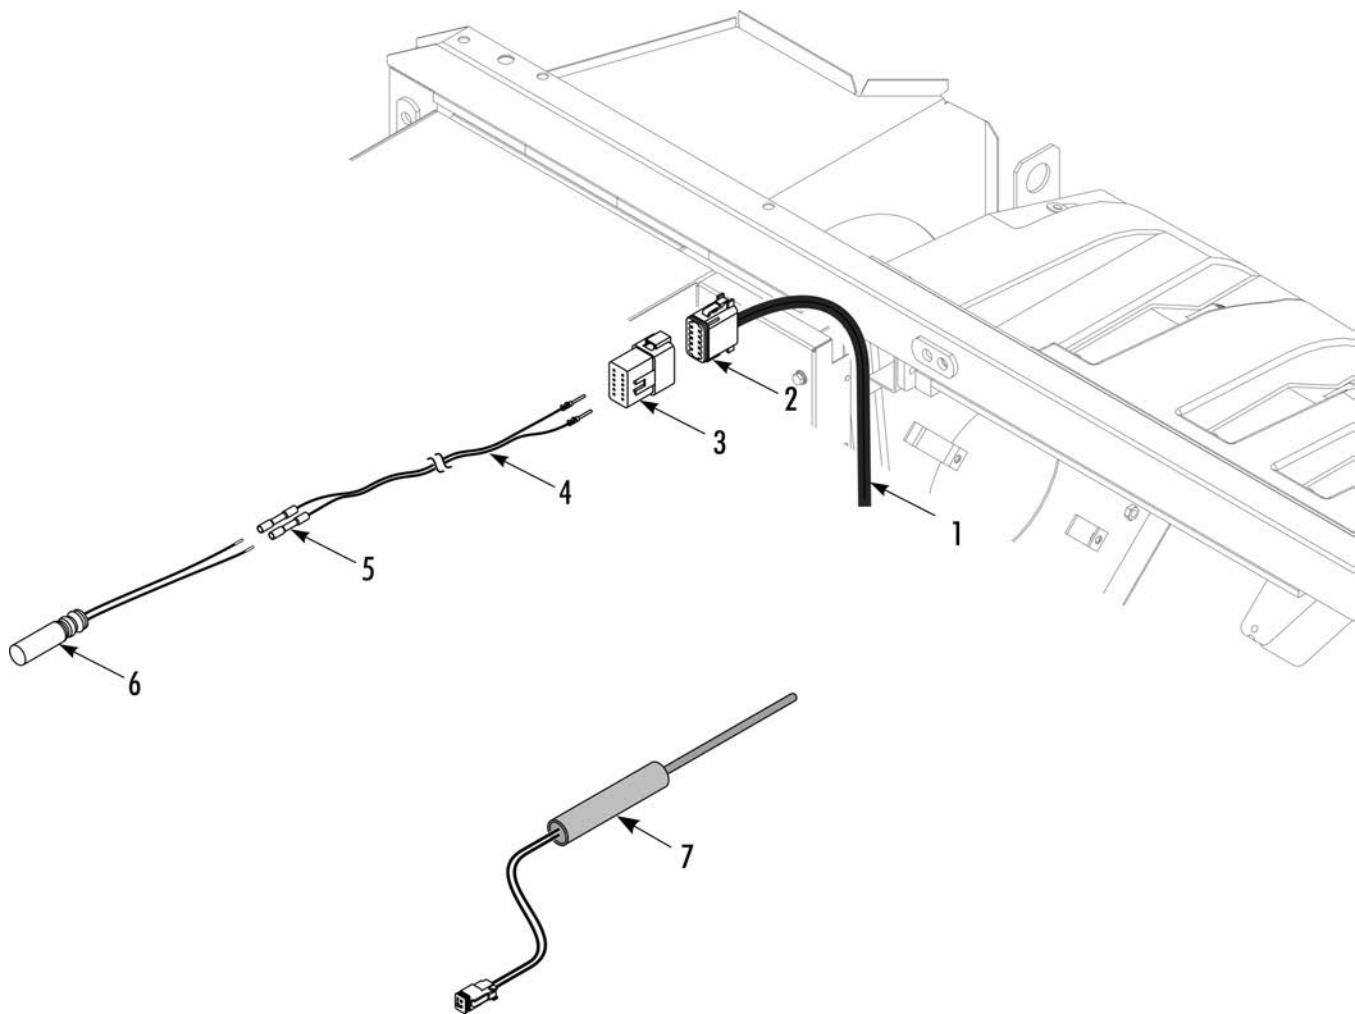



Cargo Watch HARNESSES AND SENSORS

Revised
05/15/13



189CO

REF	PART NO.	DESCRIPTION	QTY
1	41-9701	HARNESS - HMI (SB)	1
	42-446	HARNESS - HMI (Precedent)	1
2	44-9600	*PLUG - 12-pin	1
3	44-9904	*RECEPTACLE - 12-pin	1
4	41-5488	HARNESS - Cargo Watch sensor (10 ft)	1
	41-5489	HARNESS - Cargo Watch sensor (20 ft)	1
	41-5490	HARNESS - Cargo Watch sensor (40 ft)	1
	41-5491	HARNESS - Cargo Watch sensor (60 ft)	1
	41-5492	HARNESS - Cargo Watch sensor (80 ft)	1
	41-9908	HARNESS - Cargo Watch sensor (100 ft)	1
5	41-124	TERMINAL - splice	2
6	41-5436	SENSOR - Cargo Watch	1
7	42-474	SENSOR - Cargo Watch, handheld (optional)	1

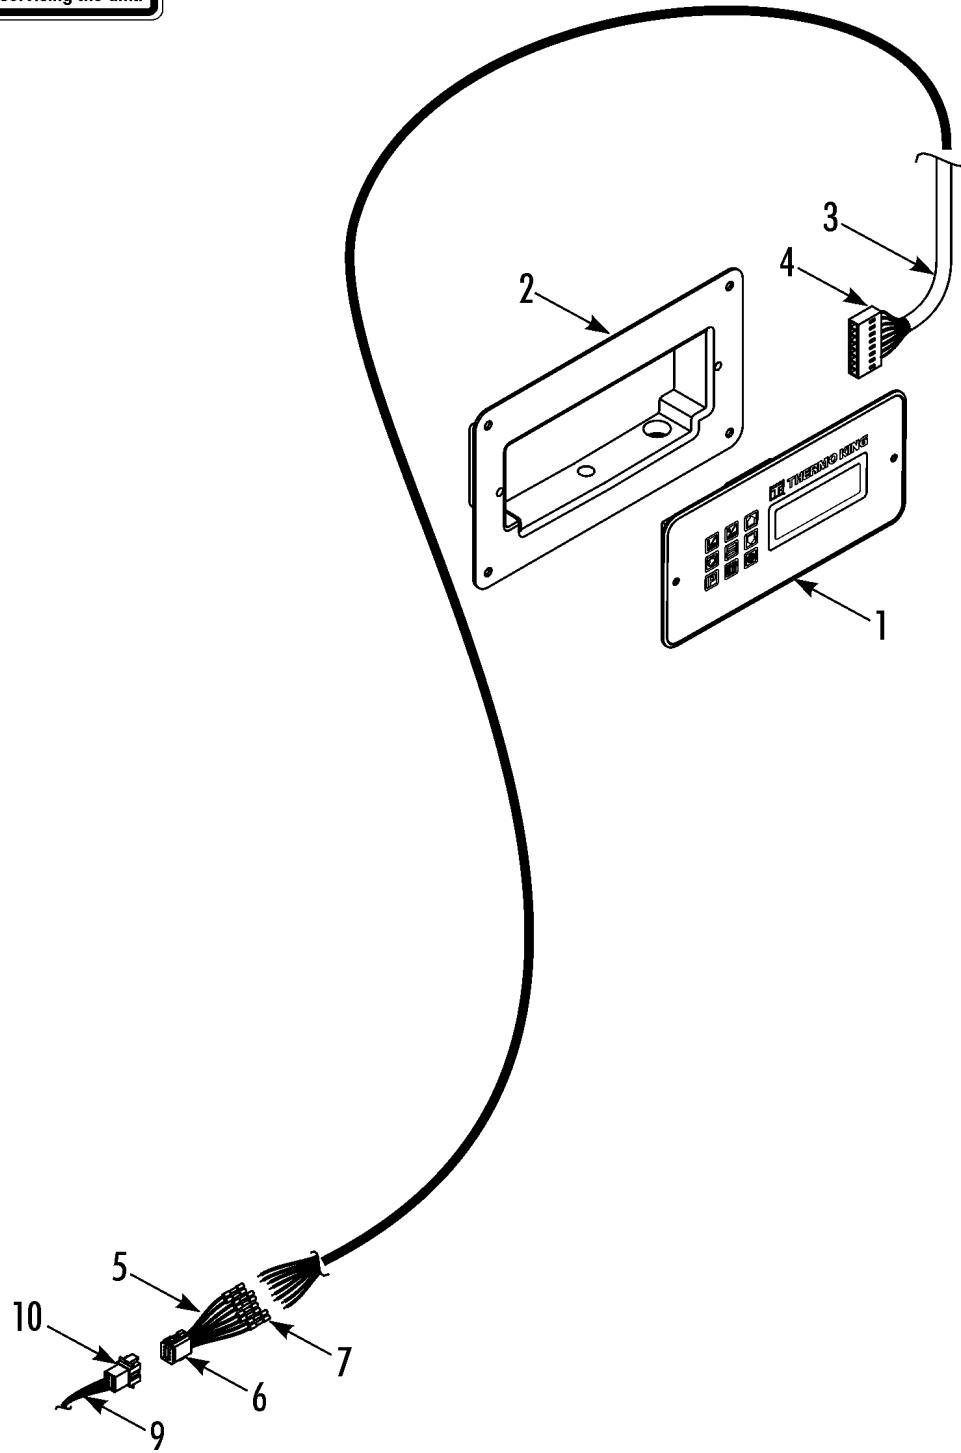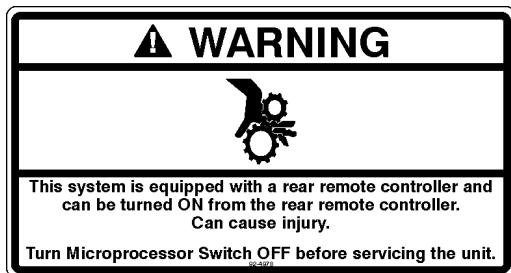


FLUSH MOUNT CONTROLLER



256H4

REF	PART NO.	DESCRIPTION	QTY
1	45-2401	CONTROLLER - flush mount (single temp)	1
	45-2404	CONTROLLER - flush mount (multi temp)	1
	93-1032	*FACEPLATE	1
	55-3443	SCREW - controller	2
2	90-335	KIT - box, remote controller	1
3	41-8702	HARNESS - controller to evap	1
	41-7032	HARNESS - controller to evap (Precedent)	1
4	41-8765	*CONNECTOR - 8-pin	1
	41-8872	*TERMINAL - gold (20 ga)	7
5	41-6586	HARNESS - evaporator	1
6	44-9903	*PLUG - 8-pin	1
	44-9902	*WEDGE - 8 -pin	1
	41-8816	*SOCKET - gold (18 ga)	8
7	41-124	*TERMINAL - splice	8
8	92-4978	NAMEPLATE - Warning	1
9	42-839	HARNESS - remote controller (single temp)	1
	42-1316	HARNESS - remote controller (multi temp)	1
10	41-5709	*CONNECTOR - sealed (8-pin)	1

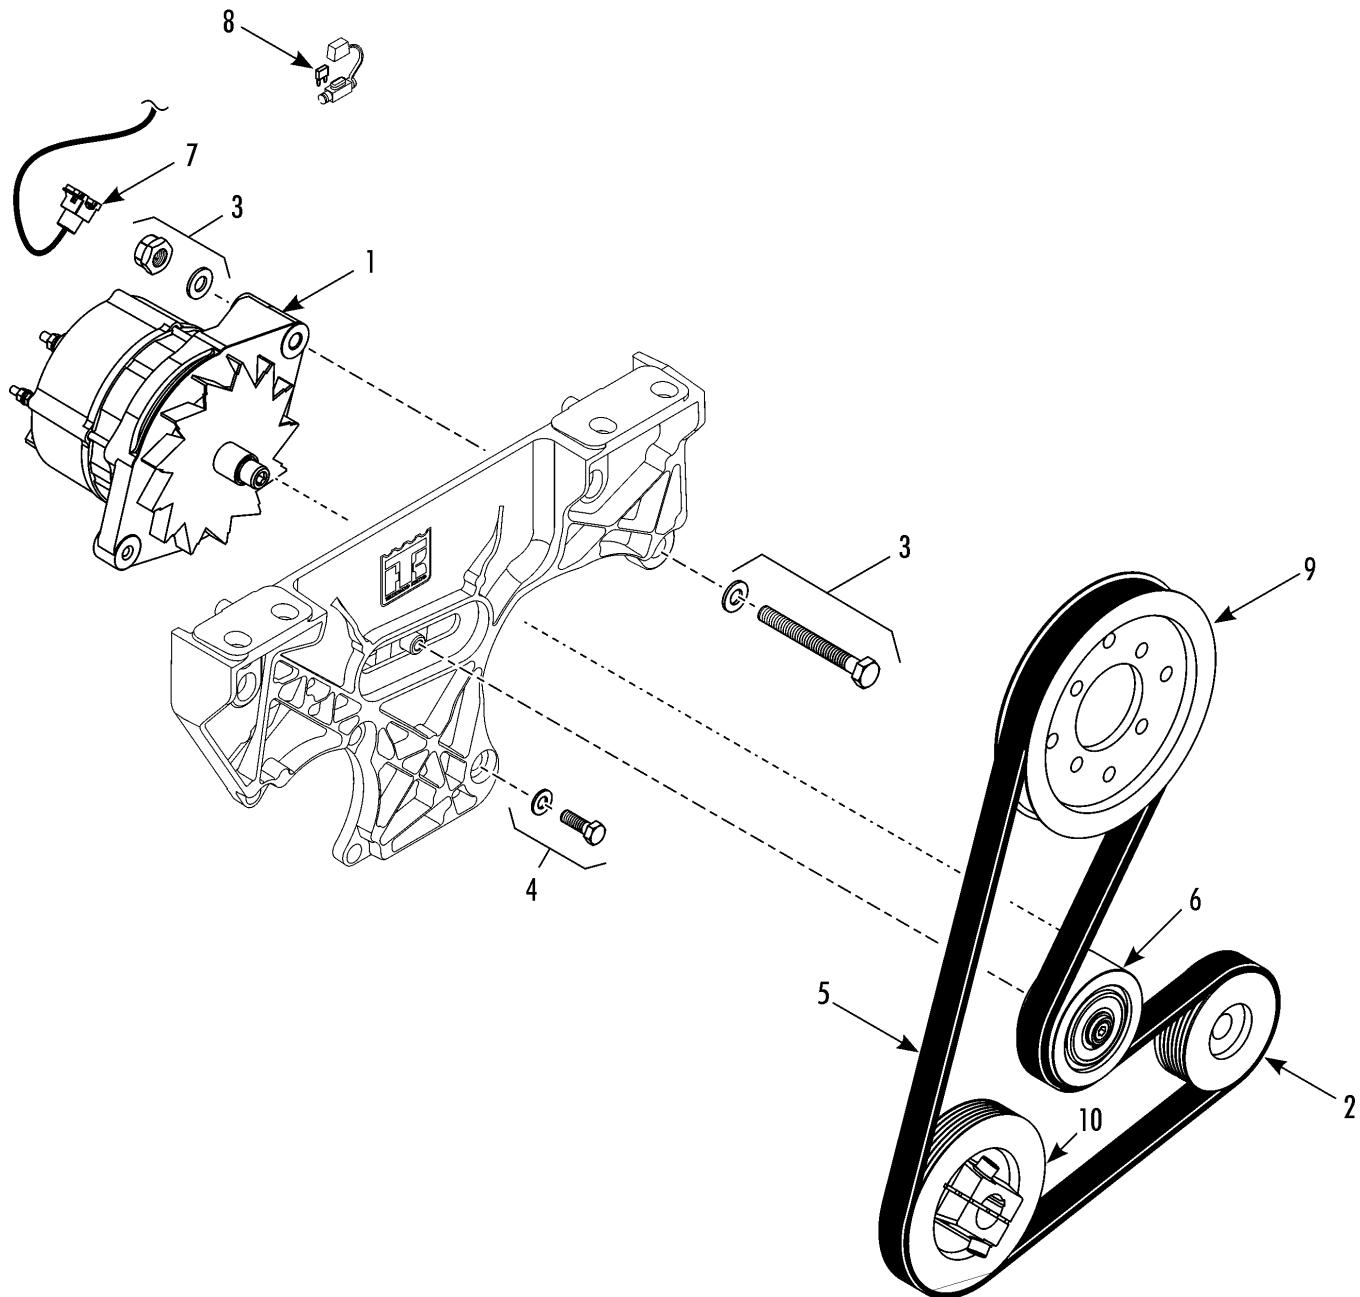

ALTERNATOR - 120A , S-600 (OPTIONAL)

Revised
01/10/14




270B8

REF	PART NO.	DESCRIPTION	QTY
	40-1209	KIT - 120 amp alternator	1
1	45-2258	*ALTERNATOR - 120 amp	1
2	77-3057	*PULLEY - alternator	1
3	55-8751	*SCREW - alternator (M10)	1
	55-7072	*FLATWASHER	2
	55-7005	*NUT	1
4	55-5424	*SCREW - alternator (M8)	1
	55-7069	*FLATWASHER	1
5	78-1876	*BELT - alternator & generator	1
6	78-1843	*TENSIONER - belt (smooth)	1
7	42-975	HARNESS - battery sense (9 ft)	1
	42-976	HARNESS - battery sense (60 ft)	1
	44-9607	CONNECTOR - alternator	1
8	41-3077	FUSE - 3 amp	1
9	77-2691	PULLEY - engine/alternator & generator (see 261C5)	1
	55-6279	SCREW - pulley	4
	51-144	FLATWASHER	4
10	77-3056	PULLEY - generator	1

267F0 

AIR EXCHANGER (OPTIONAL)

Revised
04/01/13

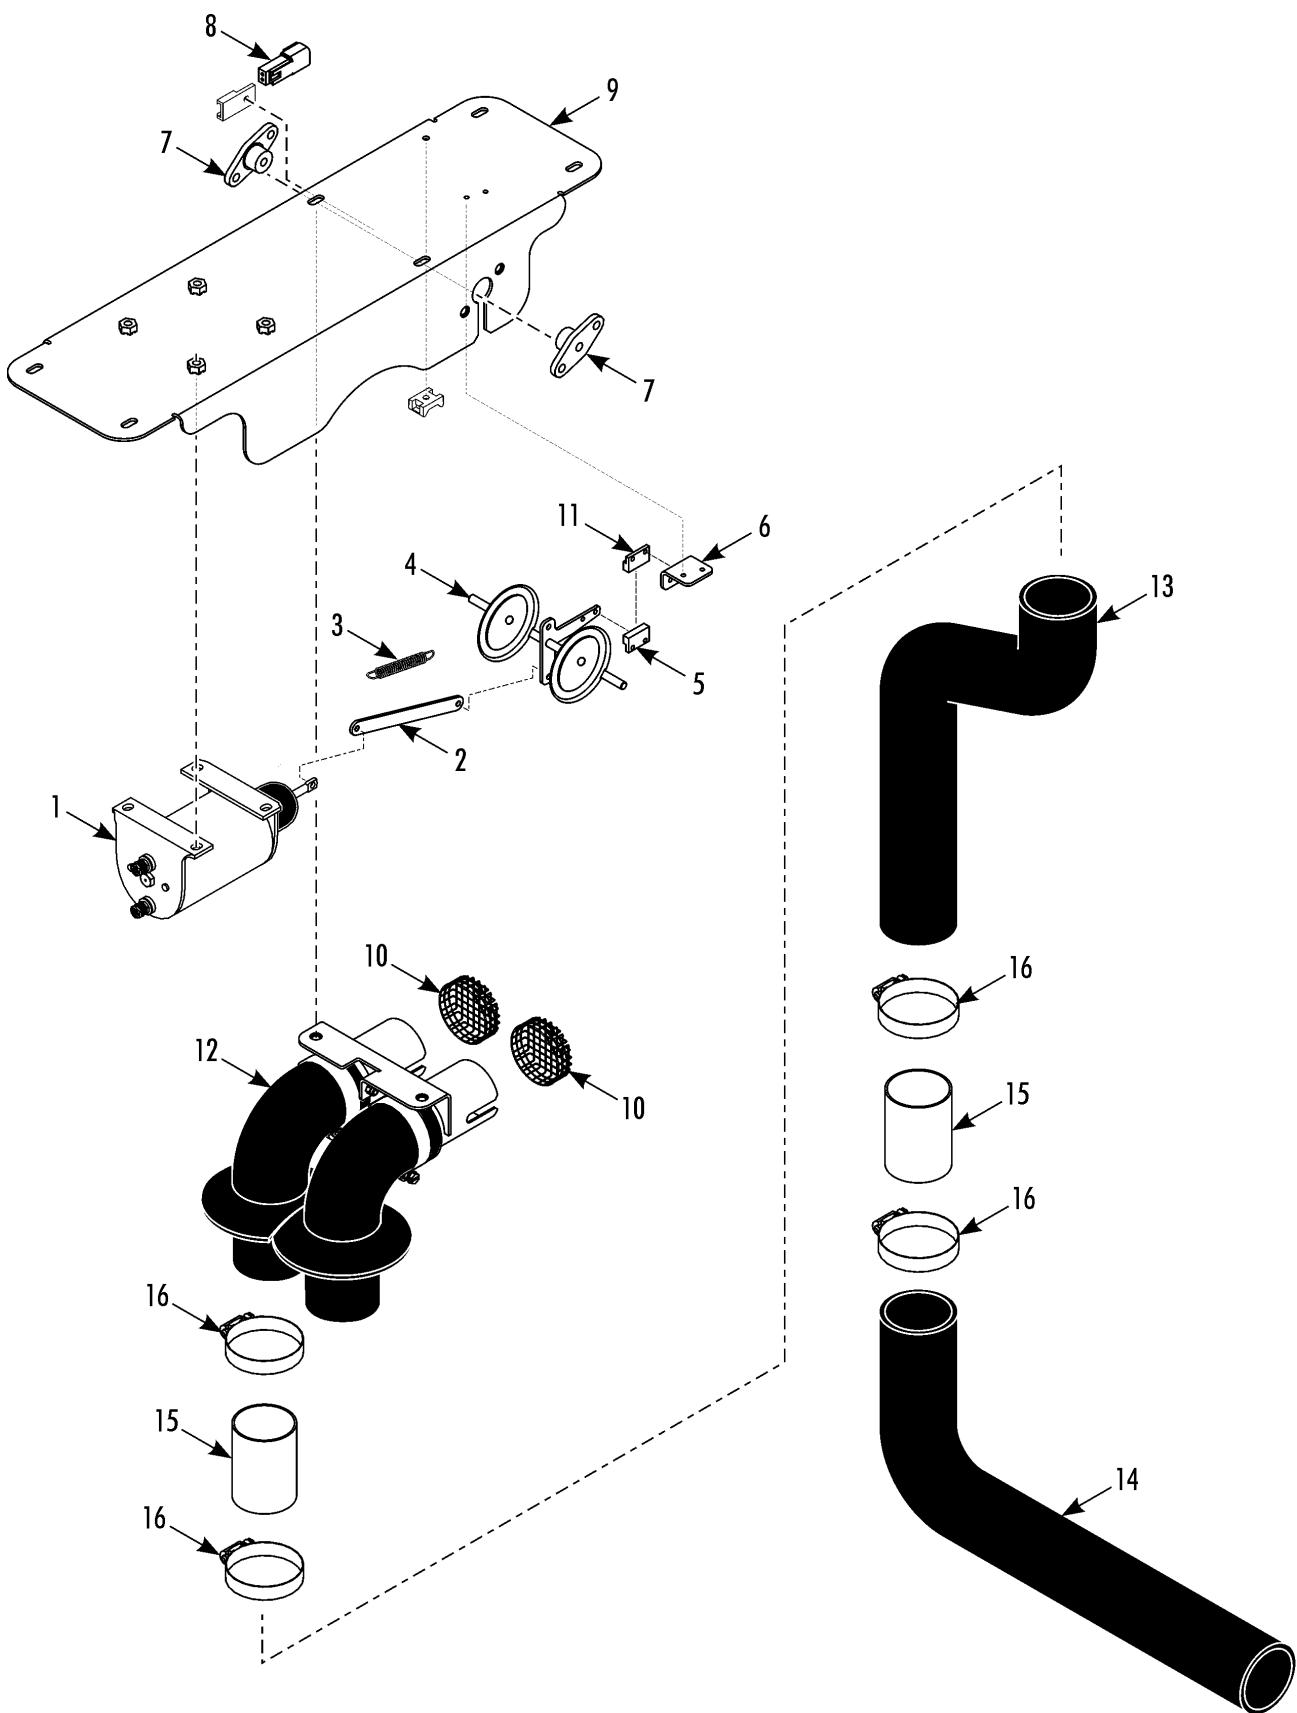

AIR EXCHANGER (OPTIONAL)

Revised
04/01/13




267FO

REF	PART NO.	DESCRIPTION	QTY
1	44-2823	SOLENOID - damper	1
	51-2197	SCREW - solenoid	4
2	93-812	LINK - damper	1
	51-2391	SCREW - sholder	2
	55-7697	FLATWASHER	6
	55-7864	NUT	2
3	93-813	SPRING	1
	51-2392	SCREW - sholder	1
	55-7089	FLATWASHER	1
4	93-814	DAMPER	1
5	41-9914	MAGNET	1
	55-2270	RIVET - magnet	2
6	93-815	BRACKET - switch	1
7	93-851	BEARING	2
	51-2197	SCREW - bearing	4
8	42-1014	HARNESS - air exchanger	1
9	93-819	BRACKET - air exchanger	1
10	93-817	SCREEN	2
	55-7067	SCREW - screen	4
	51-1610	WASHER	4
11	41-9915	SWITCH	1
12	93-852	TUBE ASSEMBLY	1
13	93-830	HOSE - middle	1
14	93-831	HOSE - end	1
15	93-818	TUBE - connection	2
16	55-2331	BANDWRAP	4

264H3 

AIR CHUTE (OPTIONAL)

Revised
01/27/13

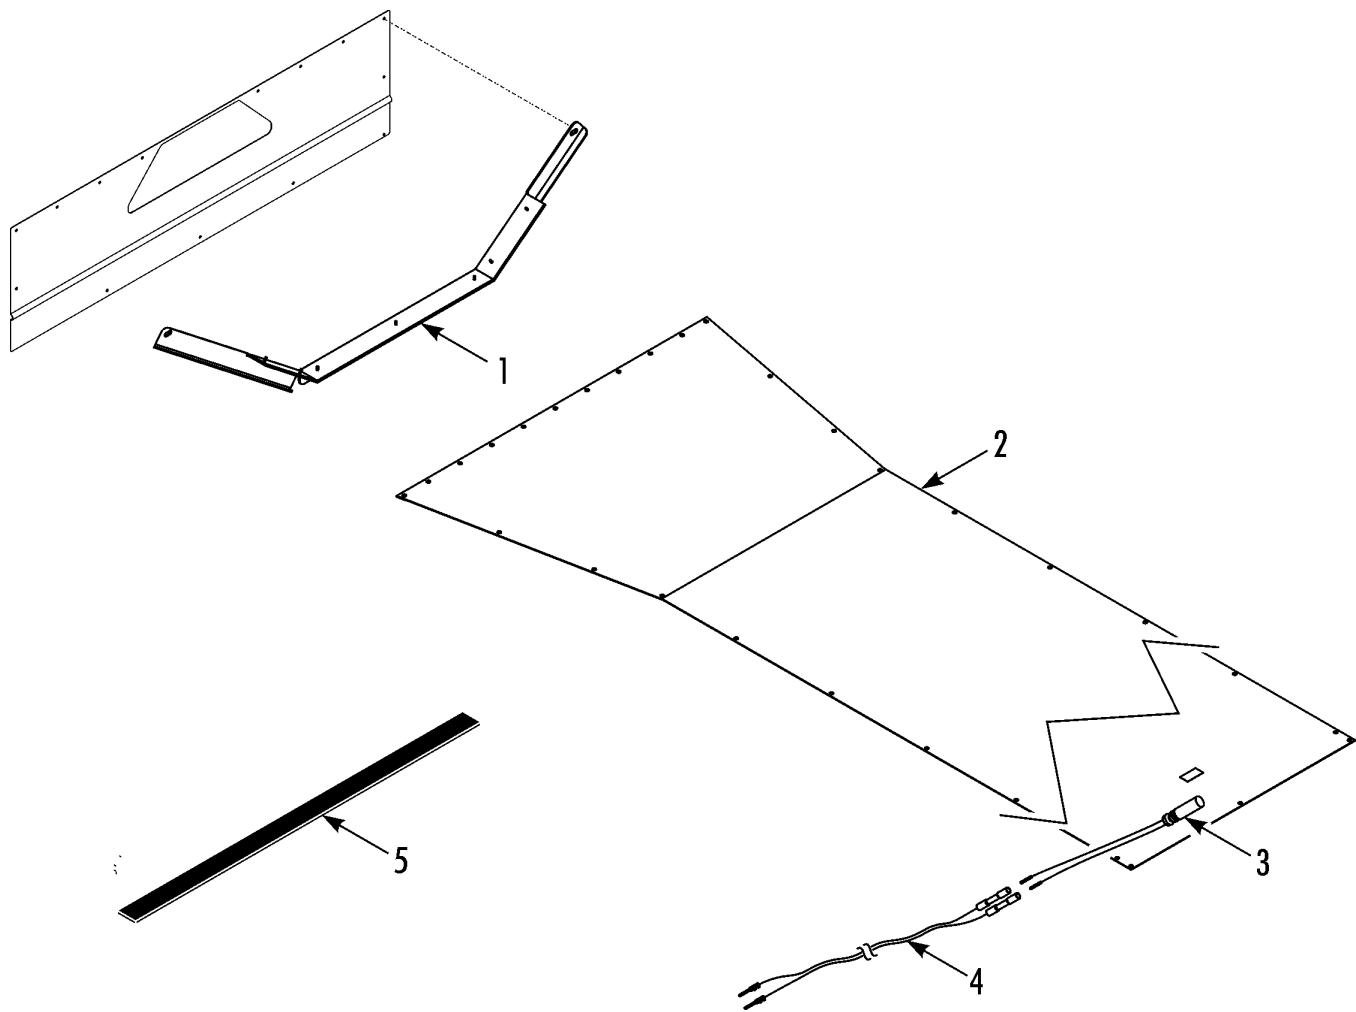


AIR CHUTE (OPTIONAL)



264H3

REF	PART NO.	DESCRIPTION	QTY
1	201-3063	BRACKET - chute adapter, Precedent	1
2	201-3061	CHUTE - air (43 ft, vinyl full velcro)	1
	201-3062	CHUTE - air (38 ft, vinyl full velcro)	1
	201-3064	CHUTE - air (43 ft, vinyl w/ mesh & hardware)	1
	201-3065	CHUTE - air (38 ft, vinyl w/ mesh & hardware)	1
	201-3066	CHUTE - air (43 ft, polyethylene w/ mesh & hardware)	1
	201-3067	CHUTE - air (38 ft, polyethylene w/ mesh & hardware)	1
	51-2346	*RIVET - drive (nylon, set of 60)	1
	51-2349	*SPACER (set of 36)	1
3	40-974	KIT - sensor (graded)	1
4	41-5490	HARNESS - sensor (40 ft)	1
	41-5491	HARNESS - sensor (60 ft)	1
5	201-3036	VELCRO (4 ft, hook side of velcro)	A/R

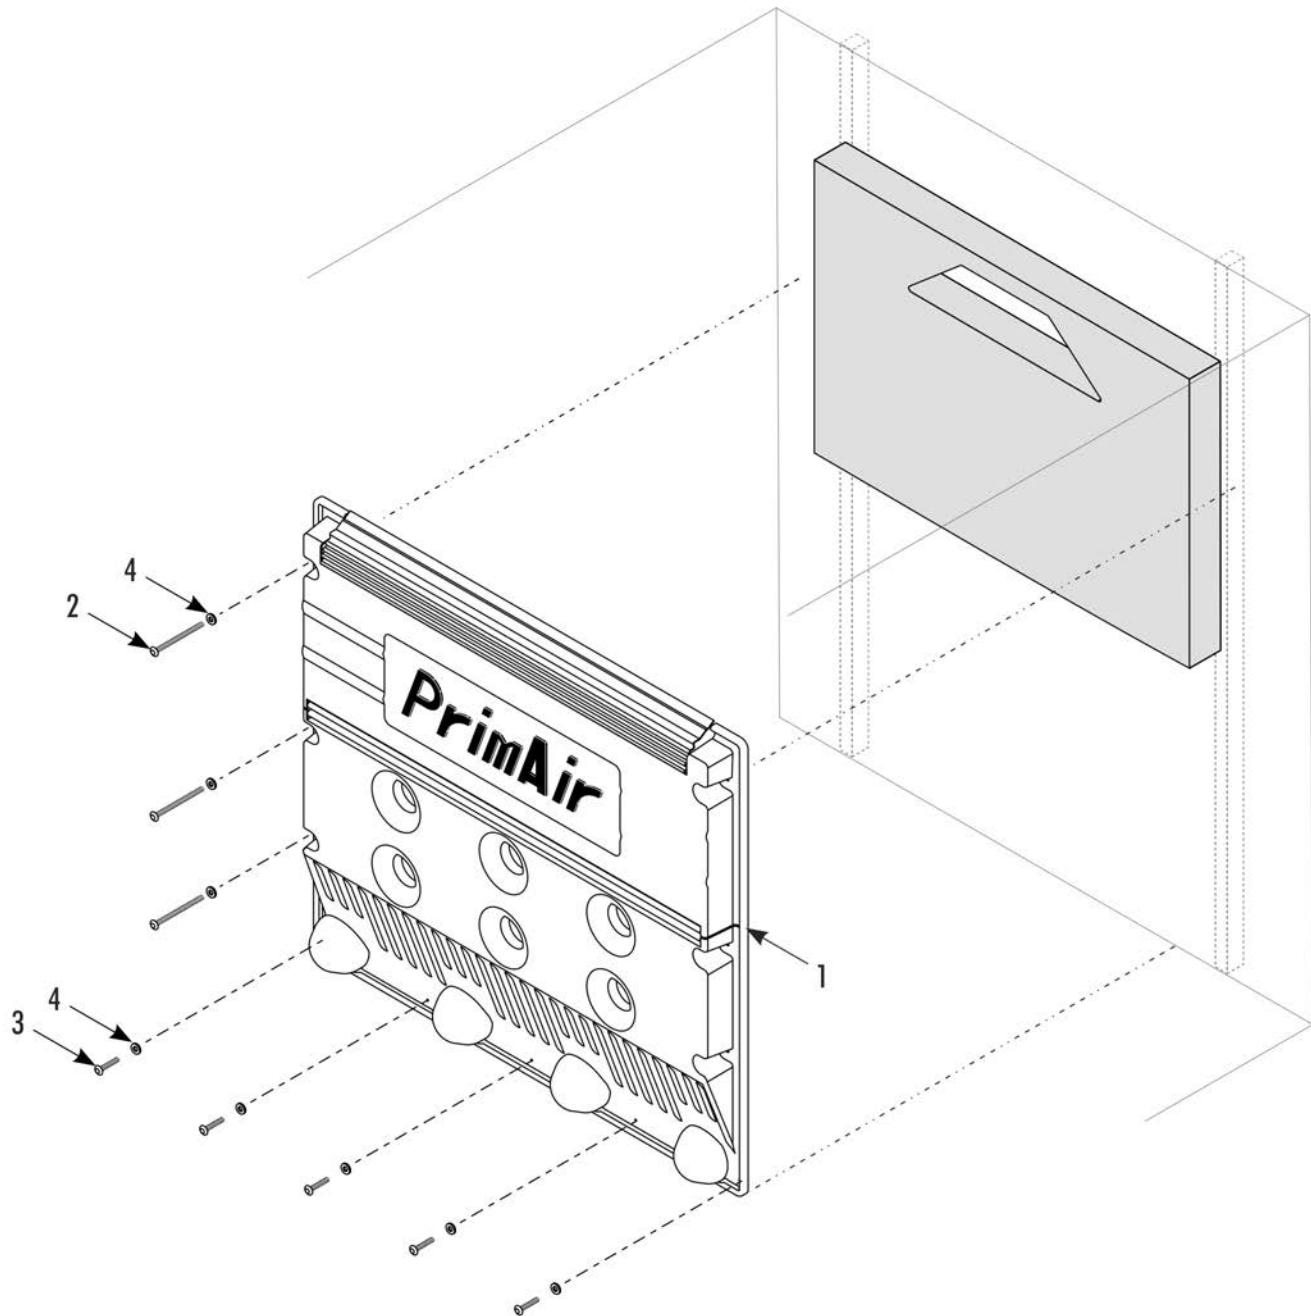

EVAPORATOR BULKHEAD (OPTIONAL)

Revised
11/29/12




261H4

REF	PART NO.	DESCRIPTION	QTY
1	201-3044	BULKHEAD - white (qty of 1)	A/R
	201-3045	BULKHEAD - black (qty of 1)	A/R
	201-3048	BULKHEAD - white (w/ screen, qty of 1)	A/R
	201-3053	BULKHEAD - black (w/ screen, qty of 1)	A/R
	201-3056	KIT - screen (return air)	A/R
2	55-2348	SCREW - side (3 in.)	6
3	55-9383	SCREW - bottom (1.25 in.)	5
4	55-9428	WASHER	11

261B6 

**CONDENSER FRAME & EVAPORATOR
HOUSING**

Revised
02/05/14

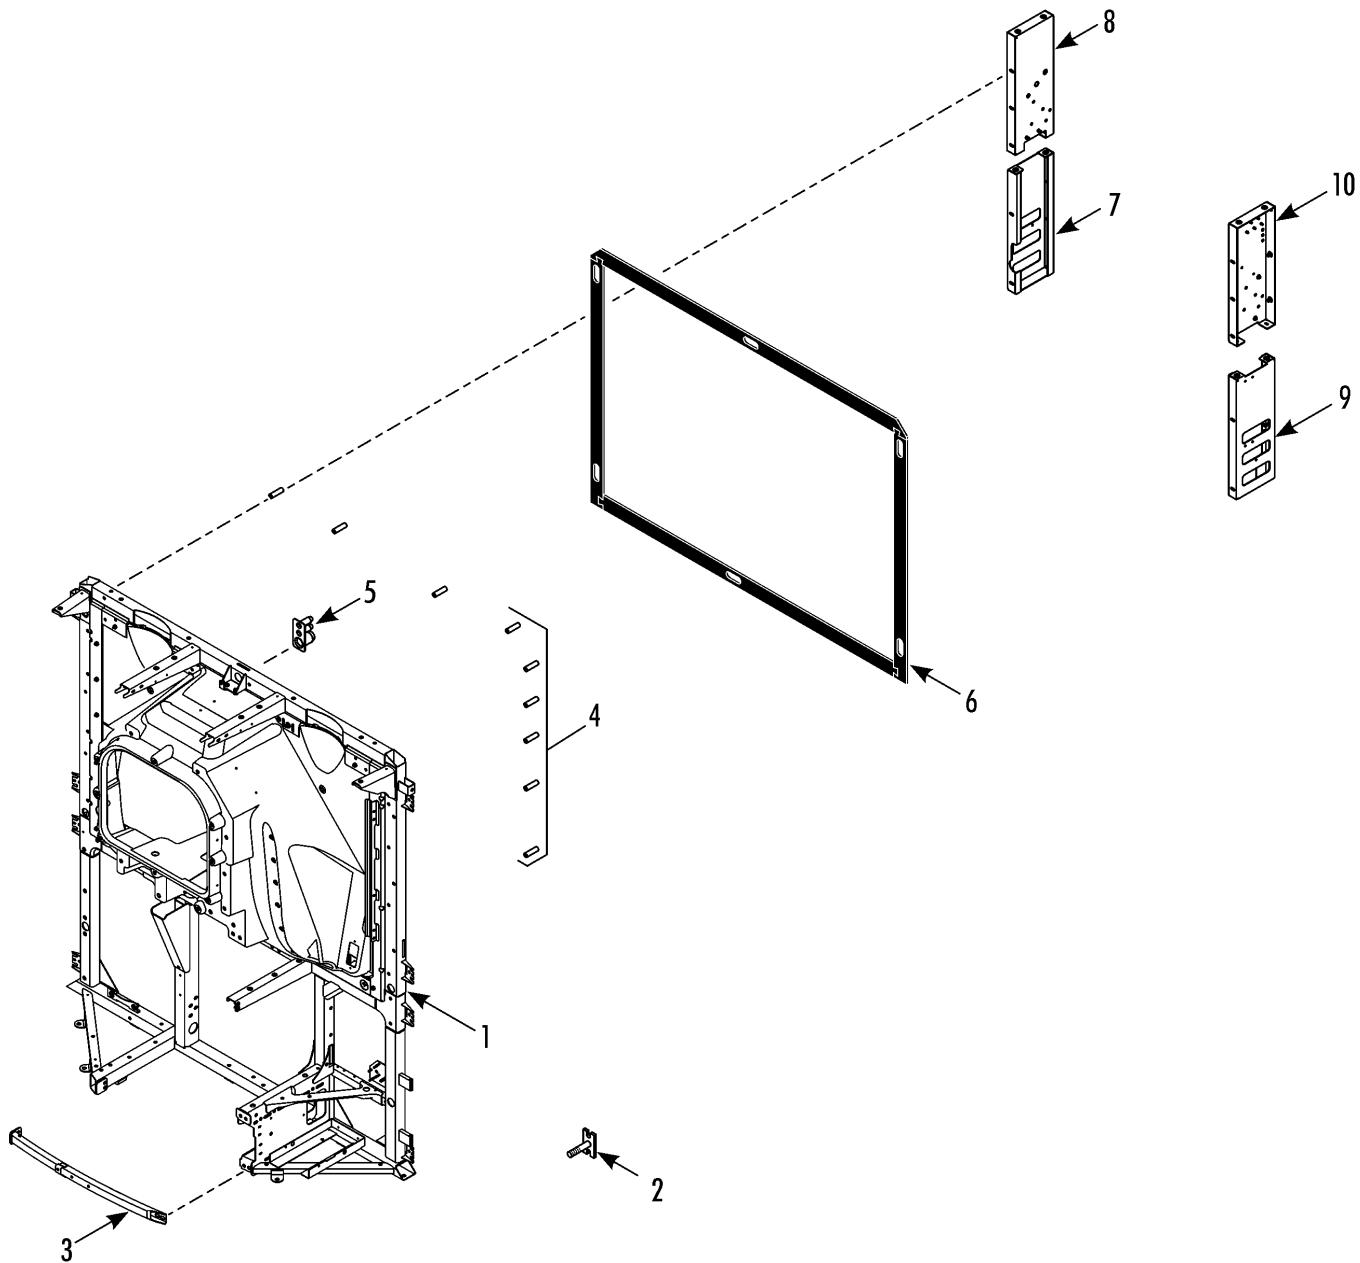


**CONDENSER FRAME & EVAPORATOR
HOUSING**

Revised
02/05/14



261B6

REF	PART NO.	DESCRIPTION	QTY
1	NSS	FRAME - condenser	1
2	99-214	T-BOLT - unit mounting	1
	55-3686	NUT - unit	8
	55-2038	FLATWASHER	8
	55-5234	WASHER - special	8
3	98-9072	BUMPER	1
	51-2264	*INSERT - threaded (M6)	5
	51-1247	SCREW - bumper	6
	55-7072	FLATWASHER	6
4	51-2593	BUSHING - bulkhead	19
	51-891	SCREW - bulkhead	19
	55-2904	WASHER	19
5	33-4933	PLUG - refrigeration tubes	1
6	33-2918	GASKET - sill	1
	203-412	SEALER	A/R
7	92-9849	PANEL - lower (curbside)	1
8	92-9851	PANEL - upper (curbside)	1
9	93-1373	PANEL - lower (roadside)	1
10	92-9850	PANEL - upper (roadside)	1
	55-9698	INSERT - threaded (M6)	A/R
	51-2200	SCREW - panel	A/R

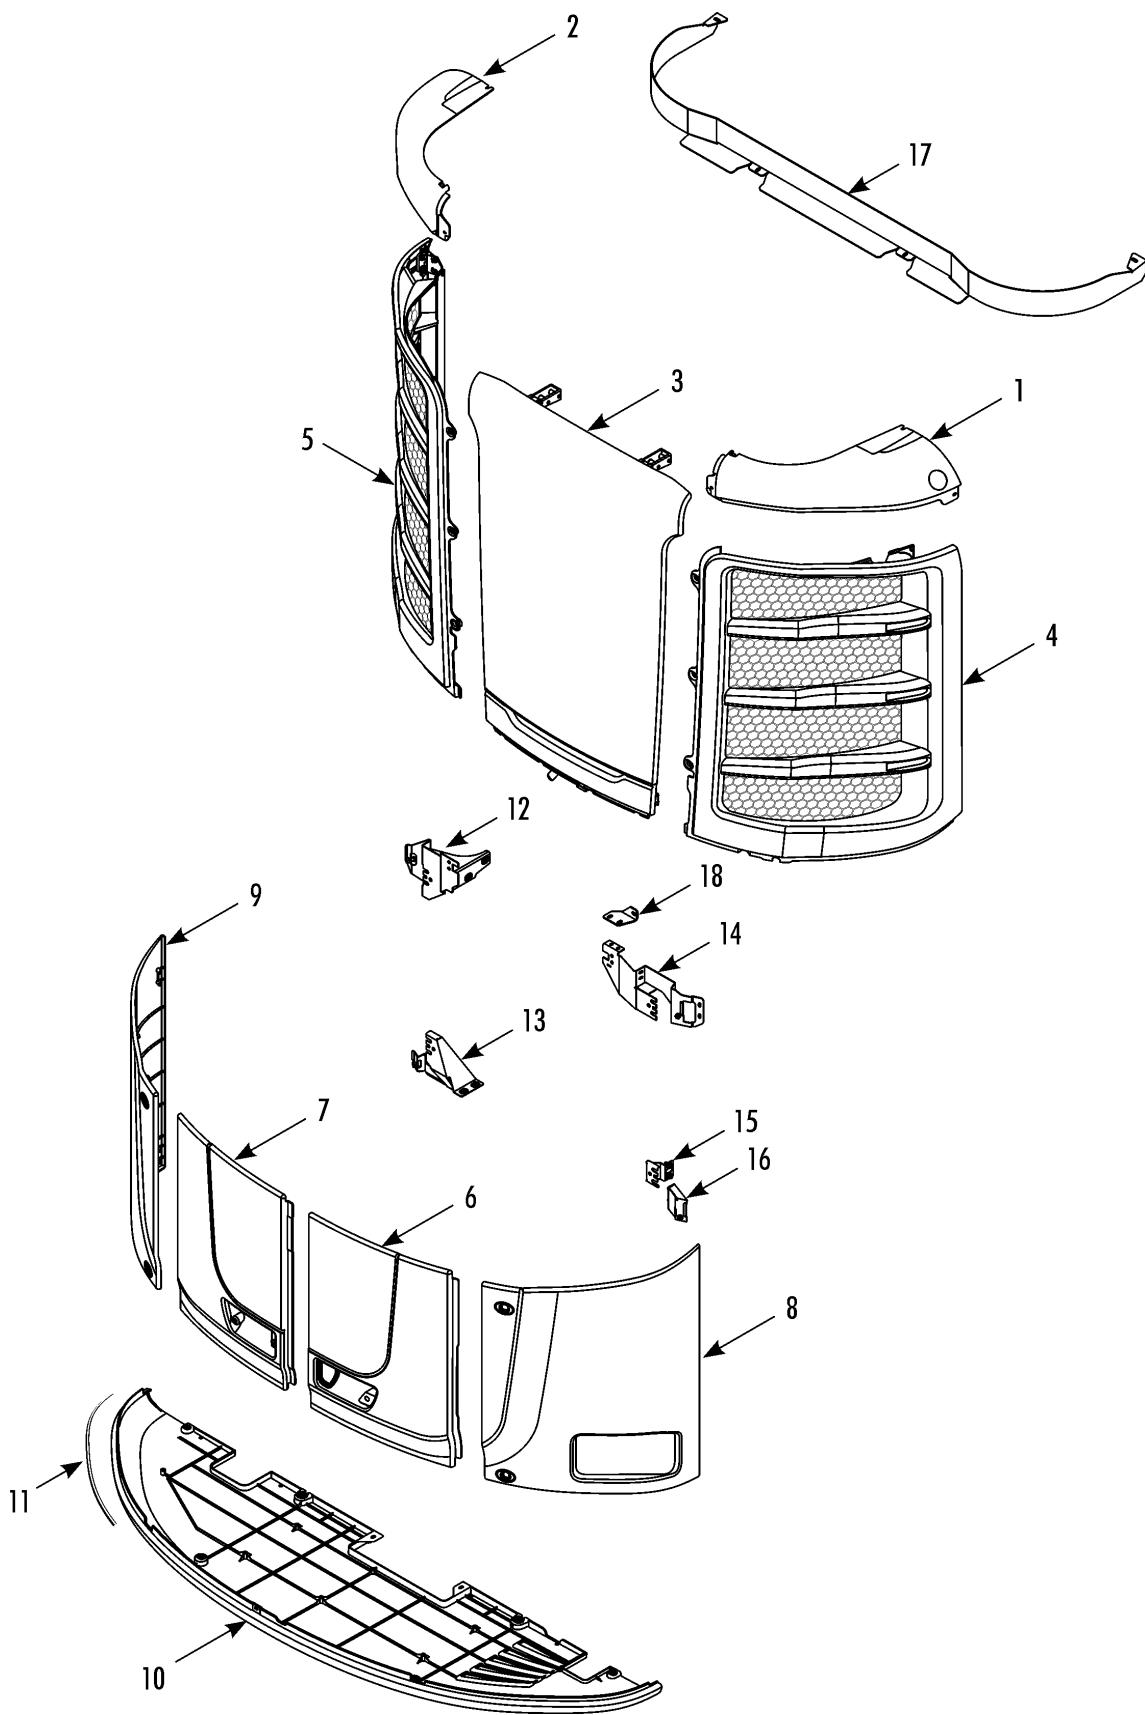


DOORS, GRILLES & PANELS




272E8

Revised
02/05/14


REF	PART NO.	DESCRIPTION	QTY
1	98-8966	FASCIA - top (roadside)	1
2	98-8967	FASCIA - top (curbside)	1
	51-2758	SCREW - fascia	15
3	98-9116	DOOR - top (see 261C0)	1
4	98-9117	GRILLE - condenser (roadside, see 261D1)	1
5	98-9118	GRILLE - condenser (curbside, see 261D1)	1
6	98-9120	DOOR - roadside (see 261D3)	1
7	98-9121	DOOR - curbside (see 261D3)	1
8	98-9122	PANEL - roadside (see 261D5)	1
9	98-9123	PANEL - curbside (see 261D5)	1
10	93-1224	PAN - bottom	1
	51-2758	SCREW - pan	15
11	33-5063	GASKET - door seal (25 ft, cut to length)	1
12	93-1487	BRACKET - door (curbside upper)	1
13	92-9677	BRACKET - door (curbside lower)	1
14	93-1488	BRACKET - door (roadside upper)	1
15	92-9678	BRACKET - door (roadside lower)	1
16	92-9679	BRACKET - panel (roadside lower)	1
	51-2264	*INSERT - threaded (M6)	A/R
	51-2758	SCREW - brackets	A/R
17	98-9183	FAIRING - top	1
	51-2759	SCREW - fairing (20 mm)	2
	51-2760	SCREW - fairing (25 mm)	2
18	93-1489	BRACKET - door (upper roadside)	1
	51-2758	SCREW - bracket	2

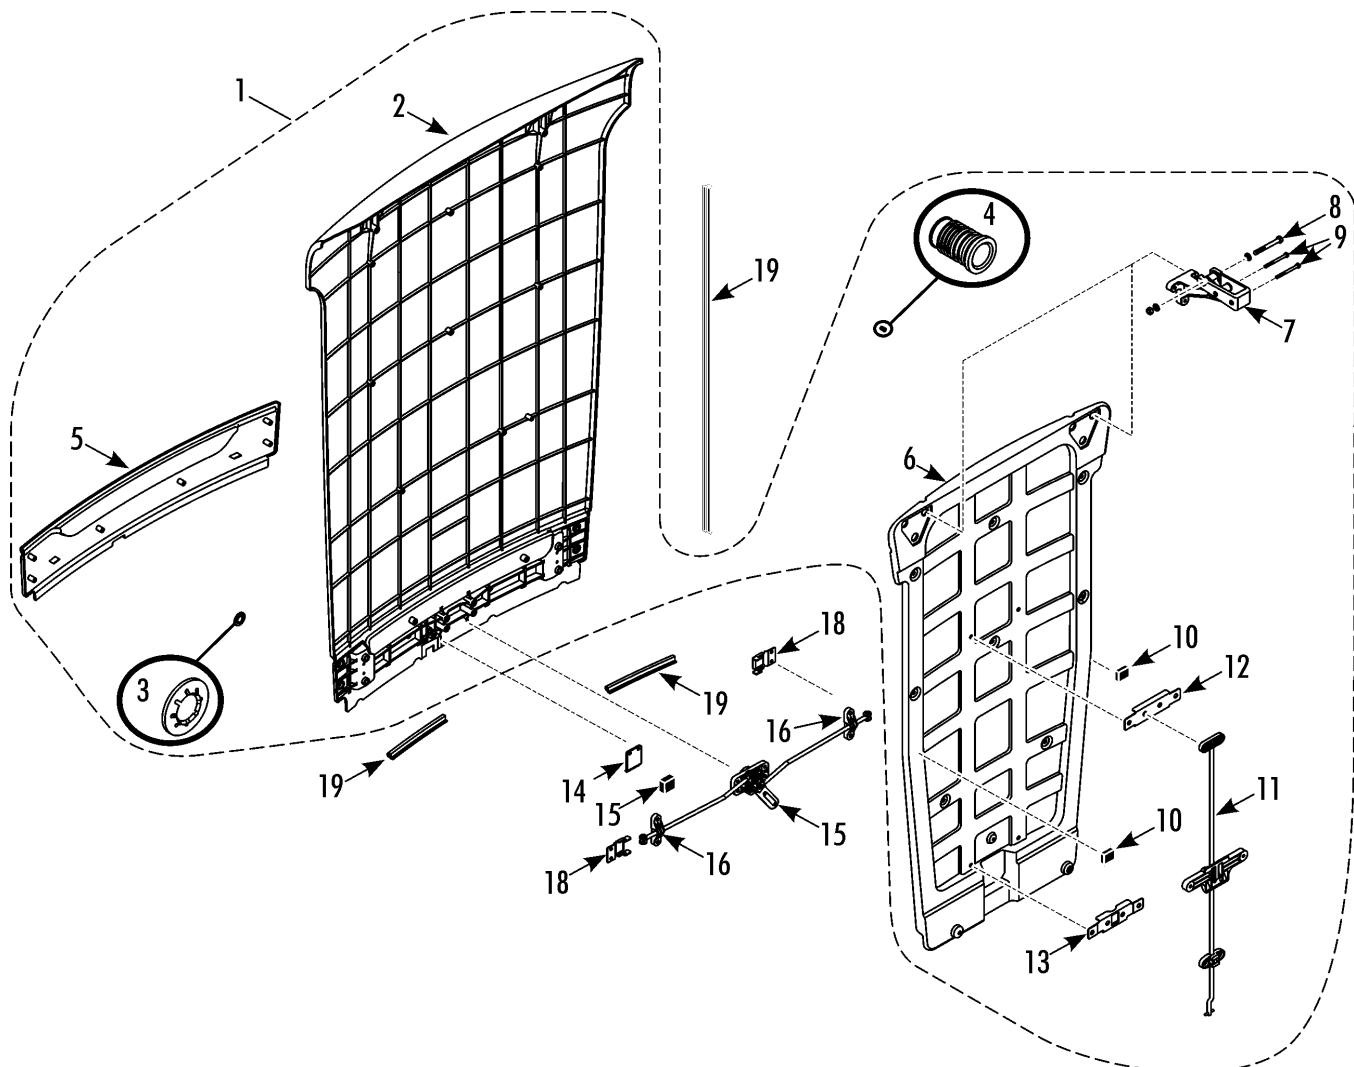


REF	PART NO.	DESCRIPTION	QTY
	98-9116	DOOR - top (complete assembly)	1
	93-855	DOOR - top (complete assembly, w/ chrome center band)	1
1	93-1393	*SKIN - top door (white, include items 2 & 3)	1
	93-1394	*SKIN - top door (black, include items 2 & 3)	1
2	51-2809	**INSERT - threaded	22
3	51-2810	**CLIP - center band	6
4	93-1395	*PANEL - reinforcement (top)	1
	51-2758	*SCREW - panel	10
5	93-285	*HINGE - door (top)	2
	51-2758	*SCREW - hinge to door	6
6	55-6764	*SCREW - pivot (M8)	2
	55-7069	*FLATWASHER	4
	55-7006	*NUT	2
7	55-6209	*SCREW - hinge to frame (M6)	4
	55-7075	*FLATWASHER	8
	55-7007	*NUT	4
8	33-5151	*BUMPER - door	2
9	93-558	*ROD - prop	1
10	93-1396	*BAND - center	1
	93-1397	*BAND - center (chrome)	1
11	93-1493	BRACKET - latch (mounts to frame)	2
	51-2758	SCREW - bracket	4
12	93-1392	BRACKET - latch (front door)	1
13	93-542	LATCH - top door	1
14	93-543	BRACKET - latch (latch rod)	2
15	33-5063	GASKET - door seal (25 ft, cut to length)	A/R
16	33-5212	BUMPER - door latch	1

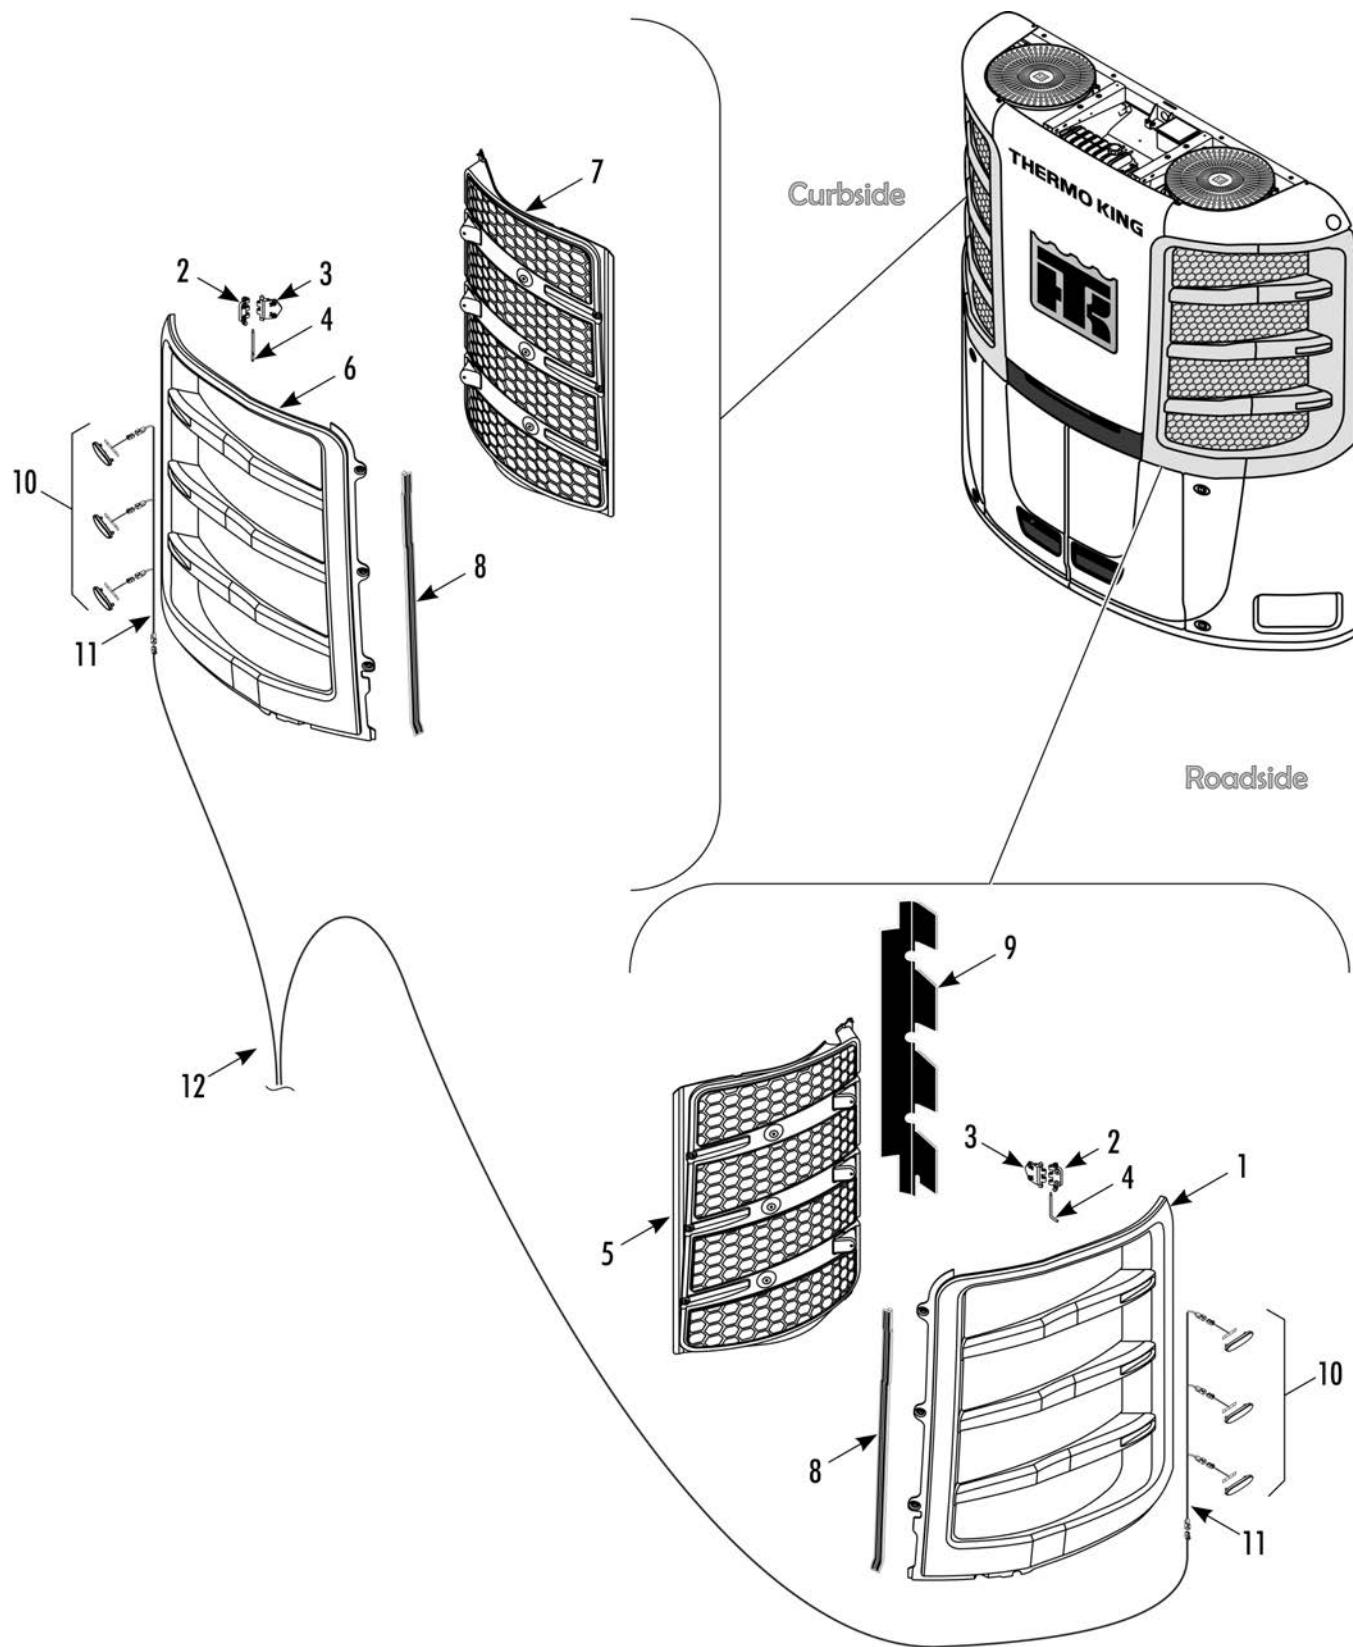


REF	PART NO.	DESCRIPTION	QTY
1	98-9117	GRILLE - roadside (black, inc hinges, item 2)	1
	93-853	GRILLE - roadside (chrome, inc hinges, item 2)	1
2	93-292	*HINGE - grille	2
	51-2758	*SCREW - hinge	4
3	93-293	HINGE - frame	4
4	93-294	PIN - hinge	4
5	98-9171	INSERT - grille mesh (roadside)	1
	51-2809	INSERT - threaded (M6)	13
	51-2758	SCREW - insert	13
6	98-9118	GRILLE - curbside (black, inc hinges, item 2)	1
	93-854	GRILLE - curbside (chrome, inc hinges, item 2)	1
7	98-9119	INSERT - grille mesh (curbside)	1
	51-2758	SCREW - insert	13
	51-2809	INSERT - threaded (M6)	13
8	33-5063	GASKET - door seal (25 ft, cut to length)	A/R
9	33-5129	INSULATION - muffler	1
10	42-859	LED (optional)	6
11	45-2505	HARNESS - LED (optional)	2
12	42-1436	HARNESS - LED extension (optional)	1
	41-3074	HOLDER - fuse	1
	41-4551	FUSE - 5 amp	1
	41-124	TERMINAL - splice	1

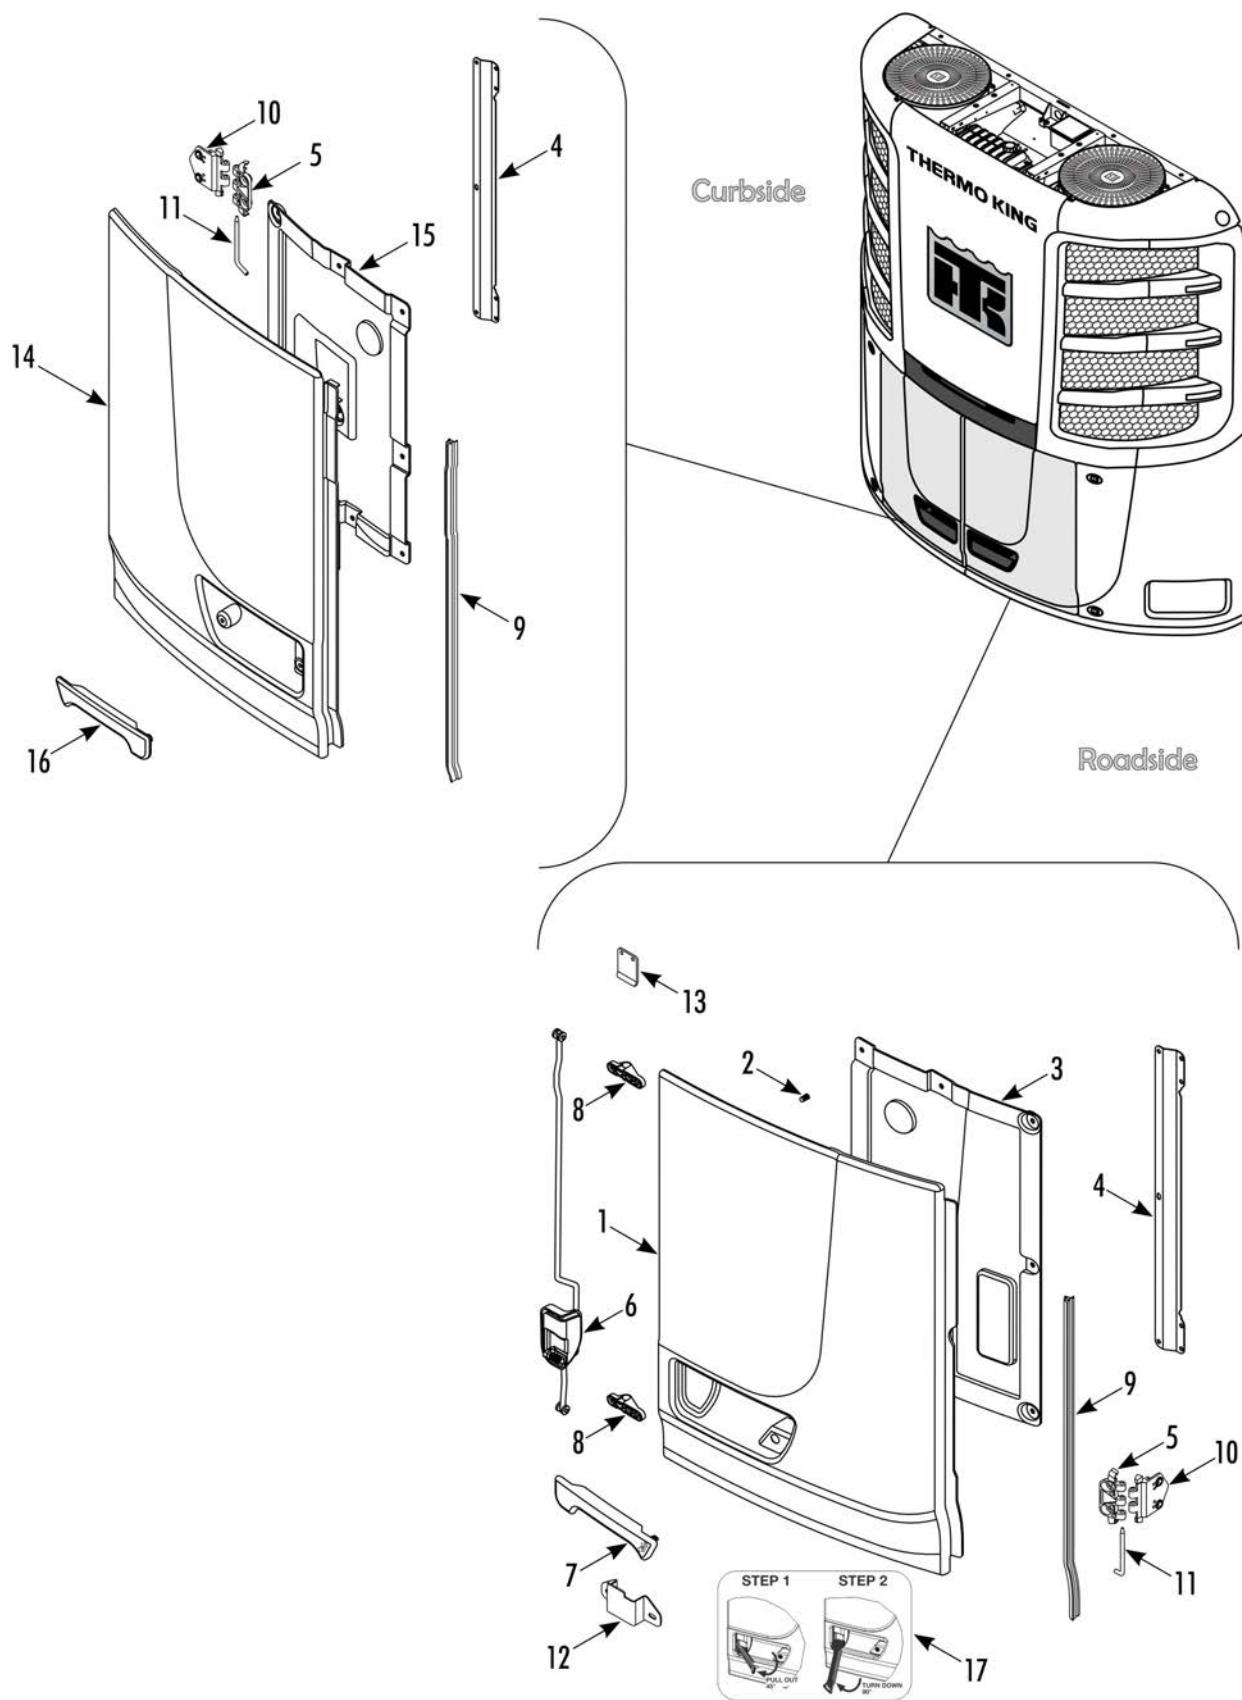

REF	PART NO.	DESCRIPTION	QTY
	98-9120	DOOR - roadside (incl latch and hinges item 3)	1
1	93-1399	*SKIN - door (roadside, white)	1
	93-1400	*SKIN - door (roadside, black)	1
2	51-2809	**INSERT - threaded	A/R
3	93-1401	*PANEL - reinforcement	1
4	93-1405	*STRAP - door stiffener	1
	51-2758	*SCREW - strap & panel	A/R
5	93-295	*HINGE - door (two per door)	2
	55-4666	*SCREW - hinge	4
6	93-304	*LATCH - roadside door (S-600/700 C-600)	1
7	93-949	**HANDLE - latch	1
8	93-303	*BRACKET - door latch	2
	51-2758	*SCREW - bracket	4
	93-1708	PLATE	1
9	33-5063	GASKET - door seal (25 ft, cut to length)	A/R
10	93-1080	HINGE - frame (w/ M6 nuts)	4
	51-2758	SCREW - hinge	16
	51-2599	WASHER - special	8
11	93-294	PIN - hinge	4
12	93-1374	BRACKET - lower	1
13	93-1392	BRACKET - upper	1
14	98-9121	DOOR - curbside	1
	93-1402	*DOOR - curbside (paintable)	1
	93-1403	*DOOR - curbside (black)	1
15	93-1404	*PANEL - reinforcement	1
16	93-296	HANDLE - door (curbside)	1
	51-2758	SCREW - handle	2
17	93-1183	NAMEPLATE - Door Handle (black graphics)	1
	93-1376	NAMEPLATE - Door Handle (white graphics)	1
	93-1080	HINGE, SIDE FRAME	2

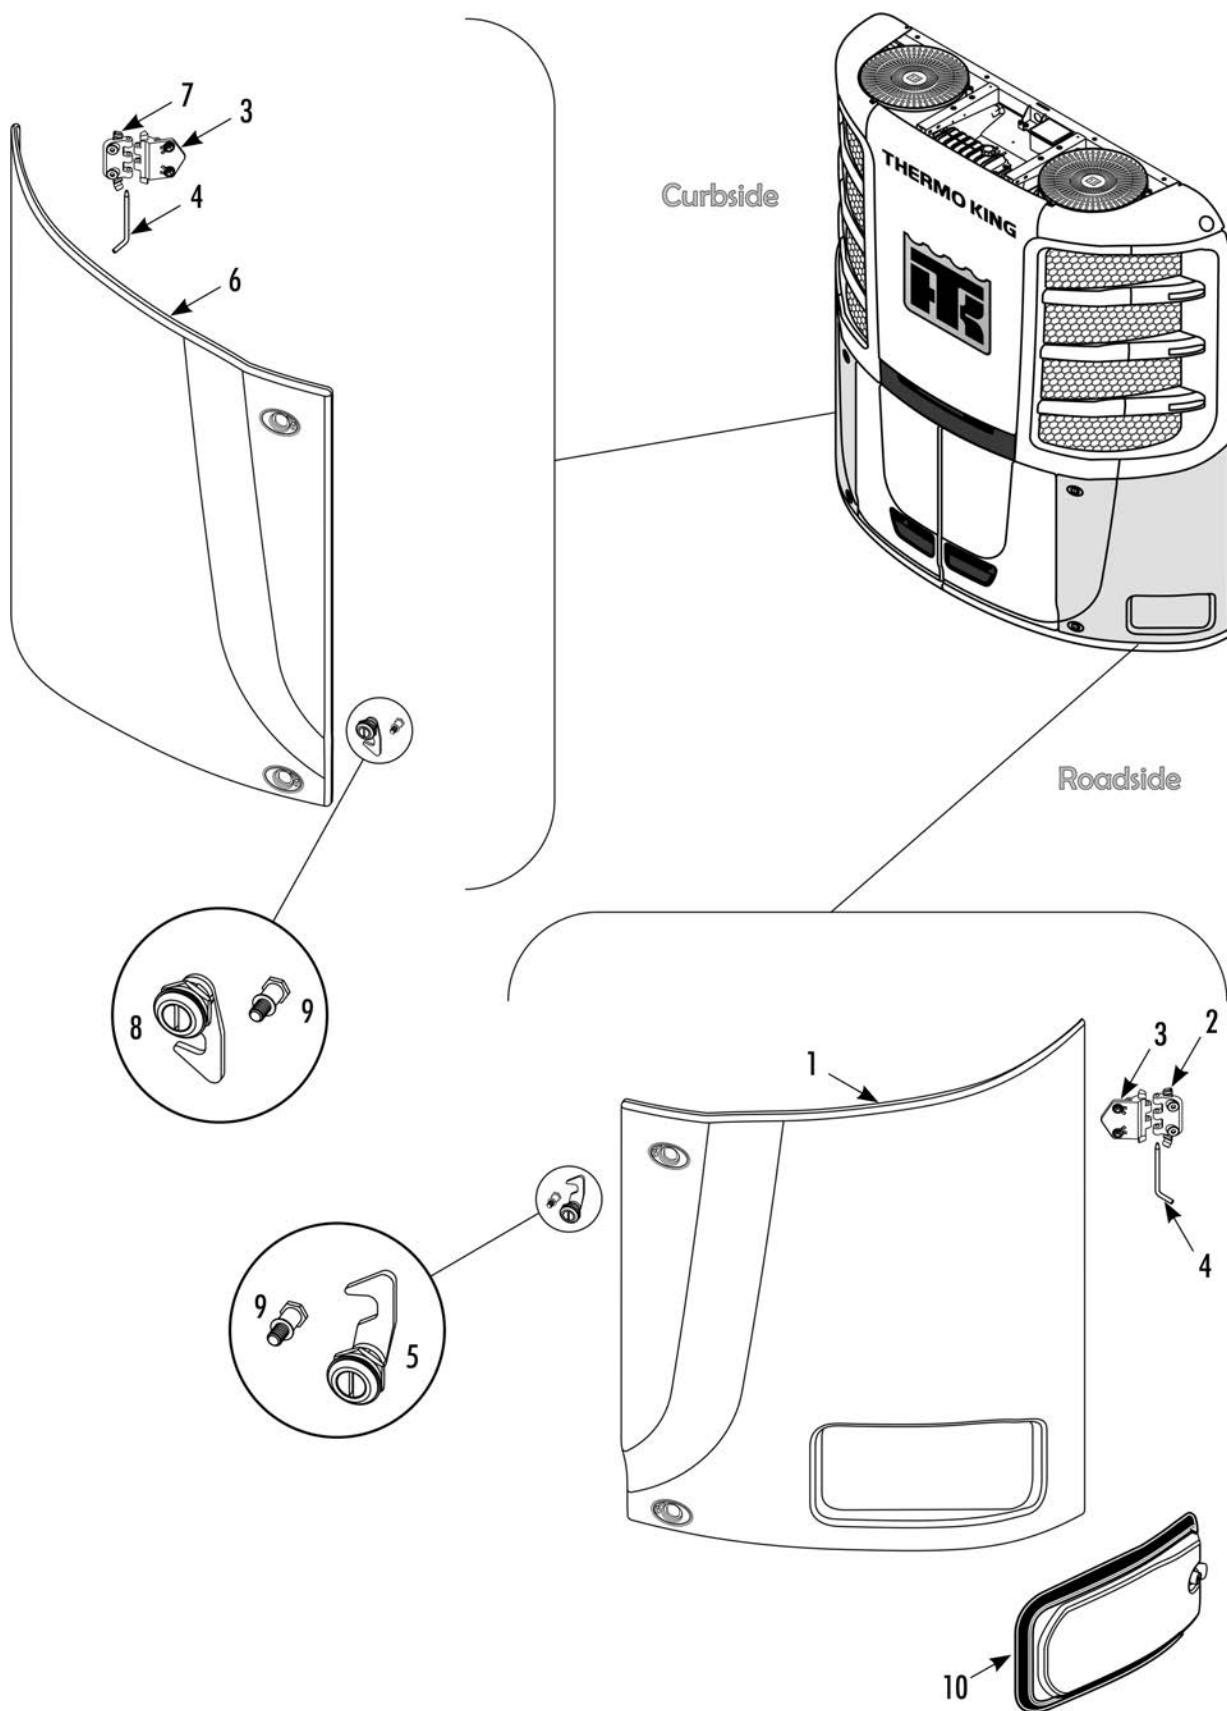

REF	PART NO.	DESCRIPTION	QTY
1	98-9122	PANEL - roadside (control panel, incl hinges item 2)	1
	51-2809	*INSERT - threaded (M6)	4
2	93-292	*HINGE - panel	2
3	93-1080	HINGE - frame	4
	51-2758	SCREW - hinge	16
4	93-294	PIN - hinge	4
5	93-309	LATCH - panel (roadside)	2
6	98-9123	PANEL - curbside (incl hinges item 7)	1
	51-2809	*INSERT - threaded (M6)	4
7	93-292	*HINGE - panel	2
8	93-311	LATCH - panel (curbside)	2
9	93-557	STRIKER - latch	4
10	93-310	DOOR - HMI (optional)	1
	55-7407	SCREW - door	6
	55-7033	FLATWASHER	12
	55-7034	NUT	6

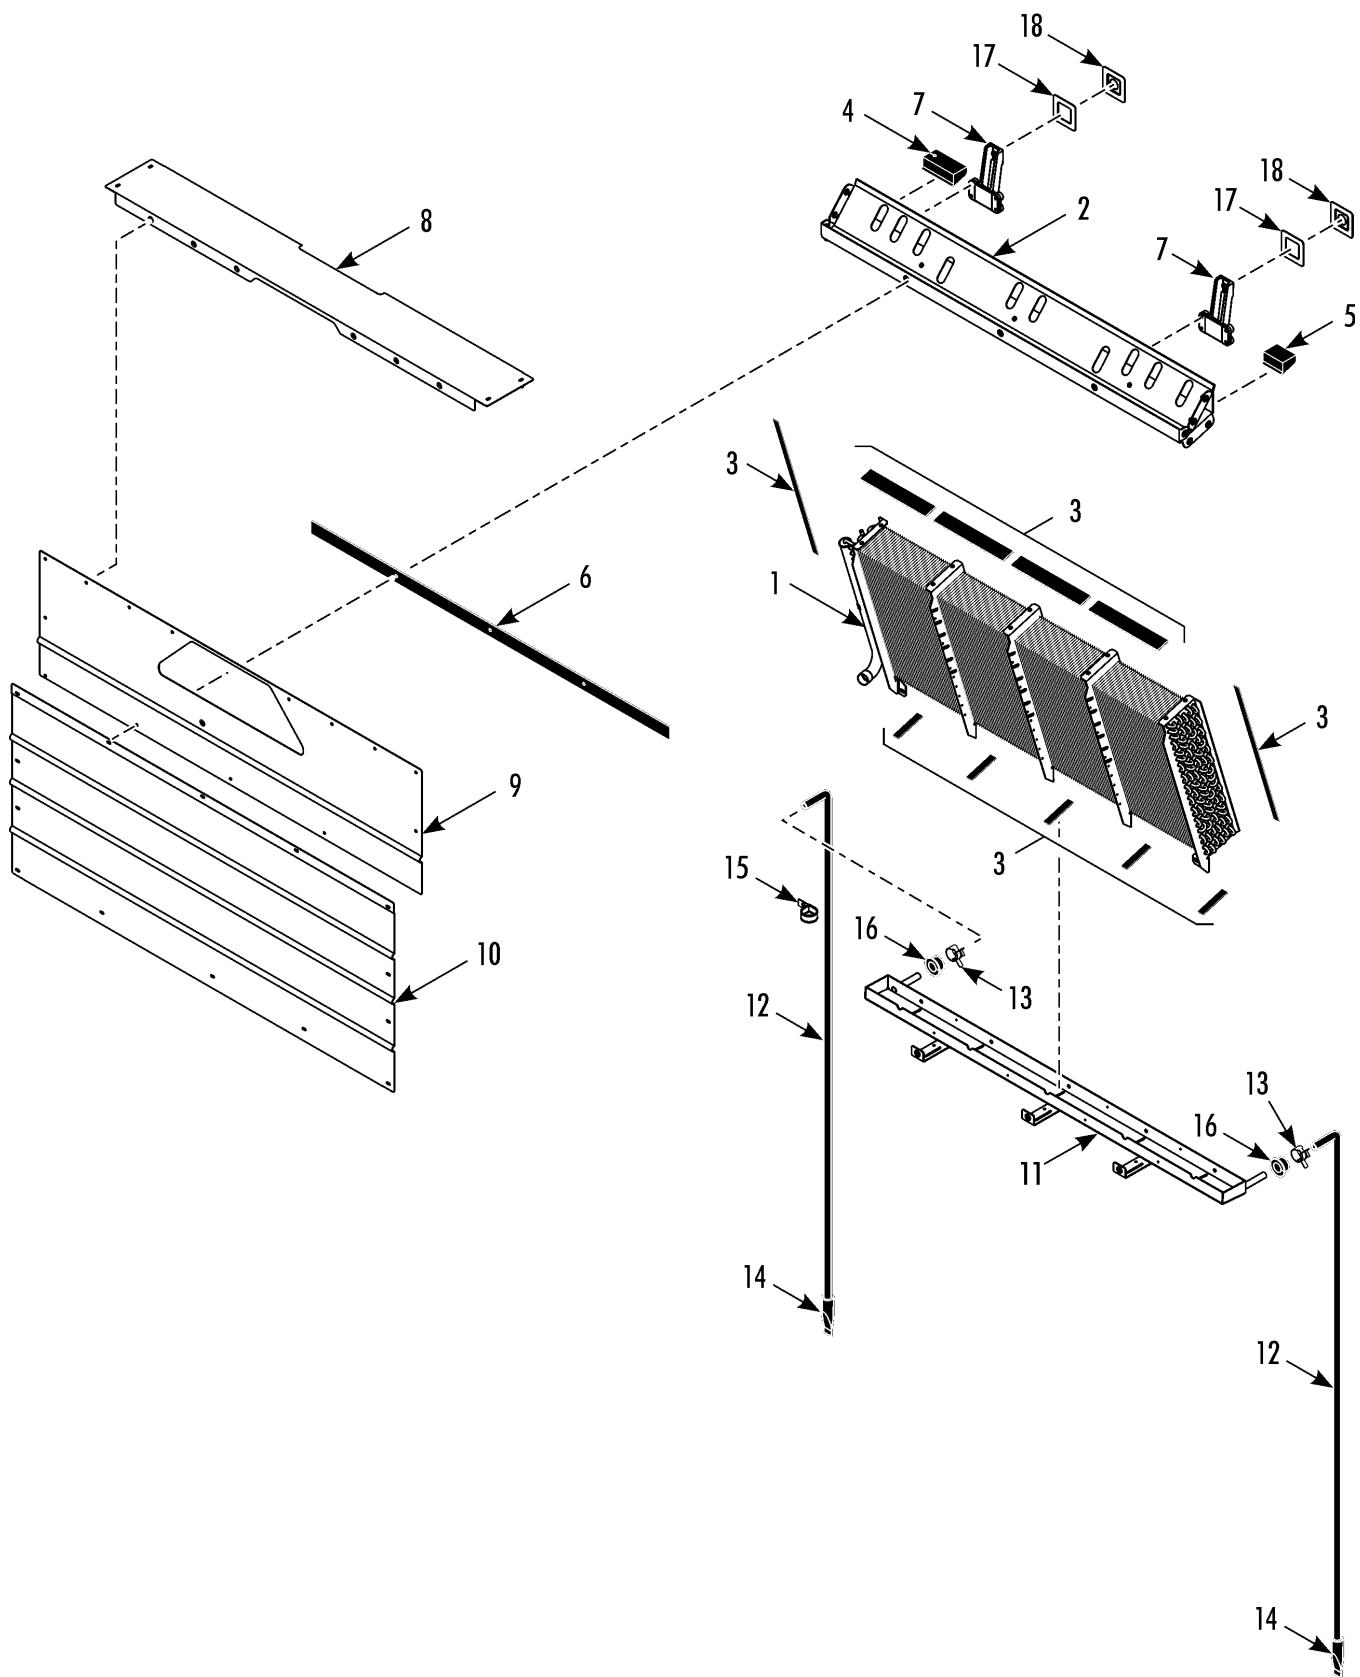


EVAPORATOR AND PANELS

261B1

Revised
01/09/14

REF	PART NO.	DESCRIPTION	QTY
1	67-2727	COIL - evaporator (S-600/C-600, see 261B2)	1
	67-2878	COIL - evaporator (S-700, see 261B2)	1
	55-9698	*INSERT - threaded (M6)	9
	51-2200	SCREW - evaporator	20
	51-953	WASHER	8
2	98-9011	CROSSBEAM - evaporator support (S-600/C-600)	1
	93-1199	CROSSBEAM - evaporator support (S-700)	1
	51-2265	*INSERT - threaded (ss, M6)	10
	55-9698	*INSERT - threaded (brass, M6)	3
	51-2200	SCREW - crossbeam	9
3	99-8562	STRIP - sealing	A/R
4	33-4976	SPACER - foam (roadside)	1
5	33-4977	SPACER - foam (curbside)	1
6	33-4954	STRIP - sealing	1
7	93-1202	SUPPORT - condenser fan motor	2
	55-6987	SCREW - support	8
	55-7342	LOCKWASHER	8
	51-953	WASHER - special	8
8	98-9014	PANEL - top	1
	55-9698	*INSERT - threaded (M6)	6
	51-2200	SCREW - panel	4
9	98-8958	PANEL - upper	1
10	98-8957	PANEL - lower	1
	51-2201	SCREW - panel (25 mm)	22
	51-2200	SCREW - panel (30 mm)	4
11	67-2793	PAN - defrost drain (inc drain pan, tubes & brackets)	1
12	92-1351	HOSE - defrost drain	2
13	13-1148	CLAMP - hose	2
14	66-1273	VALVE - check	2
	55-2330	BANDWRAP	2
	55-1705	CLAMP - valve	2
	55-5660	SCREW - clamp	2
15	55-4552	CLAMP - drain hose	1

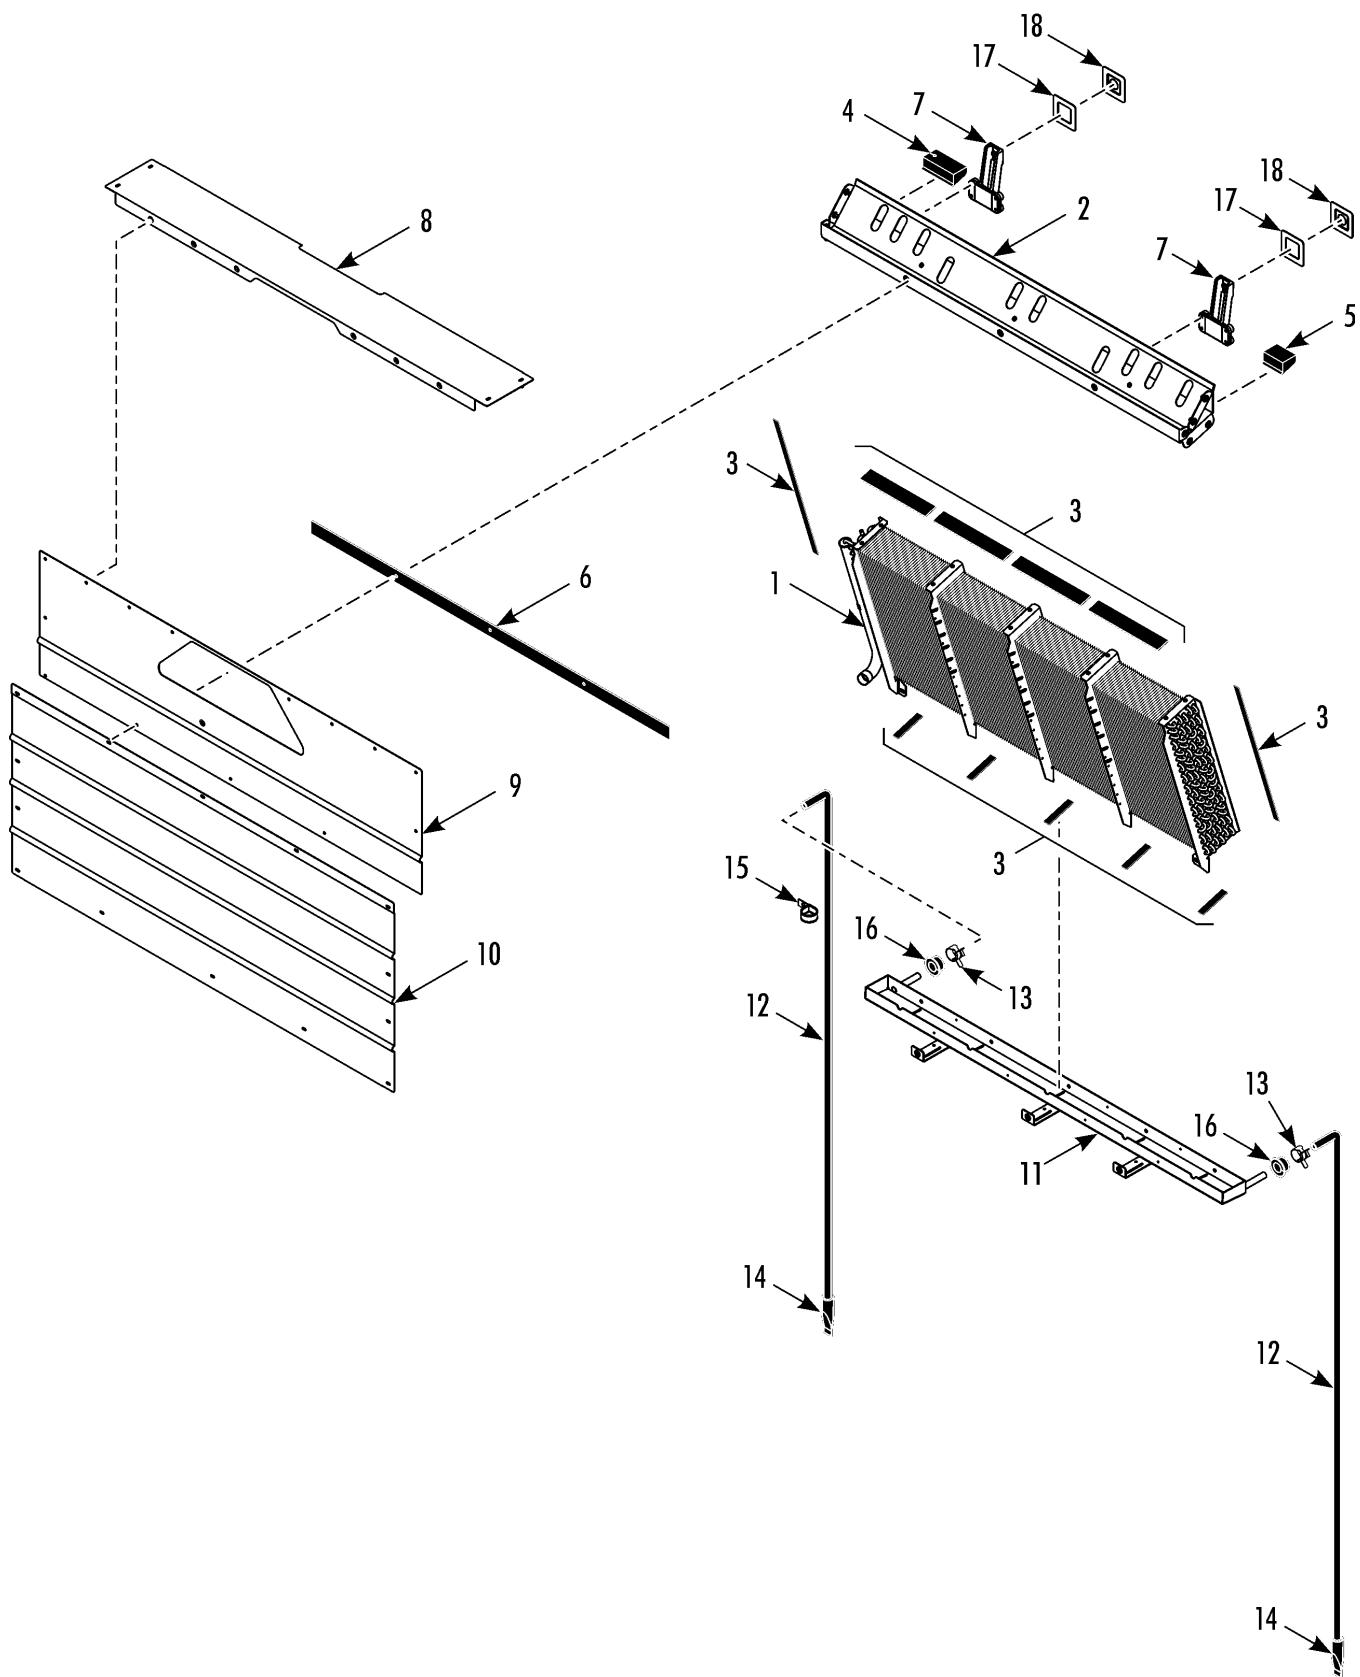

EVAPORATOR AND PANELS



261B1




REF	PART NO.	DESCRIPTION	QTY
	51-2200	SCREW - clamp	1
16	51-2204	BUSHING - drain hose	2
17	33-5057	GASKET - support	2
18	92-9661	PLATE - gasket	2

261C9



**FUEL TANK (22 IN DIAMETER, 50 GALLON
ALUMINUM)**

Revised
10/23/13

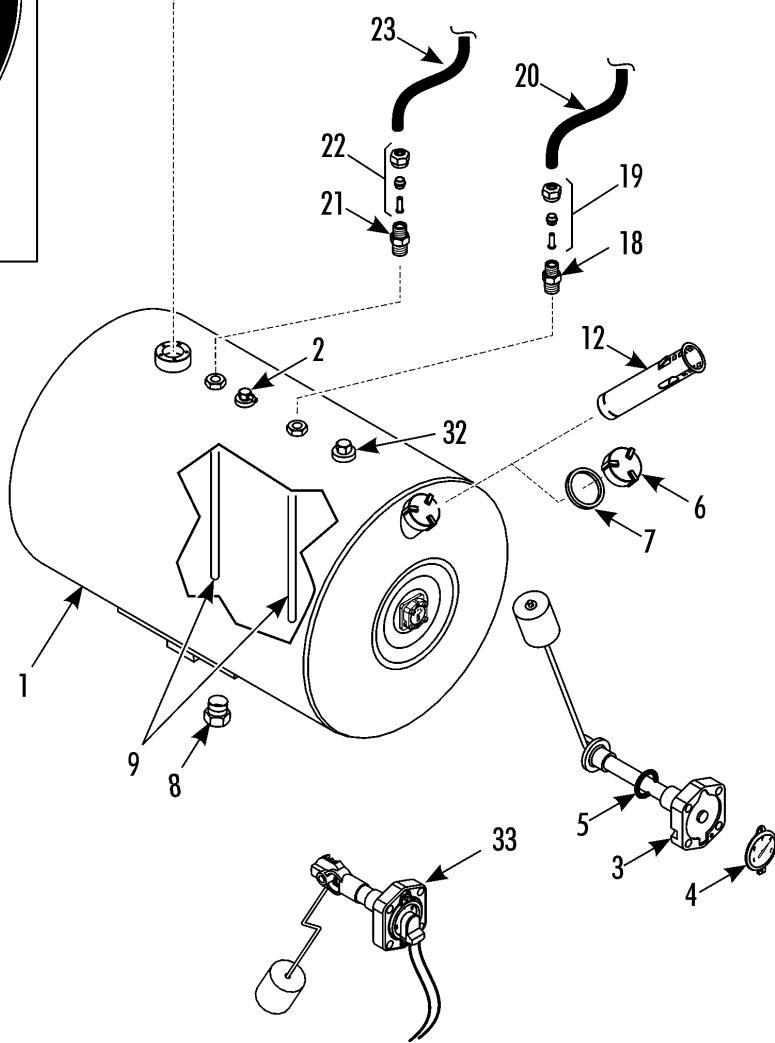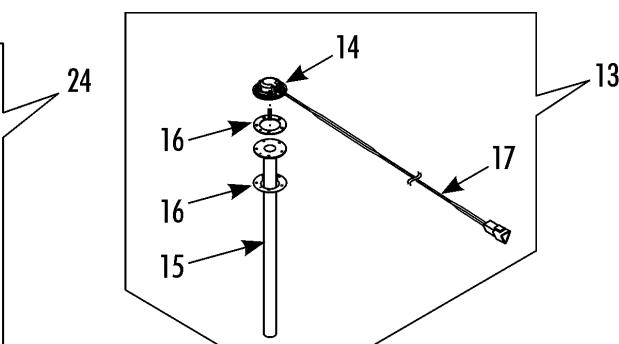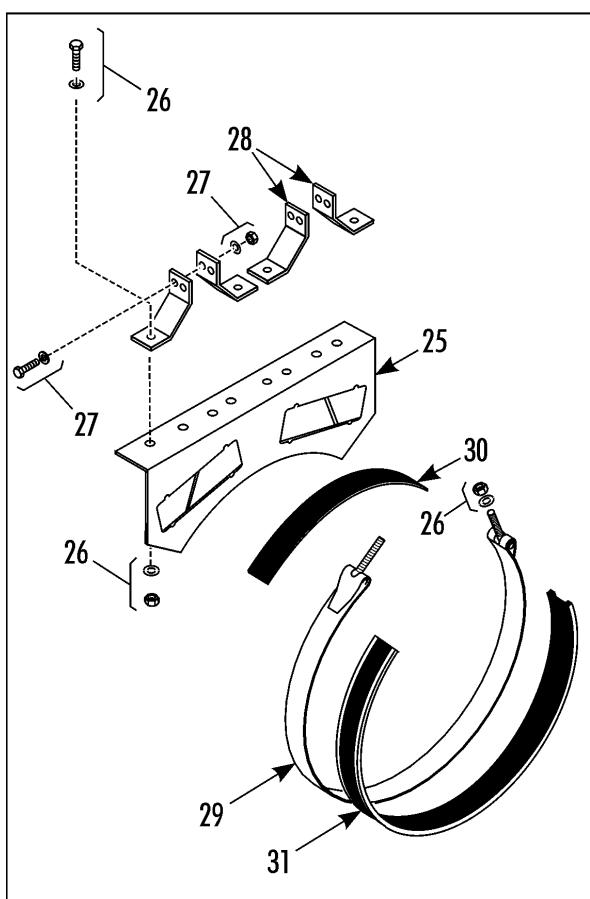

**FUEL TANK (22 IN DIAMETER, 50 GALLON
ALUMINUM)**

Revised
10/23/13



261C9




REF	PART NO.	DESCRIPTION	QTY
1	12-981	TANK - fuel (50 gallon, w/ ultra-sonic fuel level sensor - USFLS & anti-siphon)	1
	12-982	TANK - fuel (50 gallon, USFLS & heat chamber)	1
	12-983	TANK - fuel (50 gallon, USFLS)	1
	12-984	TANK - fuel (50 gallon, USFLS, polished)	1
	12-1011	TANK - fuel (50 gallon, USFLS ready, four ports, inc item 32)	1
2	55-5617	*VENT	1
3	11-2501	*GAUGE - fuel (mechanical)	1
4	11-5450	**DIAL - fuel gauge	1
5	33-4818	**O-RING - fuel gauge	1
6	11-7984	*CAP - fuel	1
7	33-381	**GASKET - cap	1
8	13-1289	*DRAIN	1
9	13-1288	*TUBE - pickup	2
10	11-9741	*COVER - fuel tank	1
11	33-3878	*GASKET - cover	1
	55-1230	*SCREW - USFLS (1-1/2 in lg)	5
	55-736	*SCREW - cover (1/2 in lg)	5
	55-1511	*FLATWASHER	5
	55-431	*LOCKWASHER	5
12	13-1290	ANTI-SIPHON	1
13	40-1128	KIT - ultrasonic fuel level sensor (22 inch tank)	1
14	41-9250	*SENSOR - fuel level (ultrasonic)	1
15	92-8161	*TUBE - sensor (ultrasonic)	1
16	33-4589	*GASKET - sensor tube	2
17	41-9722	*CABLE - fuel level sensor	1
18	13-1231	CONNECTOR - hose fitting (1/4)	1
19	10-243	KIT - sleeve & eyelet (1/4)	1
	11-4841	NUT (1/4)	1
20	11-4367	HOSE (1/4 od x 35 ft lg)	1
21	11-8982	FITTING - fuel line (3/8)	1
22	10-242	KIT - sleeve & eyelet (3/8)	1
	11-4941	NUT (3/8)	1
23	11-4372	HOSE (3/8 od x 35 ft lg)	1

261C9



**FUEL TANK (22 IN DIAMETER, 50 GALLON
ALUMINUM)**

Revised
10/23/13

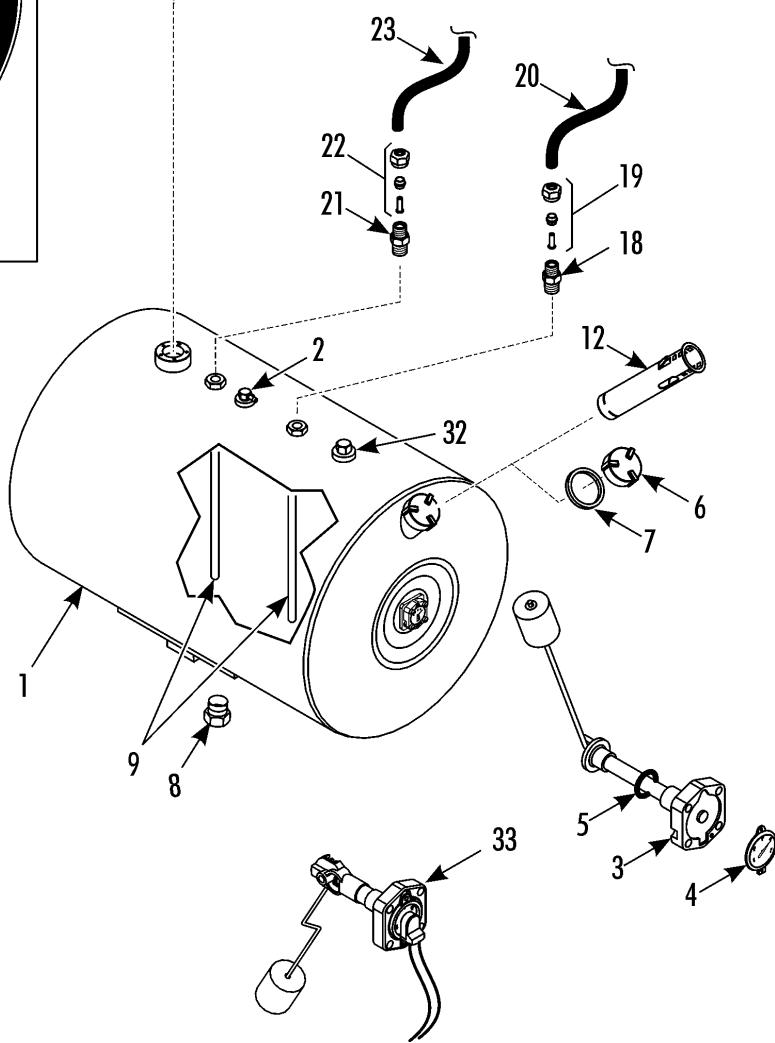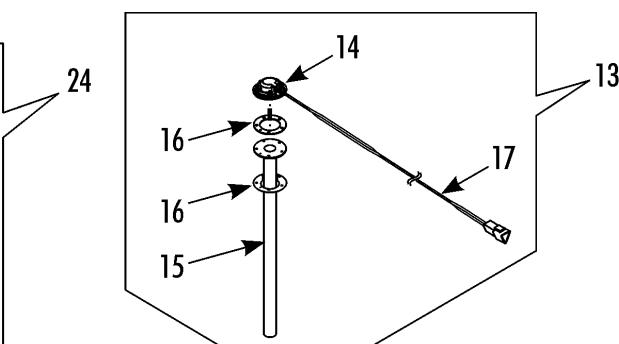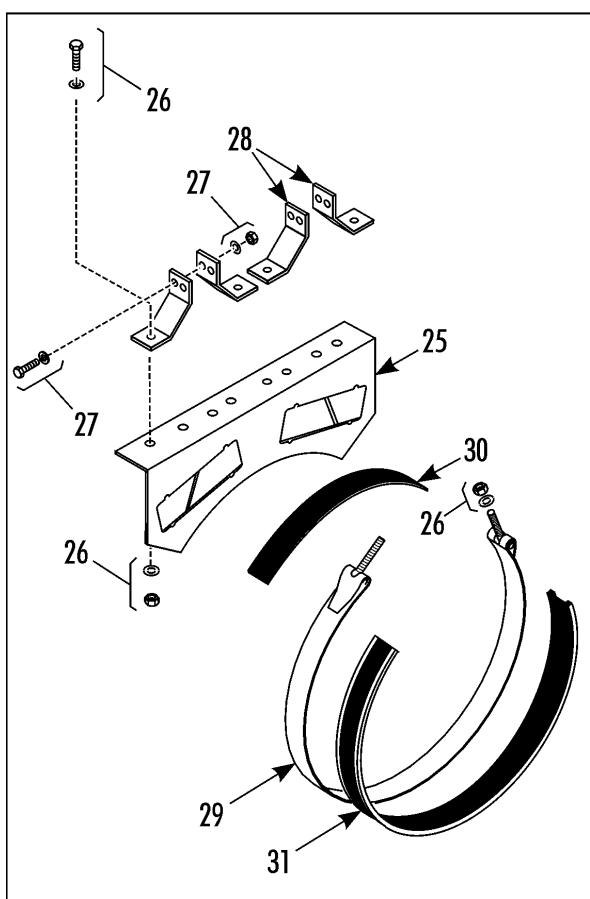

FUEL TANK (22 IN DIAMETER, 50 GALLON
ALUMINUM)




261C9

REF	PART NO.	DESCRIPTION	QTY
24	90-398	KIT - fuel tank	1
25	98-8096	*HANGER - fuel tank	2
26	55-1670	*SCREW (1/2-13 x 1-3/4)	8
	55-5270	*FLATWASHER (1/2)	20
	55-3686	*NUT (1/2-13)	12
27	55-1469	*SCREW (3/8-16 x 1-1/2)	12
	55-402	*FLATWASHER (3/8)	20
	55-5078	*NUT (3/8-16)	12
28	98-8095	*BRACKET - hanger	8
29	98-2687	*STRAP & TEE - assembly	2
30	33-4479	*STRIP - chafing (4 in lg)	2
31	33-4478	*STRIP - chafing (67 in lg)	2
32	55-4761	PLUG - four port tank (optional)	1
33	13-1632	GAUGE - fuel (twin site, optional)	1

267F7 

FUEL TANK (22 IN DIAMETER, 75, 110 & 120 GALLON ALUMINUM)

Revised
04/10/13

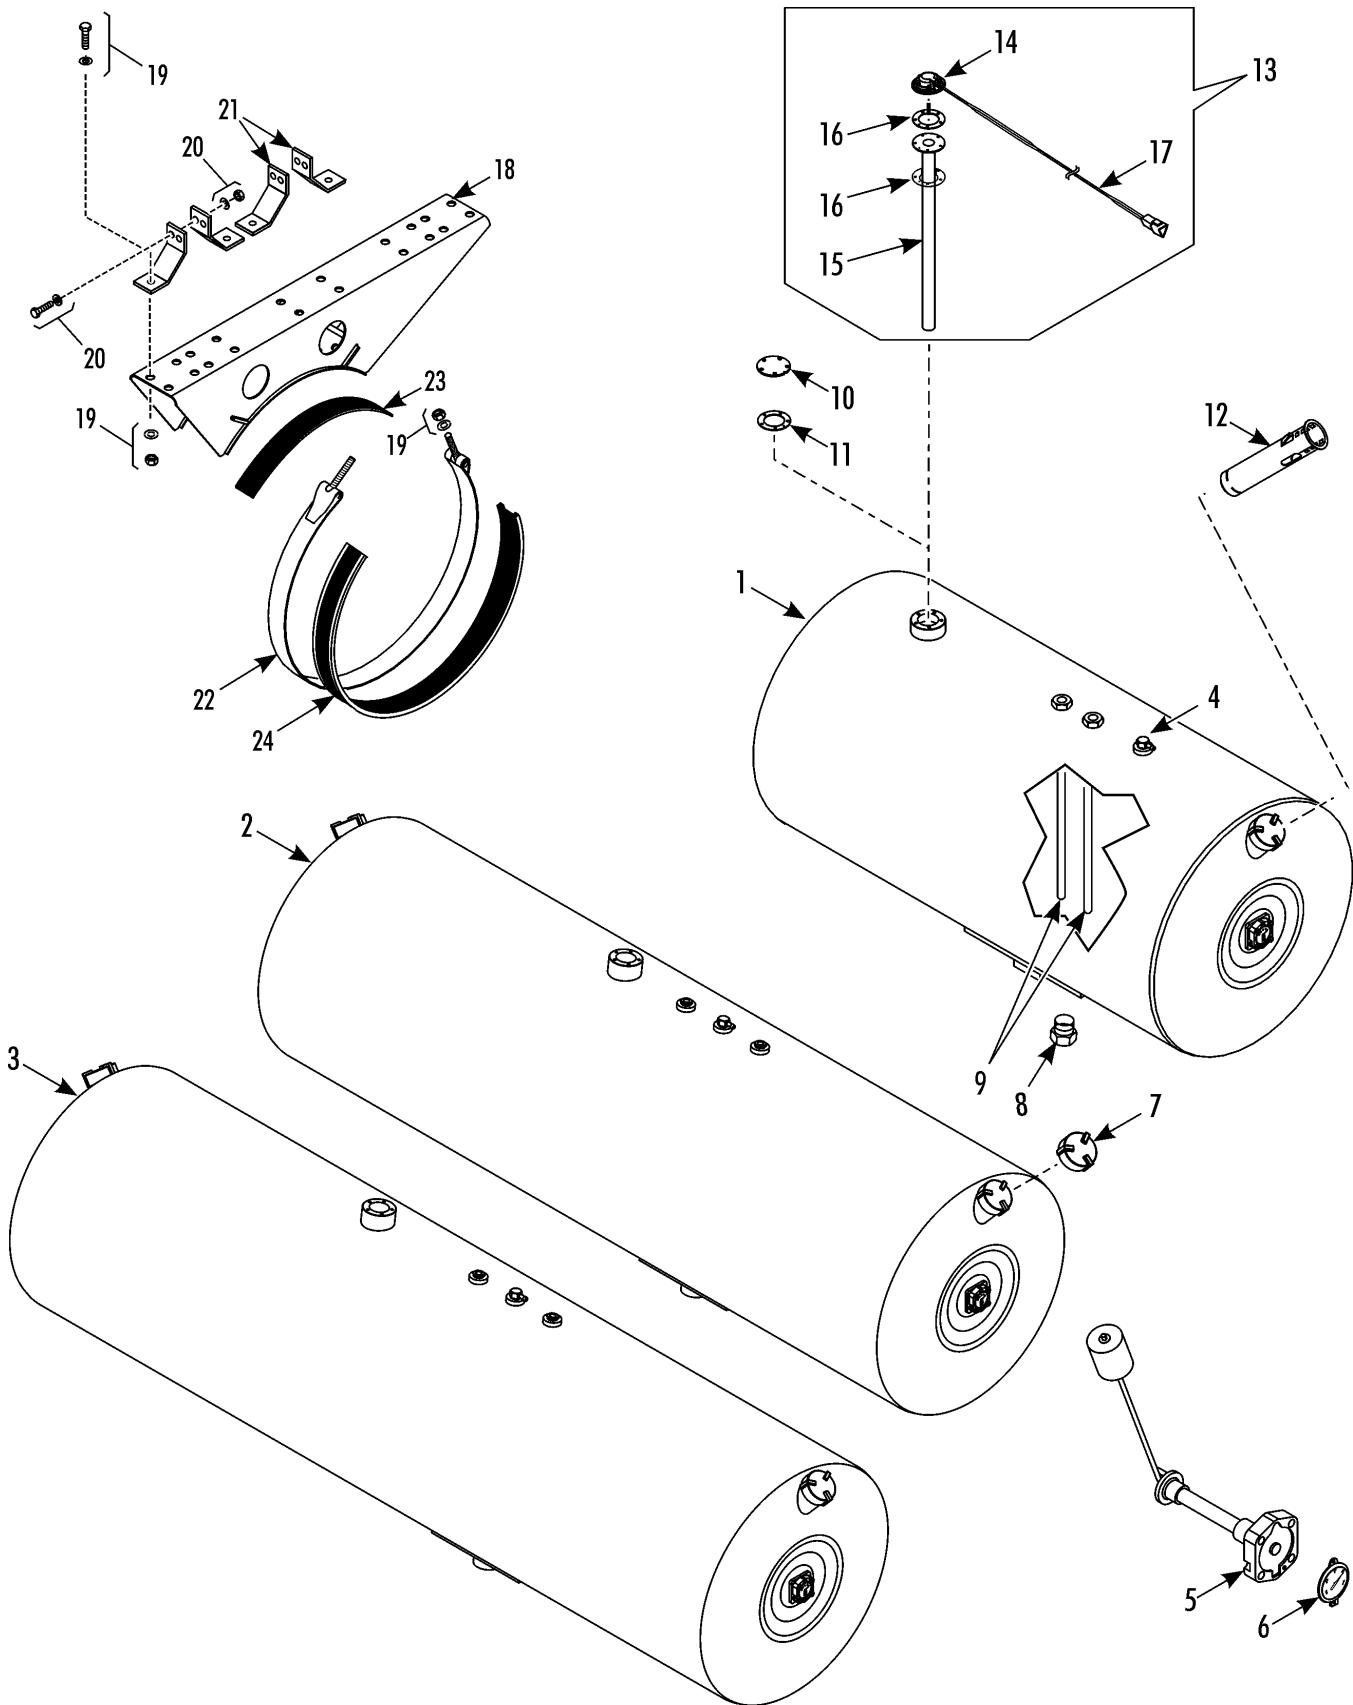

**FUEL TANK (22 IN DIAMETER, 75, 110 & 120
GALLON ALUMINUM)**

Revised
04/10/13







267F7

REF	PART NO.	DESCRIPTION	QTY
1	12-1004	TANK - fuel (75 gallon, w/ ultra-sonic fuel level sensor - USFLS)	1
2	12-1005	TANK - fuel (110 gallon, dual fuel caps and gauges w/ USFLS)	1
3	12-1006	TANK - fuel (120 gallon, dual fuel caps and gauges w/ USFLS)	1
4	55-5617	*VENT	1
5	11-2501	*GAUGE - fuel (mechanical)	1
6	11-5450	**DIAL - fuel gauge	1
	33-4818	**O-RING - fuel gauge	1
7	11-7984	*CAP - fuel	1
	33-381	**GASKET - cap	1
8	13-1289	*DRAIN	1
9	13-1288	*TUBE - pickup	2
10	11-9741	COVER - fuel tank	1
11	33-3878	GASKET - cover	1
	55-1260	SCREW - cover	5
	55-1511	FLATWASHER	5
	55-431	LOCKWASHER	5
12	11-9631	ANTI-SIPHON (optional)	1
13	40-1128	KIT - ultrasonic fuel level sensor (22 inch tank)	1
14	41-9250	*SENSOR - fuel level (ultrasonic)	1
15	92-8161	*TUBE - sensor (ultrasonic)	1
16	33-4589	*GASKET - sensor tube	2
17	41-9722	*CABLE - fuel level sensor	1
18	98-2685	HANGER - fuel tank	2
19	55-1670	SCREW (1/2-13 x 1-3/4)	24
	55-5270	FLATWASHER (1/2)	48
	55-3686	NUT (1/2-13)	24
20	55-1469	SCREW (3/8-16 x 1-1/2)	24
	55-5078	NUT (3/8-16)	24
21	99-7833	BRACKET - hanger	12
22	98-2687	STRAP & TEE - assembly	2
23	33-4877	STRIP - chafing (4 in lg)	2
24	33-4478	STRIP - chafing (67 in lg)	2

268D3 

FUEL TANK (120/156 GALLON ALUMINUM)

Revised
03/15/13

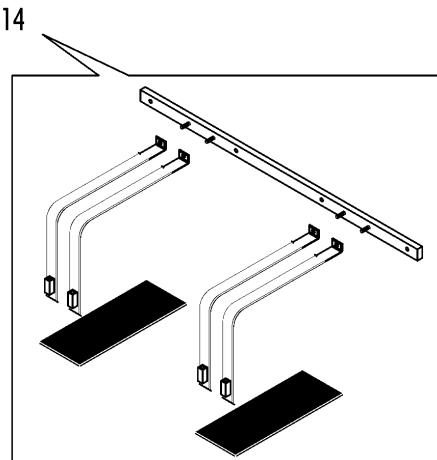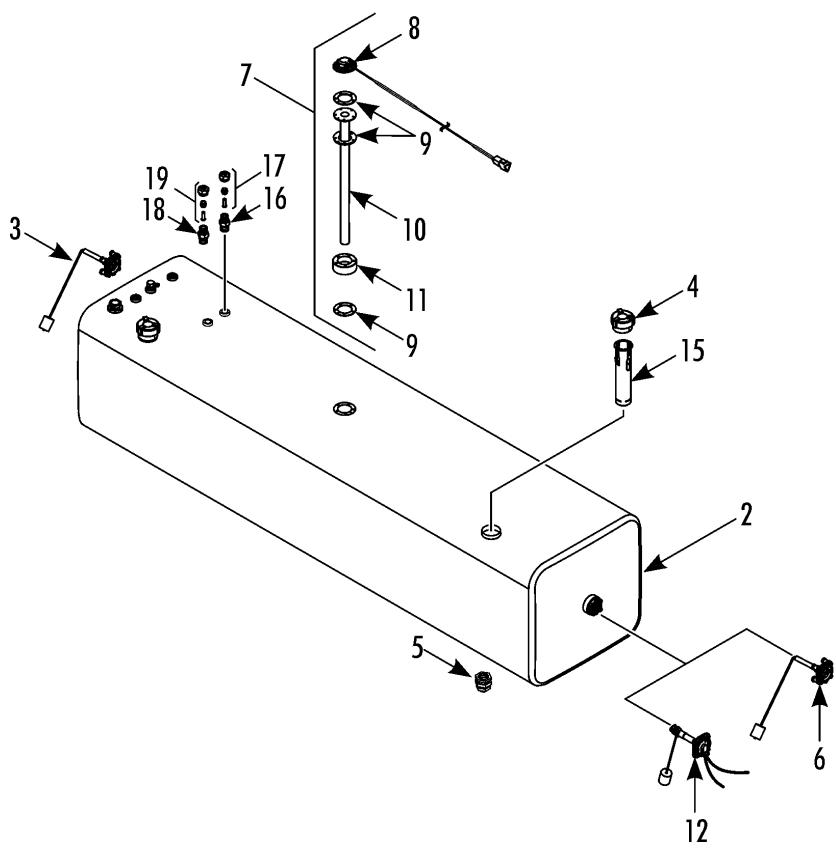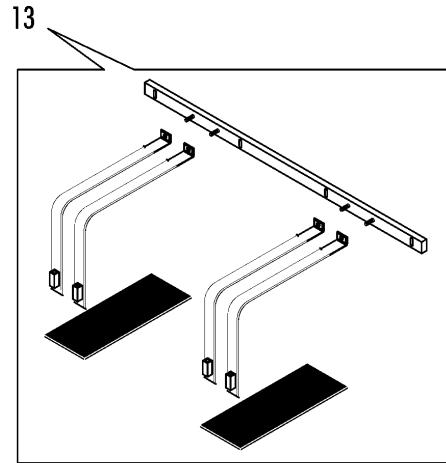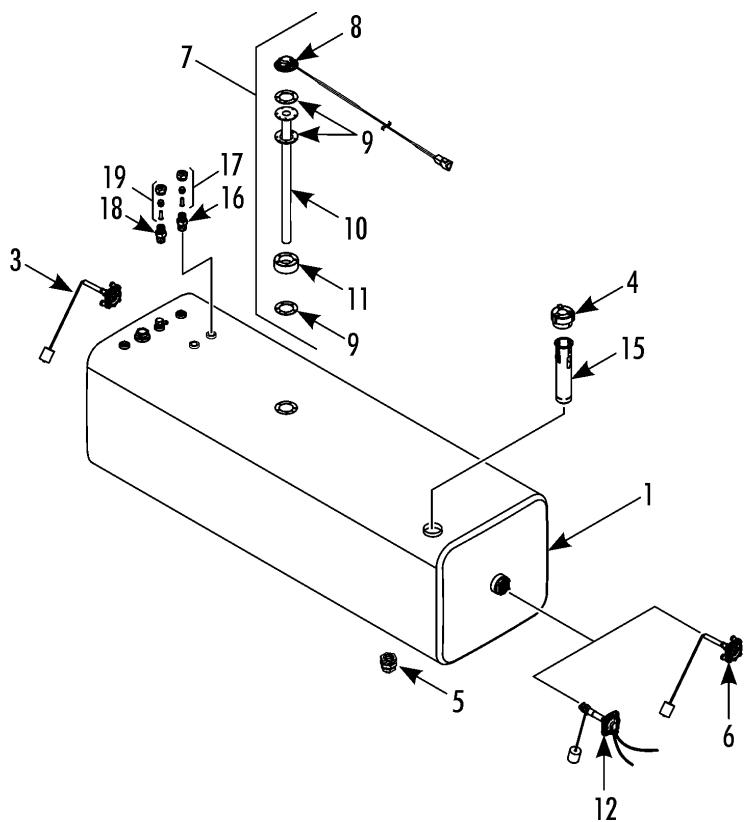

FUEL TANK (120/156 GALLON ALUMINUM)

Revised
03/15/13




268D3

REF	PART NO.	DESCRIPTION	QTY
1	12-1001	TANK - fuel al (120 gal, inc items 3-6)	1
2	12-999	TANK - fuel al (156 gal, inc items 3-6)	1
3	11-2501	*GAUGE - fuel (mechanical)	1
	11-5450	**DIAL - fuel gauge	1
	33-4818	**O-RING - gauge	1
4	11-7984	*CAP - fuel tank	1
5	13-1289	*PLUG - drain	1
6	13-1137	*GAUGE - fuel	1
	11-5450	**DIAL - fuel gauge	1
	33-4818	**O-RING - gauge	1
7	40-1213	KIT- USFLS (optional)	1
8	41-9910	*SENSOR - fuel level (ultrasonic)	1
	51-1271	**SCREW - sensor (3.5 in long)	5
	55-431	**FLATWASHER	5
	55-1511	**LOCKWASHER	5
9	33-4589	*GASKET	3
10	92-9030	*TUBE - sensor (ultrasonic)	1
11	13-1136	*SPACER	1
12	11-9926	GAUGE - fuel (twin site, electronic, optional)	1
	13-837	*DIAL - fuel gauge (electronic, optional)	1
	33-4818	*O-RING - gauge (optional)	1
13	98-8588	KIT - mounting (120 gal aluminum fuel tank)	1
14	98-8501	KIT - mounting (156 gal aluminum fuel tank)	1
15	11-9631	ANTISIPHON (optional)	1
16	13-1231	CONNECTOR - hose fitting (1/4)	1
17	10-243	KIT - sleeve & eyelet (1/4)	1
18	11-8982	CONNECTOR - fuel line (3/8)	1
19	10-242	KIT - sleeve & eyelet (3/8)	1

267F8 

**FUEL TANK (18 IN DIAMETER, 30 GALLON
ALUMINUM)**

Revised
03/10/13

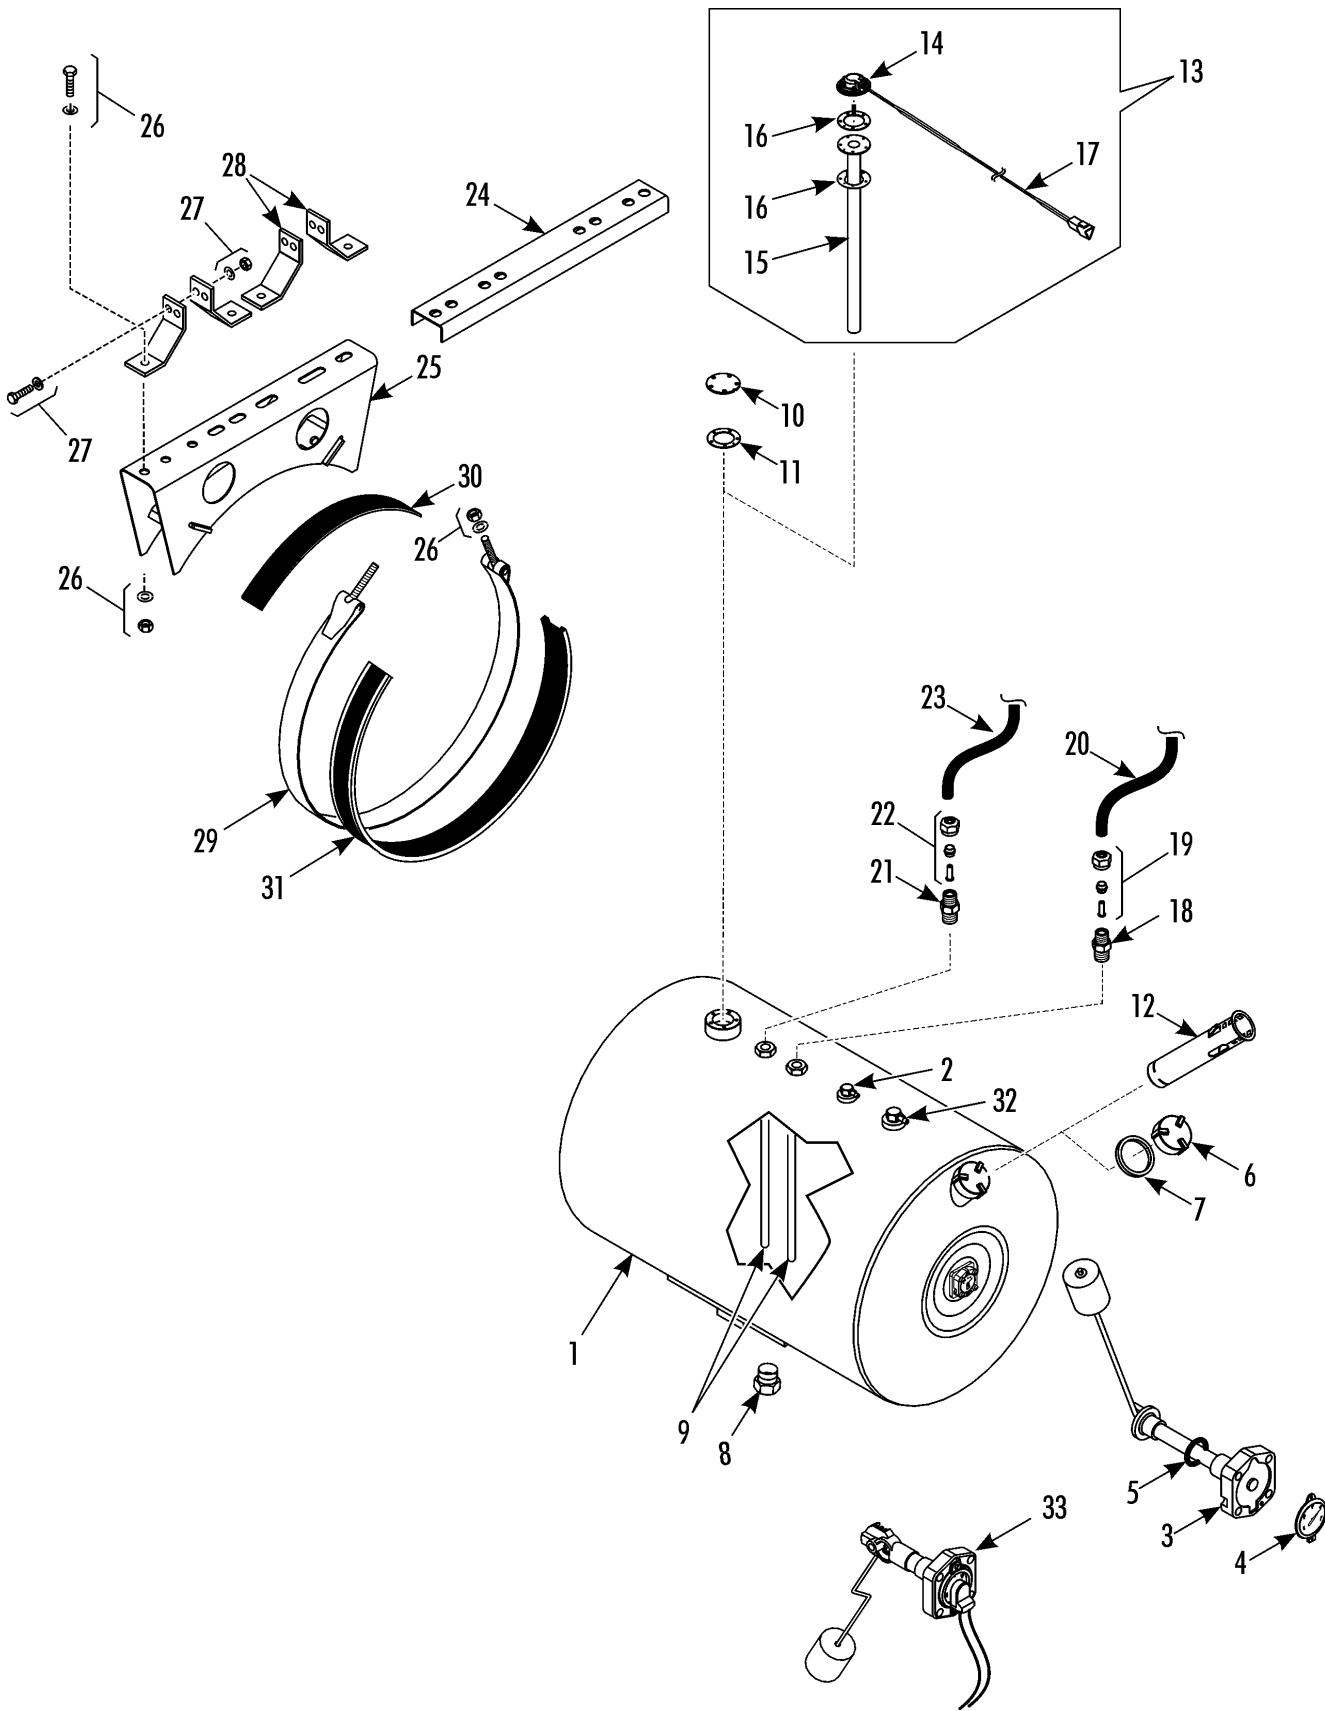

**FUEL TANK (18 IN DIAMETER, 30 GALLON
ALUMINUM)**

Revised
03/10/13




267F8

REF	PART NO.	DESCRIPTION	QTY
1	12-1008	TANK - fuel (30 gallon, ultra-sonic fuel level sensor - USFLS ready)	1
2	55-5617	*VENT	1
3	11-2593	*GAUGE - fuel (mechanical)	1
4	11-5450	**DIAL - fuel gauge	1
5	33-4818	**O-RING - fuel gauge	1
6	11-7984	*CAP - fuel	1
7	33-381	**GASKET - cap	1
8	13-1289	*DRAIN	1
9	13-1631	*TUBE - pickup	2
10	11-9741	*COVER - fuel tank	1
11	33-3878	*GASKET - cover	1
	55-736	*SCREW - cover	5
	55-1511	*FLATWASHER	5
	55-431	*LOCKWASHER	5
12	11-9631	ANTI-SIPHON	1
13	40-1127	KIT - ultrasonic fuel level sensor (18 inch tank)	1
14	41-9709	*SENSOR - fuel level (ultrasonic)	1
15	92-8941	*TUBE - sensor (ultrasonic)	1
16	33-4589	*GASKET - sensor tube	2
17	42-101	*CABLE - fuel level sensor	1
18	13-1231	CONNECTOR - hose fitting (1/4)	1
19	10-243	KIT - sleeve & eyelet (1/4)	1
	11-4841	NUT (1/4)	1
20	11-4367	HOSE (1/4 od x 35 ft lg)	1
21	11-8982	CONNECTOR - fuel line (3/8)	1
22	10-242	KIT - sleeve & eyelet (3/8)	1
	11-4941	NUT (3/8)	1
23	11-4372	HOSE (3/8 od x 35 ft lg)	1
24	98-2817	CHANNEL	2
25	98-5426	HANGER - fuel tank	2
26	55-2252	SCREW (1/2-13 x 1-1/2)	8
	55-5270	FLATWASHER (1/2)	20
	55-3686	NUT (1/2-13)	12

267F8 

**FUEL TANK (18 IN DIAMETER, 30 GALLON
ALUMINUM)**

Revised
03/10/13

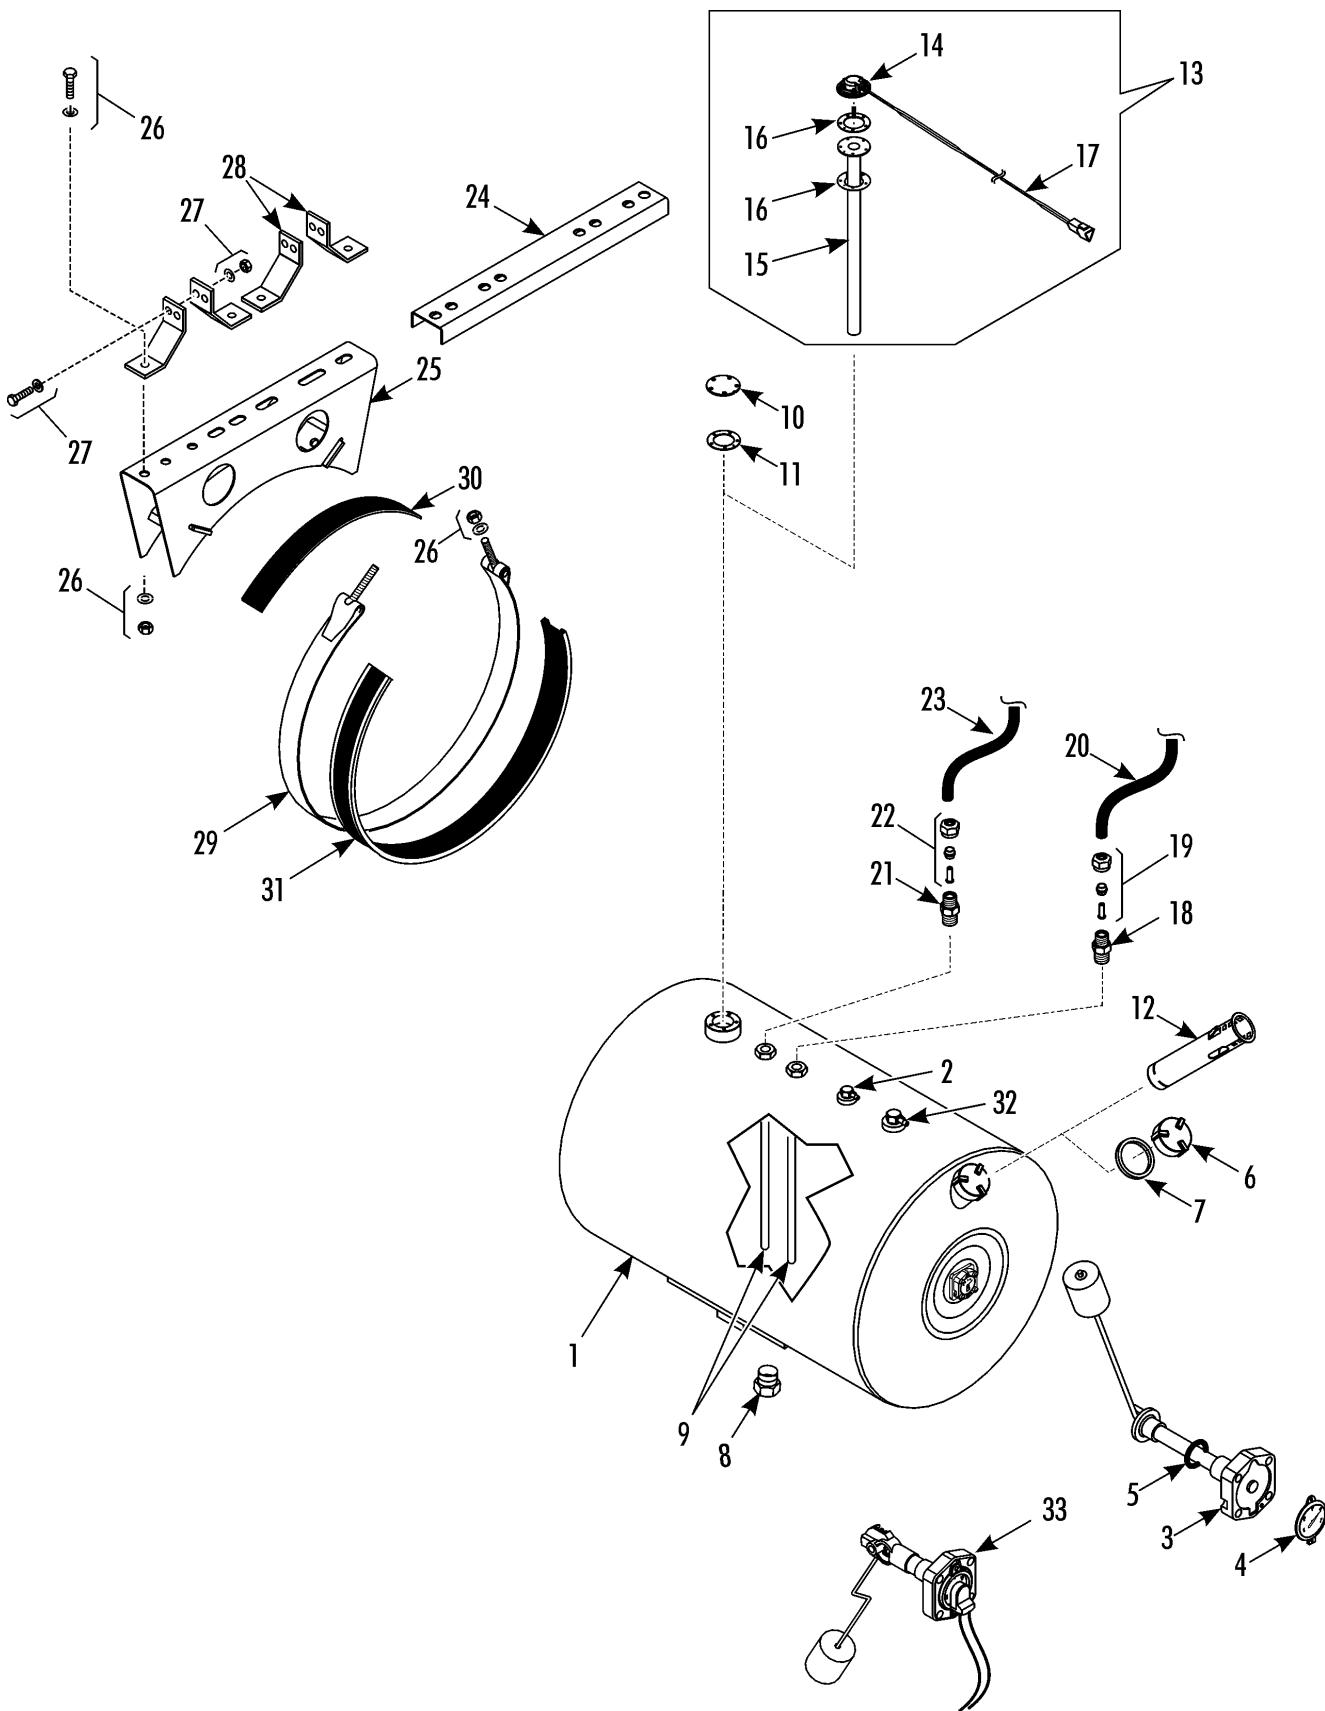


FUEL TANK (18 IN DIAMETER, 30 GALLON
ALUMINUM)



267F8

REF	PART NO.	DESCRIPTION	QTY
27	55-1469	SCREW (3/8-16 x 1-1/2)	12
	55-402	FLATWASHER (3/8)	20
	55-5078	NUT (3/8-16)	12
28	99-7832	BRACKET - hanger	8
29	98-9144	STRAP & TEE - assembly	2
30	33-4479	STRIP - chafing (4 in lg)	2
31	33-4876	STRIP - chafing (33 in lg)	2
32	55-4761	PLUG - for port tank (optional)	1
33	13-1632	GAUGE - fuel (twin site, optional)	1

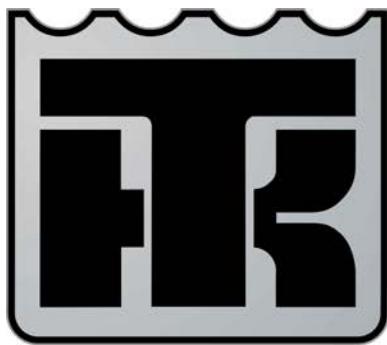

1

THERMO KING

2



3



10

S-600

4




7

S-700


5




6

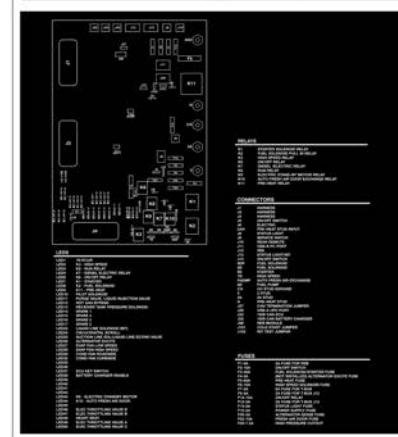

9

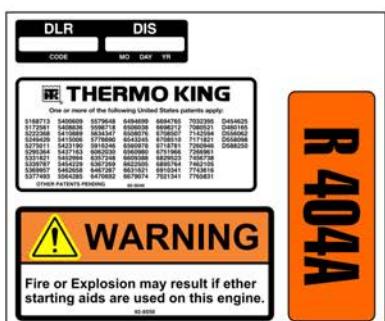

8

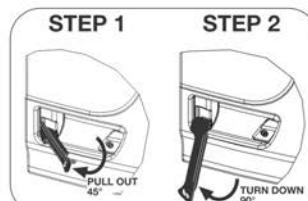

11

NAMEPLATES, S-600/S-700



261D6

REF	PART NO.	DESCRIPTION	QTY
1	93-1030	NAMEPLATE - TK Logo (standard, blue K)	1
	93-1031	NAMEPLATE - TK Logo (premium, black K)	1
2	93-314	NAMEPLATE - Thermo King (standard, black text)	1
	93-315	NAMEPLATE - Thermo King (premium, silver text)	1
3	93-800	NAMEPLATE - PRECEDENT	2
4	93-677	NAMEPLATE - S-600	1
5	93-1494	NAMEPLATE - S-700	1
6	93-434	NAMEPLATE - consolidated	1
7	93-436	NAMEPLATE - consolidated	1
8	93-1052	NAMEPLATE - consolidated	1
9	93-554	NAMEPLATE - consolidated (control box)	1
10	93-433	NAMEPLATE - consolidated	1
11	93-1183	NAMEPLATE - Door Handle (black graphics)	1
	93-1376	NAMEPLATE - Door Handle (white graphics)	1



Ingersoll Rand's Climate Solutions sector delivers energy-efficient HVACR solutions for customers globally. Its world class brands include Thermo King, the leader in transport temperature control and Trane, a provider of energy efficient heating, ventilating and air conditioning systems, building and contracting services, parts support and advanced controls for commercial buildings and homes.

Distributed by:

Thermo King Corporate

314 West 90th Street
Minneapolis, MN 55420
Direct (952) 887-2200